

## LOWERING SHACKLE

## **INSTALLATION INSTRUCTIONS**











With your truck elevated on jack stands, place a hydraulic jack under the rear axle and raise it until the weight is removed from the leaf spring. Loosen and remove the shackle bolts, and remove the stock shackle. Install your new DJM SUSPENSION lowering shackle, tighten the bolts, do not over tighten (this will cause squeaks and binding) remove the jack and jack stands. Your ready to go!!!

## WWW.DJMSUSPENSION.COM

TECH INFO (310) 538-1583 FAX (310) 538-0393