


# **RECON**



AIR COMPRESSOR
USER MANUAL

Congratulations on purchasing a quality VIAIR Bike product! The Recon Mini is your new tool to keep road, gravel and MTB tires always at the correct pressure. Please read this user manual before using your air compressor and store it for future reference.

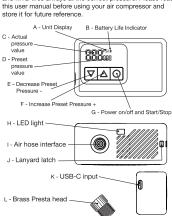


### OPERATION:

- Powering on/off: Long press the O button for 3 seconds.
- Preset Pressure: Use the \( \foldap{\sqrt{\texts}} \) buttons to select your desired inflation pressure. The compressor will stop automatically when this pressure is reached.
- Inflation: connect to the valve using the provided Presta or Schrader attachment, then press the button. The compressor will stop automatically once the preset pressure has been reached. Note: you can stop inflation at any time by oressing the button.
- LED light on/off: double click the button to operate the LED light.
- To change the pressure unit: double click the button to switch between PSI and BAR pressure unit.

#### HIGH TEMPERATURE SAFETY PRECAUTION:

 Please be careful when removing the attachments they may get very hot when the compressor runs for over 45 seconds continuously.

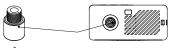

! EXTREME TEMPERATURE

## CHECKING AIR PRESSURE:

You can use your Recon Mini as a gauge to check the pressure on your tires, MTB forks, sports balls and more! Simply connect it to the valve using the appropriate attachment and the actual pressure will be displayed.



#### Your Recon Mini is equipped with 2\*500mAh


BATTERY LIFE AND CHARGING: (7.4V / 3.7wh) polymer batteries.

Battery indicator



- 3 bars: 70%-100%
- 2 bars: 30%-70% 1 bar: 5%-30%
- The unit will power off automatically when below 5%
- Charging time from 5% to 100% is 1 hour or less.
- · When fully charged, your Recon Mini has a maximum run time of 5 to 7 minutes depending on ambient temperature. The run time is reduced with warmer temperatures.

 The USB-C charging cable included can be connected to a home or vehicle outlet, or any other 12V power source.

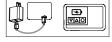

## CALIBRATION AND PRESSURE RESET:

Large variations in altitude and/or extreme temperatures may cause your Recon Mini to show a higher value than 0 PSI when not connected to an object. To reset your unit and improve pressure accuracy:

- Press and hold \[ \bigcup \] \[ \Delta \] buttons simultaneously for 3 seconds. The display will fully light up and return to normal.
- Turn the unit off, then back on.

#### HANDLING AND CARE:

- Your Recon Mini comes with a shockproof outer shell that will protect the internals in the event of a heavier fall, however it is not crush-resistant.
- Avoid exposing the compressor to heavy rain and mud, as it has vents through which water and debris can penetrate.
  - A lightly damp cloth can be used for cleaning.
     Do not submerge in water.
  - Do not leave the compressor unattended during operation.
  - Do not store the product in extreme temperature environments.
- Keep it out of children's reach.

### VIAIR BIKE SUGGESTED

## TIRE PRESSURE CHART:

Use these as a baseline, then make fine adjustments if needed, be sure to check your sidewall for max pressure!

Category	Tire size	Pressure Range
Road	25-28mm	65-80 PSI
	30-32mm	55-70 PSI
Gravel	35-40mm	35-45 PSI
	42-50mm	25-35 PSI
MTB	2.0-2.2	18-25 PSI
	2.4-2.6	12-25 PSI

#### **TROUBLESHOOTING**

Slow inflation	Category	Туре	Pressure Range
but will not inflate  The preset pressure cannot be turned up or down further  The preset pressure cannot be turned up or down further  Inflation is normal but will be pressure value displayed is 0  The pressure value displayed is 0  The pressure value will only show after several seconds. Some low pressure inems such as balloons  2- Some low pressure inems such as balloons on second to the hose the quageous Air leakage when connected to the hose Battery color indicator during inflation is lower than on standby state Power indicator does not appear after connecting to charger  Slow screen speed  After powering on, the screen still needs 3 seconds, this is a normal pain of the seconds.		Check tire valve for leaks     Check the connecting parts on both ends of the air valve for tightness	
cannot be turned up or down further Inflation is normal but the pressure value with pressure value value displayed is 0  Air leading with the pressure value with the value of the pressure value with the pressure value with the pressure value with the pressure value with the value of the value		2- Check whether the actual pressure value is	
the pressure value displayed is 0 2-Some low pressure liters such as balloons are not within the measurable range of the gauge.  Air leakage when 1-1-Check and tighten the hose at the tire valve connected to 2-Check and tighten the air hose interface the hose of the connected to 2-Check and tighten the air hose interface (twist clockwise until it clicks)  Battery color indicator during interface is over than on standby state. There is a voltage drop in the discharge process of the battery, which leads to an inconsistency inflation is lower than on standby state. The adapter used might not be compatible with close not appear after connecting to charger.  Flower indicator does not appear after connecting to charger.  Flower indicator the input voltage of the compressor.  The adapter used might not be compatible with the input voltage of the compressor.  The adapter used might not be compatible with the input voltage of the compressor.  After powering on, the screen still needs 3 seconds, this is a normal part of the	cannot be turned up or down further		
connected to  the hose  2- Check and tighten the air hose interface  (twist clockwise until it clicks)  surprise  There is a voltage drop in the discharge process  indicator during  inflation is lower that  Power indicator  does not appear  after connecting to  charger  Flower indicator  does not appear  does not appear  does not appear  the input voltage of the compressor.  The adapter used might not be compatible with  the input voltage of the compressor.  The adapter used might not be compatible with  the input voltage of the compressor.  After powering on, the screen still needs 3  seconds, this is a normal part of the  seconds, this is a normal part of the	the pressure value	will only show after several seconds.  2- Some low pressure items such as balloons are not within the measurable range of the gauge.	
indicator during initiation is lower than on standiby state  Power indicator does not appear after connecting to charger  Slow screen speed  After powering on, the screen still needs 3 seconds, this is a normal part of the	connected to	2- Check and tighten the air hose interface	
does not appear after connecting to charger to charger Connecting to charger Thousand Control of the Control of	indicator during inflation is lower than		
does not appear after connecting to charger Slow screen speed After powering on, the screen still needs 3 seconds, this is a normal part of the	does not appear after connecting to		
seconds, this is a normal part of the	does not appear after connecting to charger		
	Slow screen speed	seconds, this is a normal part of the	

#### FOR WARRANTY INFORMATION GO TO:



https://viaircorp.com/pages/warranty

#### TO REGISTER YOUR PRODUCT GO TO:



https://viaircorp.com/pages/warranty-registration

## VIAIR CORPORATION 15 EDELMAN • IRVINE, CA 92618

TEL: (949) 585-0011 • FAX: (949) 585-0188

www.viaircorp.com











CAUTION: This device is equipped with a built in battery that cannot be removed. Do not disassemble by yourself. Do not expose batteries or battery packs to sunlight, fire or extreme ambient heat environments