



Prior to installation, remove the retaining ring from the boot in order to remove the dust boot.



The clip can stay here now remove the dust boot to expose your press surface



The green ring represent the surface you will press against, DO NOT press where you see red here



This cup size is common in ball joint press tool sets (rent one if you need to)



Confirm the inner and outer diameter of the cup



This is how it will sit on the outer edge of the bevel.



Slide the boot back onto the housing. Then, walk the clip back into the groove.



Please note: Not all trucks will use the snap ring. The press fit is secure

 FOLLOW US  
@kryptoniteproducts

**KRYPTONITEPRODUCTS**.COM