

HONDA 2019-21 TALON Door Filler

Thank you for choosing Rough Country for all your vehicle needs.

Please read instructions before beginning installation. Check the kit hardware against the kit contents shown below. Be sure you have all needed parts and know where they go.

If question exist, please call us @1-800-222-7023. We will be happy to answer any questions concerning this product.

Check all fasteners for proper torque. Check to ensure for adequate clearance between all components.

Periodically check all hardware for tightness.

KIT CONTENTS:

Driver Side Door Filler x1
Pass Side Door Filler x1
Edge Trim x1

TOOLS NEEDED:

Philips Head Driver
4MM Allen Wrench
10mm Wrench or Socket

HARDWARE INCLUDED:

6mm x 20mm Button Head Allen x10
6mm Flat Head Washers x20
6mm Nylock Nuts x10



Torque Specs:

Size	Grade 5	Grade 8	Size	Class 8.8	Class 10.9
5/16"	15 ft/lbs	20ft/lbs	6MM	5ft/lbs	9ft/lbs
3/8"	30 ft/lbs	35ft/lbs	8MM	18ft/lbs	23ft/lbs
7/16"	45 ft/lbs	60ft/lbs	10MM	32ft/lbs	45ft/lbs
1/2"	65 ft/lbs	90ft/lbs	12MM	55ft/lbs	75ft/lbs
9/16"	95 ft/lbs	130ft/lbs	14MM	85ft/lbs	120ft/lbs
5/8"	135ft/lbs	175ft/lbs	16MM	130ft/lbs	165ft/lbs
3/4"	185ft/lbs	280ft/lbs	18MM	170ft/lbs	240ft/lbs




INSTALLATION INSTRUCTIONS


1. Remove the (4) bolts from the door panel using a Philips head driver. **See Photos 1.** Retain hardware.
2. Remove the outer door panel from the inner structure of the UTV. **See Photo 2.**



3. Locate the dimples in the inner structure of the door. **See Photo 3.**
4. Use a 1/4" bit to drill the center of the dimples using a drill motor. Drill (5) total holes in the panel. **See Photo 4.**

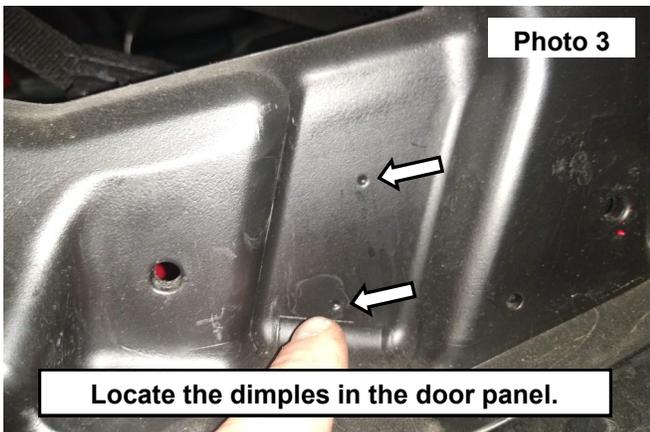

5. Apply the seal onto the bottom of the door filler. **See Photo 5.** Trim if needed.
6. Place the door filler onto the bottom of the door and secure using (5) 6mm x 20mm Button Head allen bolts (10) 6mm flat washers and (5) 6mm nylock nuts. **See Photo 6.**

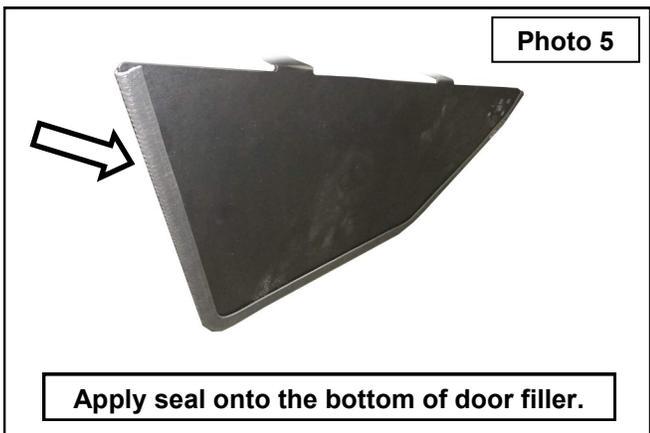

7. Tighten the door filler using a 4mm allen wrench and a 10mm socket. **See Photos 7 and 8.**



- 8. Install the outer door of the UTV using the OE hardware to secure the panel. **See Photo 9.**
- 9. Repeat this process on the opposite side of the UTV.





By purchasing any item sold by Rough Country, LLC, the buyer expressly warrants that he/she is in compliance with all applicable, State, and Local laws and regulations regarding the purchase, ownership, and use of the item. It shall be the buyers responsibility to comply with all Federal, State and Local laws governing the sales of any items listed, illustrated or sold. The buyer expressly agrees to indemnify and hold harmless Rough Country, LLC for all claims resulting directly or indirectly from the purchase, ownership, or use of the items.

