


START HERE The ZROADZ Series Grilles comes into 2 different configurations. One style features the LED Light Bar mounting hidden on the backside, while the other style has exposed mounting provisions on the face side of the grille. Please note this and identify your ZROADZ Grille Series configuration and follow the instruction version that corresponds with your grille.


GRILLE CONFIGURATION STYLE 1



STEP 1 Lay out your parts. From the backside of the grille, put into place the ZROADZ Logo Backing Plate.

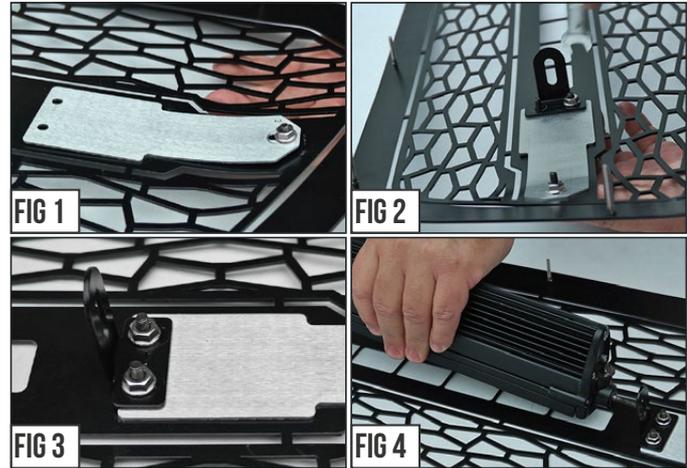


STEP 2 Put into place one of the Bracket Tabs and secure with provided Hardware as seen in Fig. # 2-4 and then from the backside of grille position LED Light Bar.

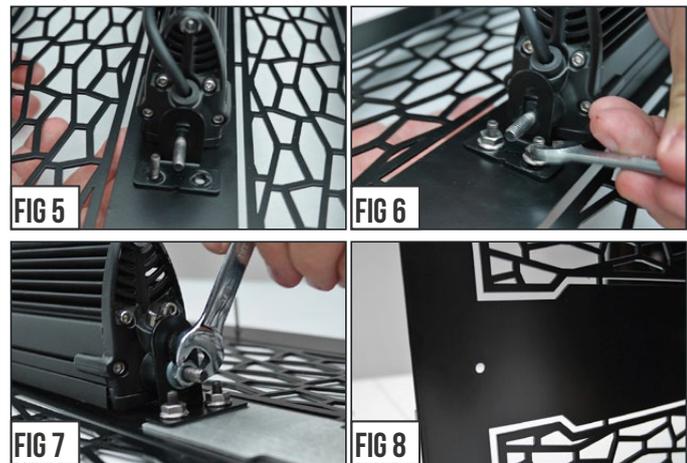


STEP 3 With LED Light placement set, put into position the remaining bracket and the finally tighten LED and all Mounting Brackets into their final secured position.


GRILLE CONFIGURATION STYLE 2

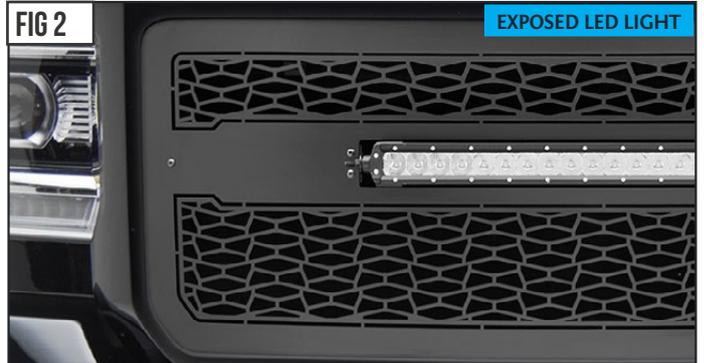

STEP 1 Lay out your parts. From the backside of the grille, put into place the ZROADZ Logo Backing Plate.

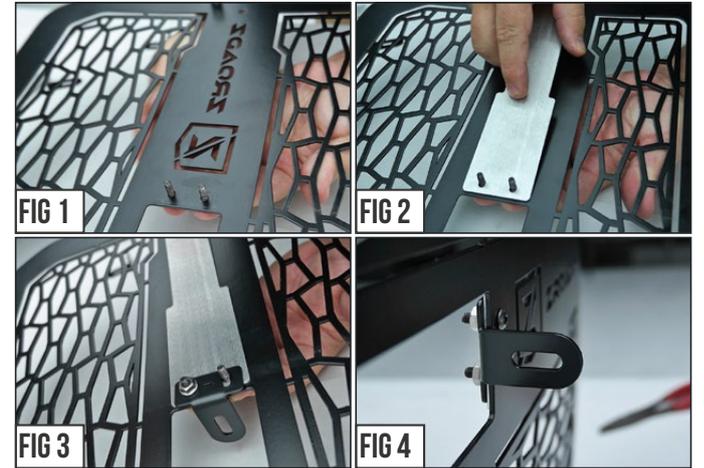

STEP 2 Put into place one of the Bracket Tabs and secure with provided Hardware as seen in Fig. # 1-4.

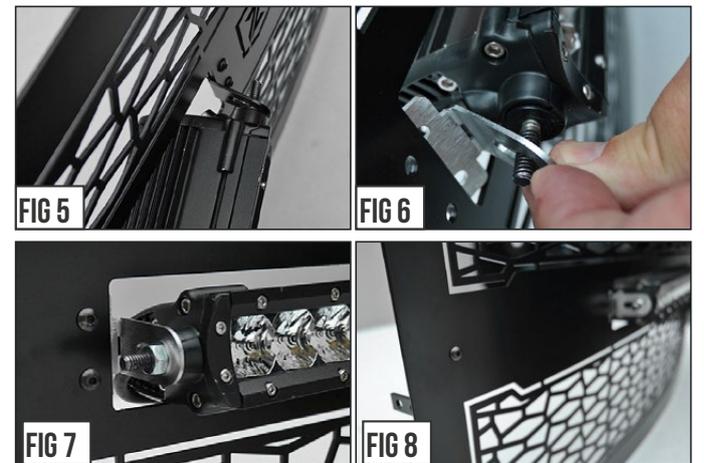

STEP 3 From the face side of grille slip the LED Light bar into place. On the opposite side, position the remaining bracket and finally tighten LED and Brackets into position.

STEP 4 There is a final step for both styles of ZROADZ Grilles. See both of the Figure #8 Images and note that there is an exposed hole. Use the Provided Hardware Button Head Screw and fill the hole and tightened down with Nut. This will create symmetrical look from side to side.

Z314581



Z314581

2013-2014 DODGE RAM 1500

2013-2014 DODGE RAM 1500

2013 DODGE RAM 1500 ZROADZ Series Grille

TOOLS REQUIRED:

- Screwdriver
- Flat Screwdriver
- Diegrinder

PARTS LIST:

- (1) Mesh Grille
- (10) L-Brackets
- (10) 6/32 Nylon Lock Nuts

Install time: 45 Mins.

For off-road use only

PLEASE READ AND UNDERSTAND ALL INSTRUCTIONS BEFORE ATTEMPTING INSTALLATION.

- Remove Clips to Remove the Plastic Cover. (Fig. 1)
- Remove the Grille Shell.
- Remove the Plastic Grille Support. (Fig. 2)
- Unclip the Plastic Grille Covers with a Flat Screwdriver. (Fig. 3)
- Unclip the Grilles from the Grille Shell and Remove. (Fig. 4)
- With a Diegrinder, Start Cutting the Center and Vertical Bars on the Grille Shell as close to the Outer Grille Shell as possible. (Fig. 5)
- Place the Mesh Grille onto the Grille Shell and Place an L-Bracket and Nylon Lock Nut onto the Threaded Studs. (Fig. 6)

INSTALLATION COMPLETE

