


POLARIS 2013-20 Ranger Cargo Bed Box

Thank you for choosing Rough Country for all your vehicle needs.

Please read instructions before beginning installation. Check the kit hardware against the kit contents shown below. Be sure you have all needed parts and know where they go.


If question exist, please call us @1-800-222-7023. We will be happy to answer any questions concerning this product. Check all fasteners for proper torque. Check to ensure for adequate clearance between all components. Periodically check all hardware for tightness.

KIT CONTENTS:
 Cargo Bed Box x1
 Combination Lock x1

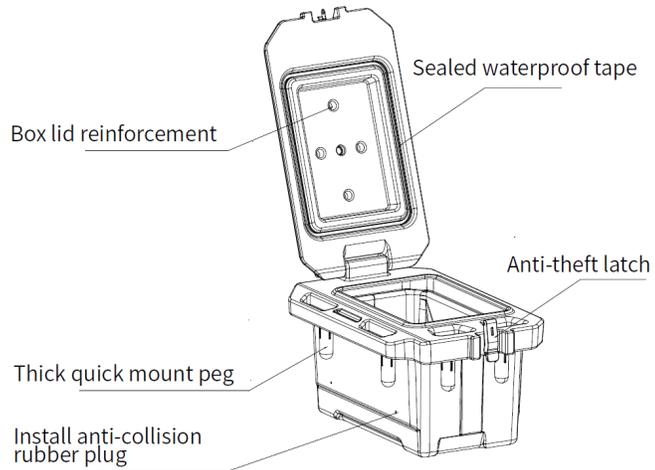

INSTALLATION INSTRUCTONS

1. Install Cargo Box in the front driver side corner by inserting the quick mount pegs in cargo bed walls. **See Photo 1.**
2. The factory combination preset for the lock is set to 0-0-0-0. Follow **Step 1 - 4** for lock set up.

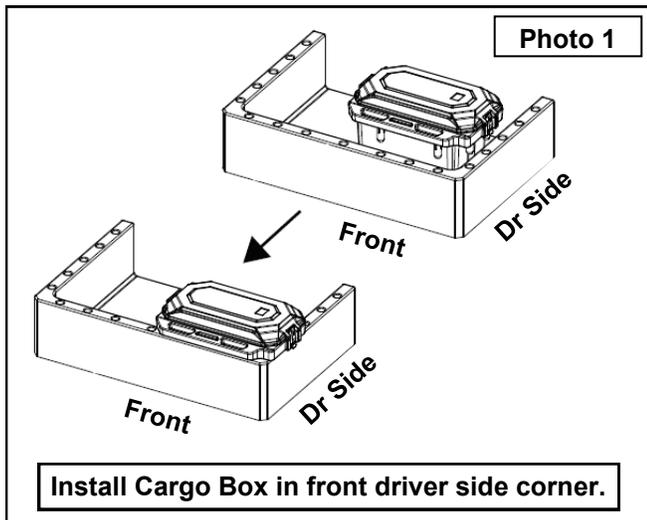


Step 1: Leave dials at 0-0-0-0 and pull out shackle. (Fig.1)

Step 2: Turn 90° counter clockwise and press down. (Fig.2)

Step 3: Firmly depress shackle until it can be rotated counter-clockwise again, then set your own combination. (Fig.3, Fig.4)

Step 4: Lift and return shackle to the closed position. dials to lock.

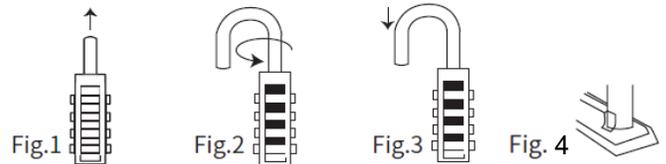

By purchasing any item sold by Rough Country, LLC, the buyer expressly warrants that he/she is in compliance with all applicable, State, and Local laws and regulations regarding the purchase, ownership, and use of the item. It shall be the buyers responsibility to comply with all Federal, State and Local laws governing the sales of any items listed, illustrated or sold. The buyer expressly agrees to indemnify and hold harmless Rough Country, LLC for all claims resulting directly or indirectly from the purchase, ownership, or use of the items.



