

Thank you for choosing Rough Country for all your vehicle needs.

Please read instructions before beginning installation. Check the kit hardware against the kit contents shown below. Be sure you have all needed parts and know where they go.

If question exist, please call us @1-800-222-7023. We will be happy to answer any questions concerning this product.

KIT CONTENTS: 1-Driver Side Bracket 1-Pass Side Bracket 4-Spacers Tools Needed: 4mm Allen Wrench T40 Torx Bit Hardware Included: 4– 6MM X 50MM Bolts

INSTALLATION INSTRUCTONS

- 1. Remove the factory hardware using a T40 Torx as shown in **Photo 1**.
- 2. Place the supplied spacers in the stock location as shown in Photo 2.






- 3. Install the drivers side light bracket on the spacers, using the 6mm x 50mm bolt. See Photo 3.
- 4. Use a 4mm Allen wrench to tighten. See Photo 4.







- 5. Repeat steps 1-4 on the passengers side.
- 6. Install the 50 inch light bar, using the hardware provided in the light kit. See Photo 5.
- 7. Tighten hardware on bolt sides of the light, using the Allen wrench provided in the kit. See Photo 6.

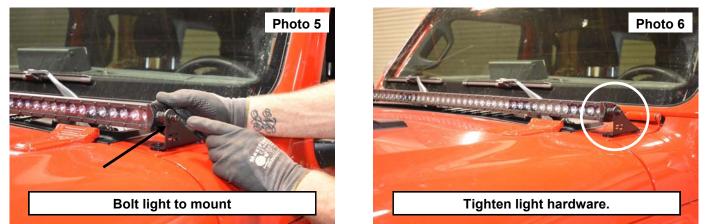

8. At this time follow the instructions supplied with the light to wire the light to the vehicle.



By purchasing any item sold by Rough Country, LLC, the buyer expressly warrants that he/she is in compliance with all applicable, State, and Local laws and regulations regarding the purchase, ownership, and use of the item. It shall be

the buyers responsibility to comply with all Federal, State and Local laws governing the sales of any items listed, illustrated or sold. The buyer expressly agrees to indemnify and hold harmless Rough Country, LLC for all claims resulting directly or indirectly from the purchase, ownership, or use of the items.

