

ROUGH COUNTRY

SUSPENSION SYSTEMS®

TOYOTA 2007-21 Tundra Rear Air Spring Kit

Thank you for choosing Rough Country for all your vehicle needs.

Please read instructions before beginning installation. Check the kit hardware against the kit contents shown below. Be sure you have all needed parts and know where they go.

If question exist, please call us @1-800-222-7023. We will be happy to answer any questions concerning this product.

Check all fasteners for proper torque. Check to ensure for adequate clearance between all components.

Periodically check all hardware for tightness.

Kit Contents:

- Air Springs x2
- Dr Side Upper Bracket x1
- Pass Side Upper Bracket x1
- Dr Side Lower Bracket x1
- Pass Side Lower Bracket x1
- Straight Fittings x2
- Inflation Valves x2
- 1/4" Air line x20ft

Tools Needed:

- 7/32" Allen Wrench
- 9/16" Socket/Wrench
- 13/16" Socket/Wrench

Hardware Included:

- 3/8" x 3/4" Flat Head Bolts x4
- 3/8" x 1" Hex Bolts x4
- 3/8" x 3-7/8" x 6-1/4" U-Bolts x4
- 3/8" Flat Washers x4
- 3/8" Lock Washers x4
- 3/8" Flange Lock Nuts x8
- 7/16" x 3-1/8" x 3-1/4" U-Bolts x4
- 7/16" Lock Nuts x8
- 7/16" Flat Washers x8
- Zip Ties x6




Torque Specs:

Size	Grade 5	Grade 8	Size	Class 8.8	Class 10.9
5/16"	15 ft/lbs	20ft/lbs	6MM	5ft/lbs	9ft/lbs
3/8"	30 ft/lbs	35ft/lbs	8MM	18ft/lbs	23ft/lbs
7/16"	45 ft/lbs	60ft/lbs	10MM	32ft/lbs	45ft/lbs
1/2"	65 ft/lbs	90ft/lbs	12MM	55ft/lbs	75ft/lbs
9/16"	95 ft/lbs	130ft/lbs	14MM	85ft/lbs	120ft/lbs
5/8"	135ft/lbs	175ft/lbs	16MM	130ft/lbs	165ft/lbs
3/4"	185ft/lbs	280ft/lbs	18MM	170ft/lbs	240ft/lbs





INSTALLATION INSTRUCTIONS


1. Jack up the rear of the vehicle and place on jack stands.
2. Cut the bump stop flush with the leaf-spring U-bolts. **See Photo 1.**
3. Apply thread tape to the straight fitting and install the straight fitting and upper air spring mount with the supplied 3/8" flat head bolts using a 7/32" Allen wrench. **See Photo 2.**

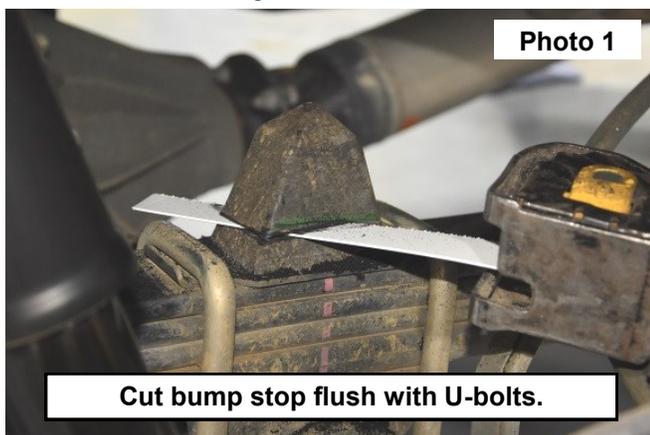

4. Install the long U-bolts over the frame and install the upper bracket to the U-bolts with the supplied 3/8" lock nuts using a 9/16" socket/wrench. **See Photo 3.**
5. Install the lower bracket to the air spring with the supplied 3/8" x 1" hex bolts, lock washers, and flat washers using a 9/16" socket/wrench. **See Photo 4.**

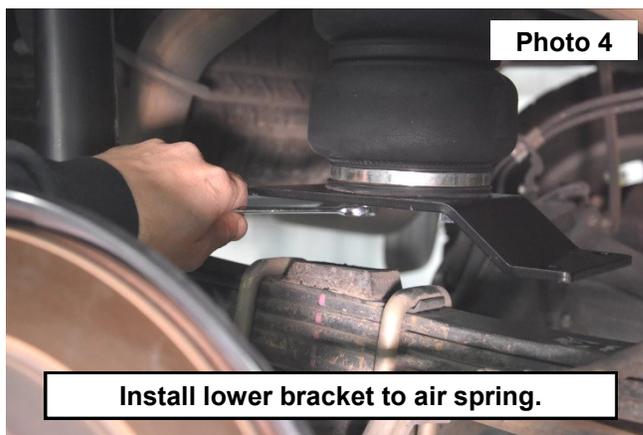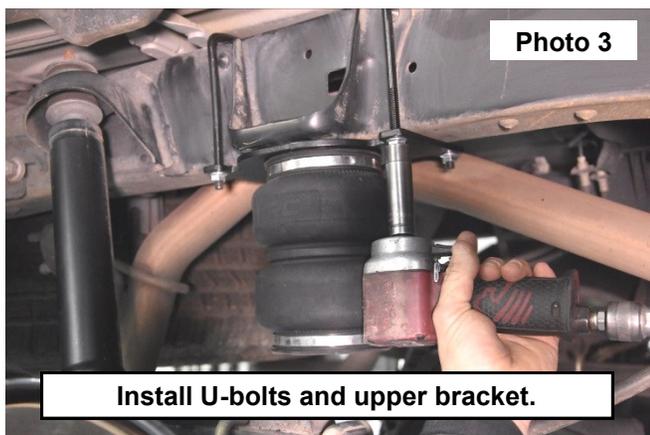


6. Install the short U-bolts under the leaf springs and secure them to the lower mount of the air spring with the supplied 7/16" lock nuts and flat washers using a 13/16" socket/wrench. **See Photo 5.**
7. Remove the license plate bolts. **See Photo 6.**

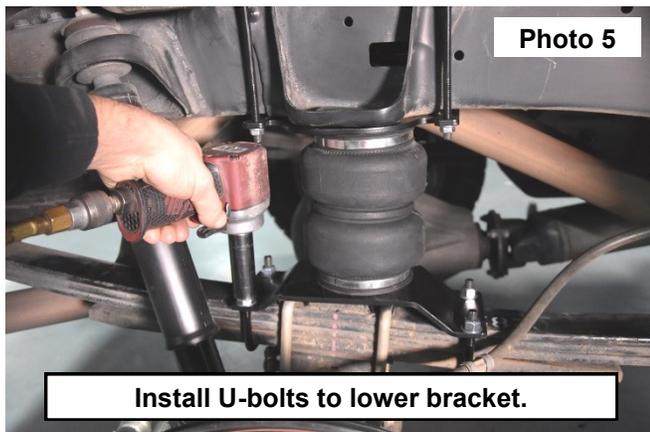

8. Drill out the license plate mounting hole in the vehicle and plate using a 5/16" drill bit. See Photo 7 and Photo 8.



9. Insert the air line into the inflation valve and install the inflation valve through the license plate mounting hole using a 12mm socket/wrench. See Photo 9 and Photo 10.

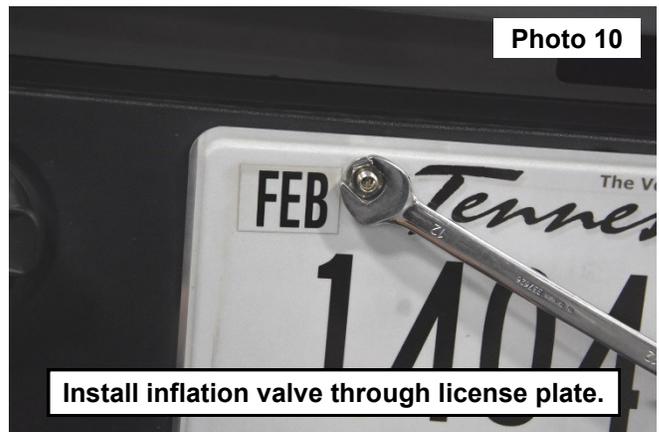

10. Install the other end of the air line to the straight fitting in the top of the air spring.
11. Use zip ties to secure air line out of harms way.
12. Put on wheels and lower.

By purchasing any item sold by Rough Country, LLC, the buyer expressly warrants that he/she is in compliance with all applicable, State, and Local laws and regulations regarding the purchase, ownership, and use of the item. It shall be the buyers responsibility to comply with all Federal, State and Local laws governing the sales of any items listed, illustrated or sold. The buyer expressly agrees to indemnify and hold harmless Rough Country, LLC for all claims resulting directly or indirectly from the purchase, ownership, or use of the items.

