

## POLARIS RZR XP Tubular Rear Cargo Rack

Thank you for choosing Rough Country for all your vehicle needs.

Please read instructions before beginning installation. Check the kit hardware against the kit contents shown below. Be sure you have all needed parts and know where they go.

If question exist, please call us @1-800-222-7023. We will be happy to answer any questions concerning this product.

Check all fasteners for proper torque. Check to ensure for adequate clearance between all components.

Periodically check all hardware for tightness.

### KIT CONTENTS:

Dr Side Rack x1  
Pass Side Rack x1  
Basket x1  
Rear Door x1  
Front Brackets (2 Door Model) x2  
Front Brackets (4 Door Model) x2  
Rear Brackets x2  
Mounting Spacers x2  
Lock Clamp x1  
Lock and Key x1  
Bracket for spare tire x1

### TOOLS NEEDED:

5mm Allen Wrench (Included)  
15mm Socket/Wrench  
16mm Socket/Wrench  
18mm Socket/Wrench

### HARDWARE INCLUDED:

8mm Lock Washers x4  
8mm x 24mm Flat Washers x4  
8mm x 16mm Flat Washers x4  
8mm x 20mm Button Head Bolts x4  
8mm x 25mm Bolts x4  
8mm Hex Nuts x4  
10mm Lock Washers x16  
10mm Flat Washers x34  
10mm Lock Nuts x14  
10mm Hex Nuts x4  
10mm x 25mm Bolts x4  
10mm x 30mm Bolts x8  
10mm x 60mm Bolts x12  
10mm x 70mm Bolts x4  
10mm Flat Washers x16  
10mm Pin Rolls x2  
12mm Flat Washers x2  
12mm x 40mm Bolts x2  
12mm Flat Washers x2  
12mm Hub Nuts x2  
Copper Bushings x4



### Torque Specs:

Size	Grade 5	Grade 8	Size	Class 8.8	Class 10.9
5/16"	15 ft/lbs	20ft/lbs	6MM	5ft/lbs	9ft/lbs
3/8"	30 ft/lbs	35ft/lbs	8MM	18ft/lbs	23ft/lbs
7/16"	45 ft/lbs	60ft/lbs	10MM	32ft/lbs	45ft/lbs
1/2"	65 ft/lbs	90ft/lbs	12MM	55ft/lbs	75ft/lbs
9/16"	95 ft/lbs	130ft/lbs	14MM	85ft/lbs	120ft/lbs
5/8"	135ft/lbs	175ft/lbs	16MM	130ft/lbs	165ft/lbs
3/4"	185ft/lbs	280ft/lbs	18MM	170ft/lbs	240ft/lbs





## INSTALLATION INSTRUCTIONS


1. Remove the bolts from the lower cage behind the doors using two 15mm sockets/wrenches. **See Photo 1.**
2. Place the Dr and Pass side racks on the side of the bed and secure using the stock hardware with the mounting spacer between the cage and side racks. **See Photo 2** and **Photo 3.**

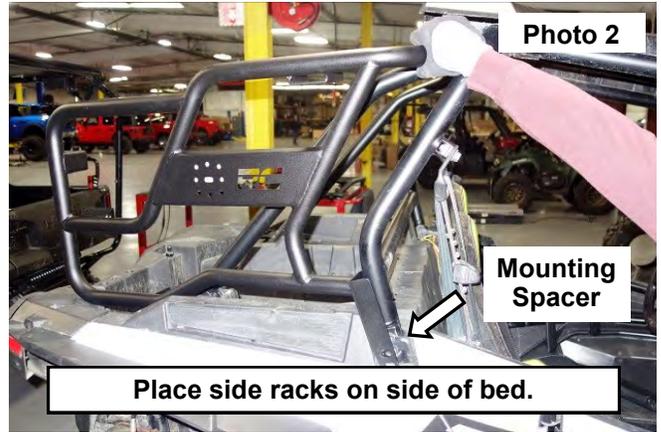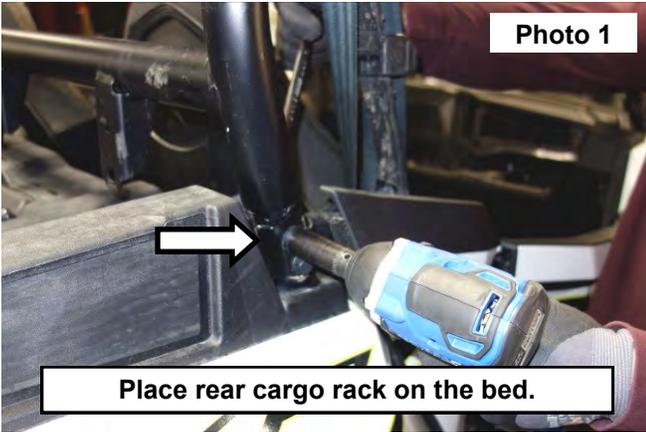

3. Remove the bolts from the lower rear cage using a 15mm socket/wrench. **See Photo 4.**

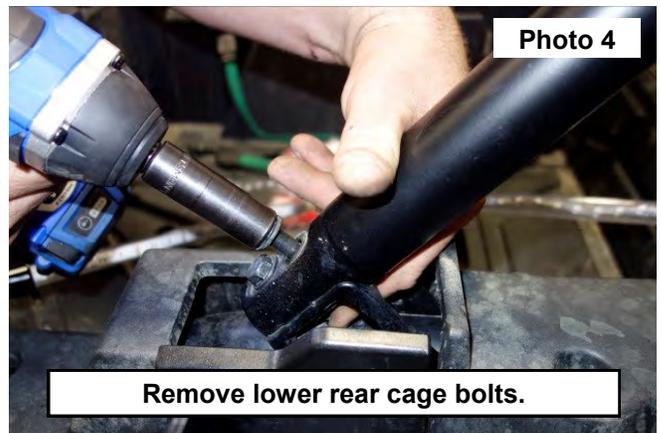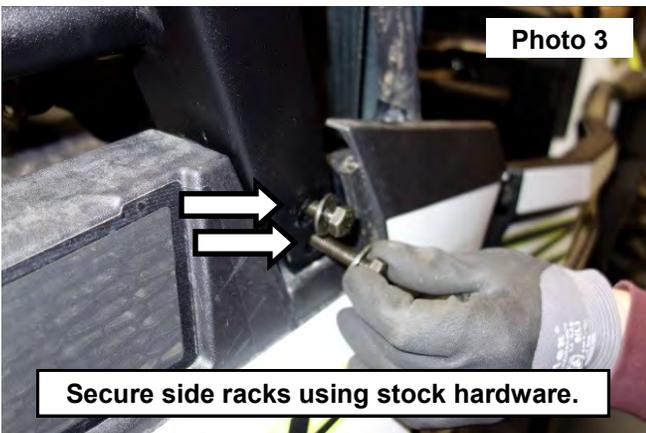


4. Install the rear bracket between the rear cage and the side rack using stock hardware on the cage and supplied 10mm hardware on the rack. **See Photo 5** and **Photo 6.**

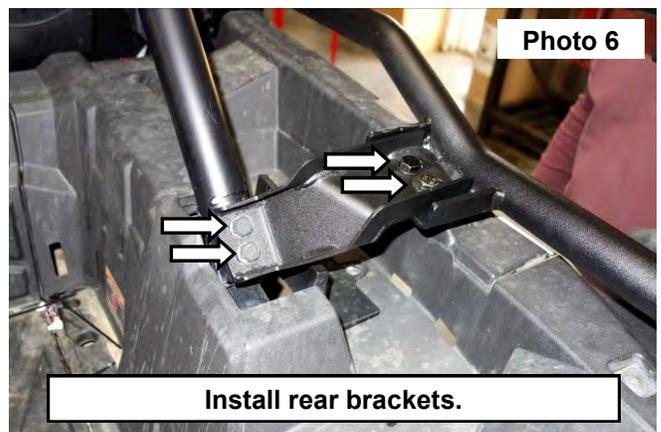



5. After installing both side pieces of the cargo rack, place the top of the rack on the side pieces. **See Photo 7.**
6. Secure the top rack to the sides using the supplied 10mm hardware. **See Photo 8.**




7. Align the top front bracket with the top of the side pieces and install bracket using supplied 10mm hardware. **See Photo 9 and Photo 10.**

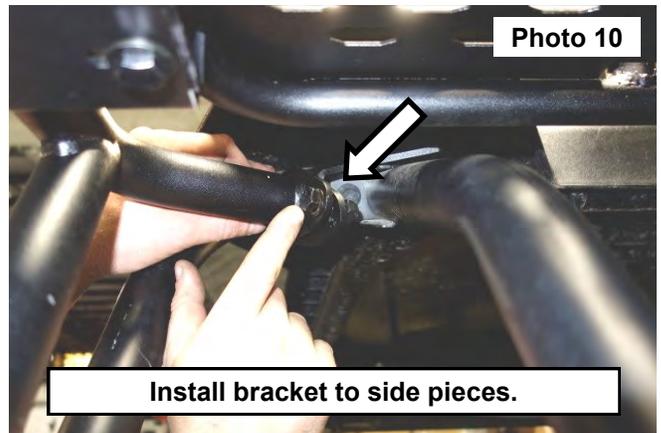

8. Install the bracket to the top of the cage using the supplied 8mm button head bolts. **See Photo 11 and Photo 12.**

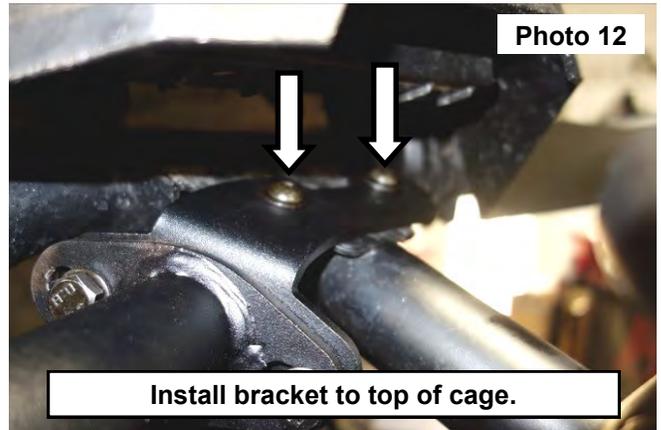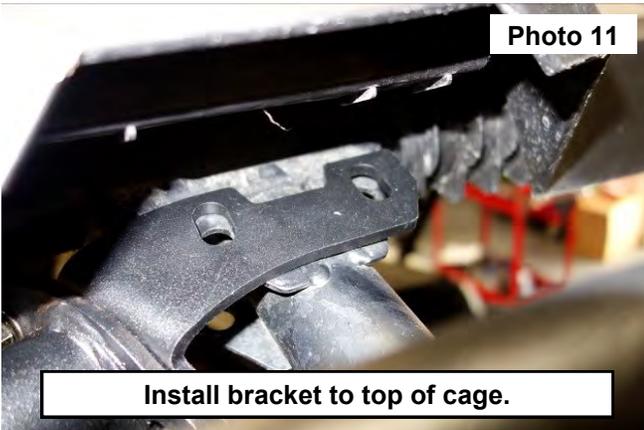


9. Place the gate on the back of the bed. **See Photo 13.**
10. Lift the gate onto the hinges on Dr side of the UTV and install the supplied pin rolls and copper bushings. **See Photo 14 and Photo 15.**

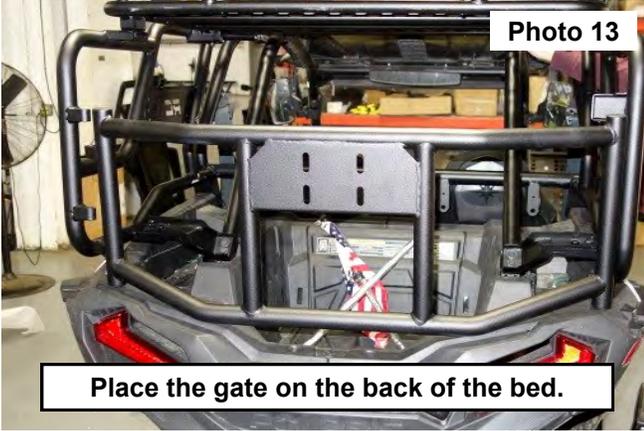

11. Install the latch to the Pass side of the UTV using the supplied 8mm. **See Photo 16.**



12. Install the spare tire carrier to the rear door using the supplied 12mm hardware if desired. **See Photo 17.**

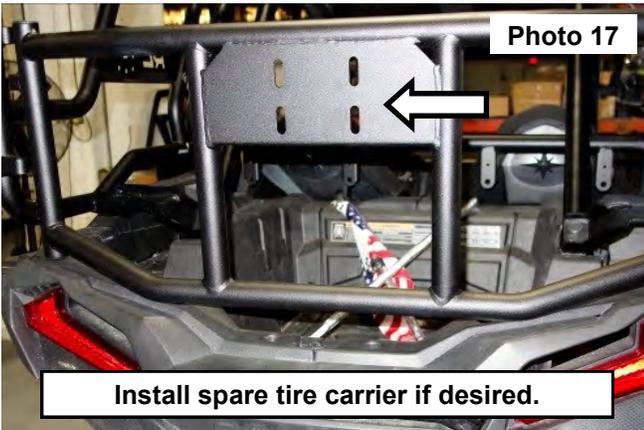

By purchasing any item sold by Rough Country, LLC, the buyer expressly warrants that he/she is in compliance with all applicable, State, and Local laws and regulations regarding the purchase, ownership, and use of the item. It shall be the buyers responsibility to comply with all Federal, State and Local laws governing the sales of any items listed, illustrated or sold. The buyer expressly agrees to indemnify and hold harmless Rough Country, LLC for all claims resulting directly or indirectly from the purchase, ownership, or use of the items.

