

Traxda 605064 605065 Ram air bag spacer installation

Do this safely. Use jack stands, don't take on work beyond your abilities. Reading the instructions first is recommended.




To put the spacer in you have to air down the system.

Take out the fuses for compressor



To air the system down, disconnect lines at Passenger side underneath cab.

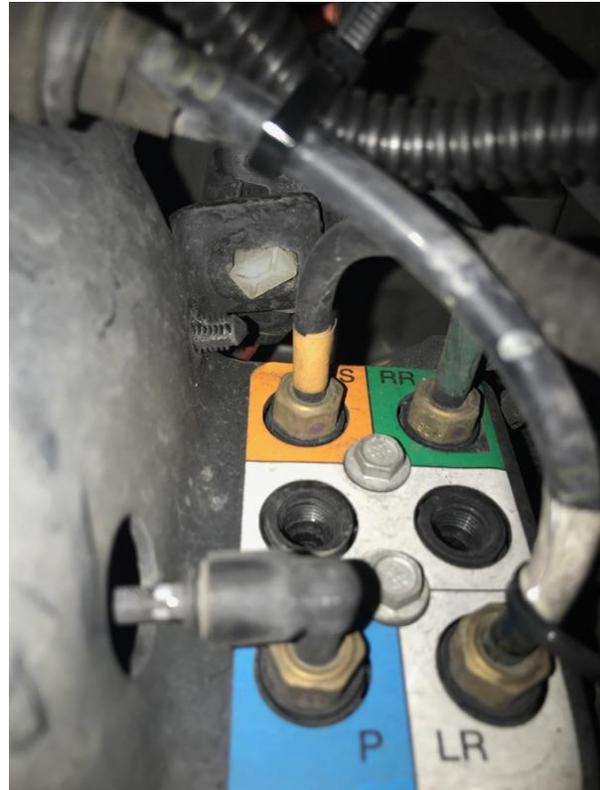

WARNING! Make certain the bracket holding the lines to the diff are disconnected or you'll break the brake and air lines.



Drop the axle remove the 2 bolts from the bags, lift the airbags



Remove Hex bolt from bottom of air bag to remove lower plate.



Install Traxda part with supplied 12mmx30x1.75 bolt and use lock washer and plain washer.

Use locktite



Attach Traxda part to differential with supplied 8mm bolts and nut



Reattach bracket to differential



Put the truck down and start it up.

Some vehicles may be in "Jack Mode" which can be turned off by the menu on the dashboard screen, or by driving the vehicle 500 ft over 15 mph