


Passenger Side

Driver Side

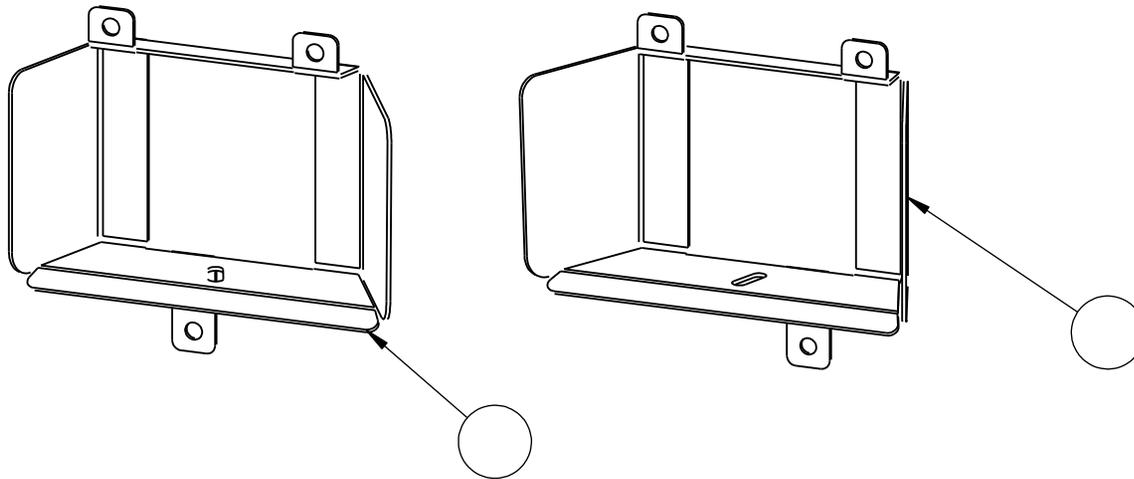

ITEM NO.	PART NUMBER	QTY.
1	44-7553 OEM Ford F-150 XL Fog Pocket Bracket DS	1
2	44-7552 OEM Ford F-150 XL Fog Pocket Bracket PS	1

## 44-7554 F-150 XL Fog Pocket Kit

Tools Needed: 5/16 & 1/2 inch sockets; 5/16, 9/16 (2) and 7/16 inch wrenches

### Instructions:

1. First disconnect the fog light and take out the two lower 1/2" socket bolts on the outer edge of the fog light. This will allow you to remove the stock fog light and housing.
2. Remove the four 5/16" bolts holding the fog light and remove it from the vehicle. Save three of the bolts as they will be used for securing the new fog light bracket.
3. Place the new supplied bracket where the stock bracket was and use three of the stock bolts to fasten it in place. Note: Installing the top outer bolt is in a confined area but can be done or removing the black box is an option but more time consuming.
4. Once those three bolts are tight, pivot the brace back into place and reinstall the two 1/2" bolts.
5. Then install the hardware on your Squadron XL lights and install the lights into the truck by inserting the light through the front of the fog pocket.
6. Next, use the plug and play wiring adapter supplied with the kit to plug the lights into the stock wiring harness and tie up the wiring using the zip ties provided.
7. Repeat on opposite side and adjust lights to suit your driving needs.

# BUILD SHEET

## 44-7554 F-150 XL Fog Pocket Kit

<p><input type="checkbox"/> 44-7553 OEM Ford F-150 XL Fog Pocket DS (x1)</p> <p><input type="checkbox"/> 44-7552 OEM Ford F-150 XL Fog Pocket PS (x1)</p>	<p><input type="checkbox"/> Misc. Hardware</p>  <p><input type="checkbox"/> 20-1612 Hardware, Zip-tie 50lb 8"</p>
 <p><input type="checkbox"/> 60-0018 Connector, Universal 9005/9006/H10 to 3 pin Wea Pac (x2)</p>	

Checked By \_\_\_\_\_

