

20458 20458B

2013 DODGE
RAM 1500



20458 20458B

2013 DODGE
RAM 1500

2013 DODGE RAM 1500

Billet Grille

Install time: 45 Mins.

TOOLS REQUIRED:

Screwdriver
Flat Screwdriver
Diegrinder
3/16 Drillbit and Drill





PARTS LIST:

(1) Billet Grille (8) L-Brackets (1"5/16 x 1/2)
(12) #8 1" Screws (2) Left L-Bracket Extensions
(12) #8 Six Head Screws (2) Right L-Bracket Extension
(24) Flatnuts



PLEASE READ AND UNDERSTAND ALL INSTRUCTIONS BEFORE ATTEMPTING INSTALLATION.

- Remove Clips to Remove the Plastic Cover. (Fig. 1)
- Remove the Grille Shell.
- Remove the Plastic Grille Support. (Fig. 2)
- Unclip the Plastic Grille Covers with a Flat Screwdriver. (Fig. 3)
- Unclip the Grilles from the Grille Shell and Remove. (Fig. 4)
- With a Diegrinder, Start Cutting the Center and Vertical Bars on the Grille Shell as close to the Outer Grille Shell as possible. (Fig. 5)
- On the Corner Tabs on Top of the Grille Shell, There is a small tab on the long Tab, Cut that Small Tab Off. (Fig. 6)
- With the 3/16 Drill, Place the L-Brackets onto the Tabs around the Grille Shell and Drill through the Hole. (Fig. 7)
- Place the #10 Screw Through the Hole you Drilled and Place a Flatnut Behind. (Fig. 8)

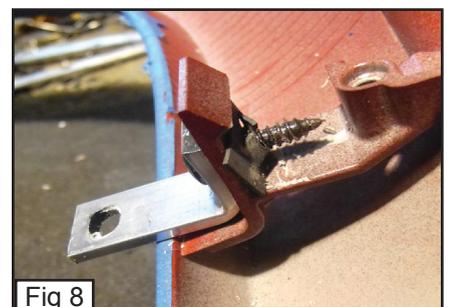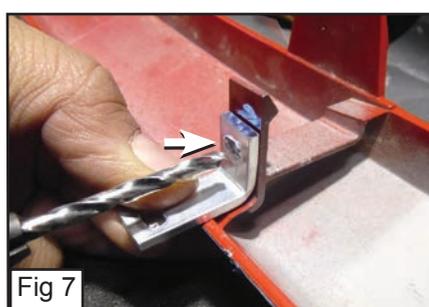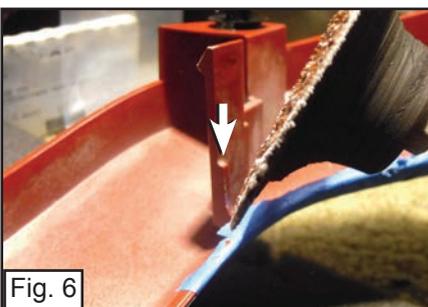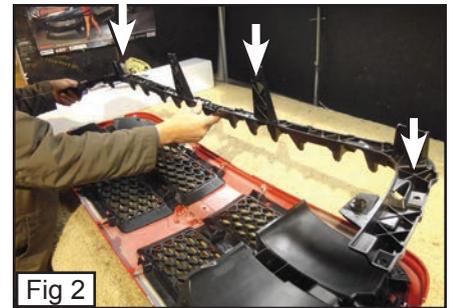

20458
2013 DODGE
RAM 1500



20458
2013 DODGE
RAM 1500

2013 DODGE RAM 1500

Billet Grille

Install time: 45 Mins.

- Place the L-Bracket Extensions onto the Top Corner Tabs and Middle Tabs on the Grille Shell and Drill Through the Holes. (Fig 9 & 10)
- Place the Billet Grille onto the Grille Shell. (Fig. 11)
- Place the #8 Screw onto the Brackets that are on the Billet Grille. (Fig. 12)
- From behind the Grille, Place Flatnuts onto the #8 Screws. (Fig. 13)

INSTALLATION COMPLETE

