

2015-2019 Chevy Colorado/GMC Canyon Fog Pocket Light Kit Installation Instructions

44-7582, 44-7711, 44-7712, 44-7615, 44-7715

+



2950 Norman Strasse Rd • San Marcos • CA • 92069

Phone 760-560-2252 • Fax 760-560-0383

info@bajadesigns.com • www.bajadesigns.com

LIMITED LIFETIME WARRANTY

Baja Designs proudly offers a LIMITED LIFETIME WARRANTY against manufacturer's defect on all of the products that we manufacture.

These are comprehensive warranties; other than the exclusions below – you're covered. If your LED or HID bulb burns out, you're covered. Additionally, cutting off our connector or changing your lenses does not automatically void your warranty.

Exclusions:

Installation errors, abuse, misuse or crash damage. You must be the original owner of the product and be able to supply proof of purchase.

Baja Designs manufactures its own products as well as resells products manufactured by others. Baja Designs makes no express or implied warranties on products not manufactured by Baja Designs including without limitation any warranties or merchantability and fitness for a particular purpose. We will however, pass on all warranties made by the manufacturer, who has sole responsibility for performing such warranties.

Baja Designs will pay the freight if your product is less than 90 days old, otherwise defective products must be returned to Baja Designs, Inc., freight prepaid. At our option, we will repair or replace items in question and return them at no charge. If the identical product is no longer available we will replace with a similar product of equal value. Baja Designs Inc. will not be responsible for any indirect or consequential damages in connection with defective merchandise.

Items purchased through a Baja Designs authorized dealer must be returned through the dealer. Only available on LED auxiliary lights and product must be in sellable condition at MSRP. Product that has been damaged in any way after the original purchase date will be excluded from this guarantee.

Indemnification:

Buyer hereby acknowledges off-roading, racing and driving at night are dangerous activities and that the products and/or supplies purchased from Baja Designs are used in an inherently dangerous activity that may endanger life and limb; and in no event shall the seller, or seller's heirs and assigns, be held liable for consequential damages, nor shall seller's liability on any claim for damages arising out of or connected with the sale, delivery, or use of purchased products and/or supplies exceed the purchase price of the products and/or supplies.

- 1.) Remove the inner fender bolts on driver and passenger sides to expose the factory fog lights which are to be removed *Figure 1*.

Note: If equipped, it may be necessary to remove the fender flares and front bumper fascia as well.



Figure 1

- 2.) After removal of the factory fog lights, the Squadron light, light bracket and fog pocket bracket are assembled as shown in *Figure 2*.

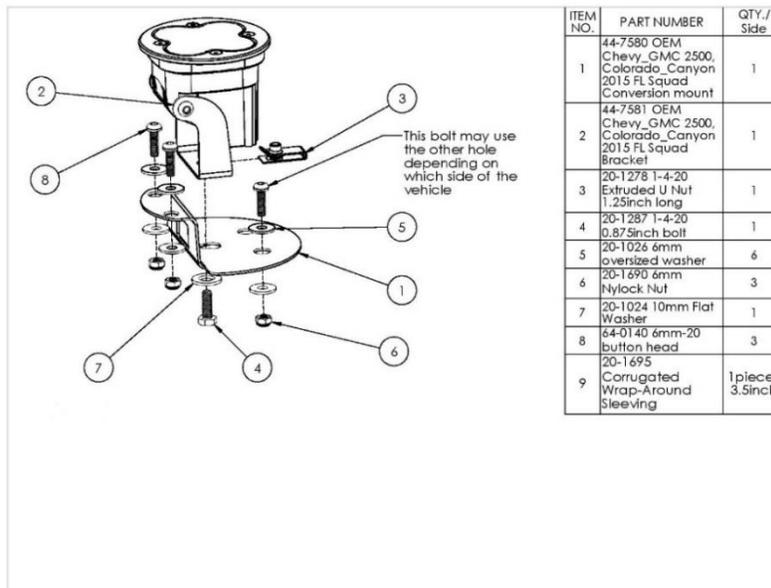


Figure 2

- 3.) The light and bracket assemblies are now installed and plugged into the factory wire harness on the driver and passenger sides of the truck *Figure 3*.



Figure 3

- 4.) Zip tie wiring away from sharp edges or moving objects.
- 5.) Reassemble the truck in the reverse order of disassembly.

Note: Use only the hardware included with the light and kit. Kits are designed to work specifically and are for use with only Baja Designs lights.