

POLARIS 2021 RZR Turbo S Winch Mount

Thank you for choosing Rough Country for all your vehicle needs.

Please read instructions before beginning installation. Check the kit hardware against the kit contents shown below. Be sure you have all needed parts and know where they go.

If question exist, please call us @1-800-222-7023. We will be happy to answer any questions concerning this product. Check all fasteners for proper torque. Check to ensure for adequate clearance between all components. Periodically check all hardware for tightness.

KIT CONTENTS:

- Bottom Winch Mount x1
- Top Winch Mount x1
- Top Winch Mount Flag Nut x1

TOOLS NEEDED:

- 5mm Allen Wrench
- 13mm Socket/Wrench
- 15mm Socket/Wrench
- 16mm Socket/Wrench

HARDWARE INCLUDED:

- 10mm x 25mm Bolts x2
- 10mm Lock Nuts x1
- 8mm x 25mm Button Head Bolts x6
- 8mm Serrated Flange Nuts x6
- 3/8" x 1-1/4" Bolts x2
- 3/8" Flat Washers x5



Torque Specs:

Size	Grade 5	Grade 8	Size	Class 8.8	Class 10.9
5/16"	15 ft/lbs	20ft/lbs	6MM	5ft/lbs	9ft/lbs
3/8"	30 ft/lbs	35ft/lbs	8MM	18ft/lbs	23ft/lbs
7/16"	45 ft/lbs	60ft/lbs	10MM	32ft/lbs	45ft/lbs
1/2"	65 ft/lbs	90ft/lbs	12MM	55ft/lbs	75ft/lbs
9/16"	95 ft/lbs	130ft/lbs	14MM	85ft/lbs	120ft/lbs
5/8"	135ft/lbs	175ft/lbs	16MM	130ft/lbs	165ft/lbs
3/4"	185ft/lbs	280ft/lbs	18MM	170ft/lbs	240ft/lbs




INSTALLATION INSTRUCTIONS


1. Remove the front grille by pressing in the thumb tabs, remove the bumper using a T30 Torx bit and remove the tow hook bolts using a 15mm socket/wrench. **See Photo 1.**




2. Install the flag nut under the grille with supplied washer and 10mm lock nut using a 16mm socket/wrench. **See Photo 2 and Photo 3.**

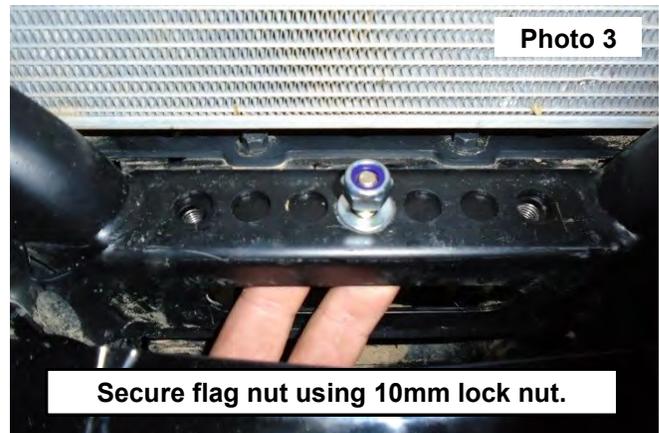

3. Install the winch to the bottom mount plate using the hardware supplied with the winch and install the bottom winch mount to the frame using the stock bolts and flag nut. **See Photo 4 and Photo 5.**

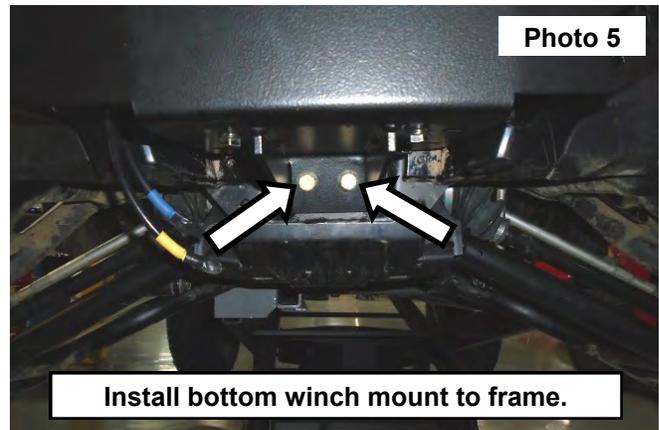

4. Install the top winch mount to the flag nut you installed in **Step 2** with the supplied washers and 10mm x 25mm bolts using a 16mm socket/wrench. **See Photo 6 and Photo 7.**

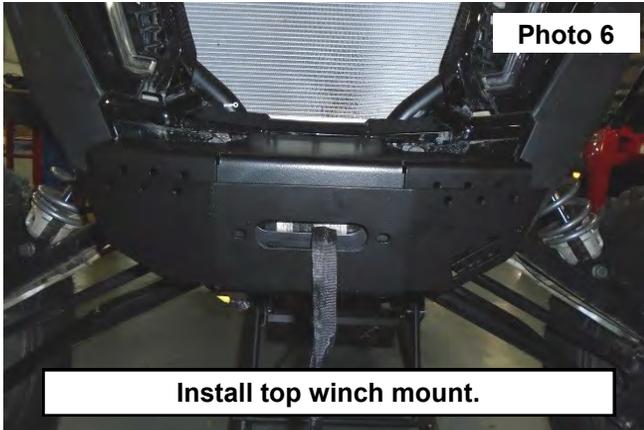

5. Install the hawse fairlead using the hardware supplied with the winch. **See Photo 7.**
6. Install the 8mm x 25mm button head bolts and flange nuts in the 6 holes along the front of the winch mount using a 5mm Allen wrench and 13mm wrench. **See Photo 8.**



7. Connect the winch to the UTV power source.

By purchasing any item sold by Rough Country, LLC, the buyer expressly warrants that he/she is in compliance with all applicable, State, and Local laws and regulations regarding the purchase, ownership, and use of the item. It shall be the buyers responsibility to comply with all Federal, State and Local laws governing the sales of any items listed, illustrated or sold. The buyer expressly agrees to indemnify and hold harmless Rough Country, LLC for all claims resulting directly or indirectly from the purchase, ownership, or use of the items.

