



bajadesigns[®]
The Scientists of Lighting

Polaris Pro XP (20-On) S1 Headlight kit 44-7156, 44-7157



185 Bosstick Boulevard • San Marcos • CA • 92069

Phone 760-560-2252 • Fax 760-560-0383

info@bajadesigns.com • www.bajadesigns.com



baja designs[®]
The Scientists of Lighting

LIMITED LIFETIME WARRANTY

Baja Designs proudly offers a LIFETIME WARRANTY against manufacturer's defect on all the products that we manufacture.

These are comprehensive warranties; other than the exclusions below – you're covered. If your LED or HID bulb burns out, you're covered. Additionally, cutting off our connector or changing your lenses does not automatically void your warranty.

Exclusions:

Installation errors, abuse, misuse or crash damage. You must be the original owner of the product and can supply proof of purchase.

Baja Designs manufactures its own products as well as resells products manufactured by others. Baja Designs makes no express or implied warranties on products not manufactured by Baja Designs including without limitation any warranties or merchantability and fitness for a purpose. We will, however, pass on all warranties made by the manufacturer, who has sole responsibility for performing such warranties.

Baja Designs will pay the freight if your product is less than 90 days old, otherwise defective products must be returned to Baja Designs, Inc., freight prepaid. At our option, we will repair or replace items in question and return them at no charge. If the identical product is no longer available, we will replace with a similar product of equal value. Baja Designs Inc. will not be responsible for any indirect or consequential damages in connection with defective merchandise.

Items purchased through a Baja Designs authorized dealer must be returned through the dealer. Only available on LED auxiliary lights and product must be in sellable condition at MSRP. Product that has been damaged in any way after the original purchase date will be excluded from this guarantee.

Indemnification:


Buyer hereby acknowledges off-roading, racing and driving at night are dangerous activities and that the products and/or supplies purchased from Baja Designs are used in an inherently dangerous activity that may endanger life and limb; and in no event shall the seller, or seller's heirs and assigns, be held liable for consequential damages, nor shall seller's liability on any claim for damages arising out of or connected with the sale, delivery, or use of purchased products and/or supplies exceed the purchase price of the products and/or supplies

Polaris Pro XP S1 Headlight Kit

Tools Required

- 7/16" wrench
- 7/16" Socket wrench
- 3mm Allen wrench
- Flathead Screwdriver.
- T40 Torx bit
- 7mm Socket wrench
- T25 Torx bit

1. With the T40 Torx bit remove the bolts in the two upper circled locations. Remove the hood and then remove the third circled bolt.

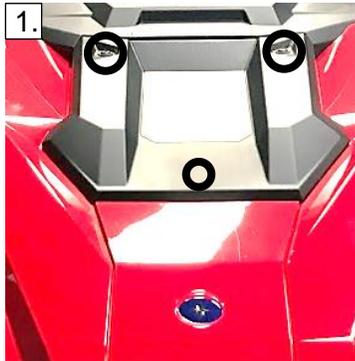


2. Unclip the front cover/camera and carefully rotate counterclockwise and let it hang over the grill. **Do not pull on the wires!** Remove circled bolts with the T40 Torx bit. Unclip the arrowed plastic fastener with the flathead screwdriver. Remove the Passenger side T40 and plastic fastener.



3. Release and remove the grille by pulling the two circled tabs downward.



4. Remove the T40 Torx bolts on fender in the circled locations shown.

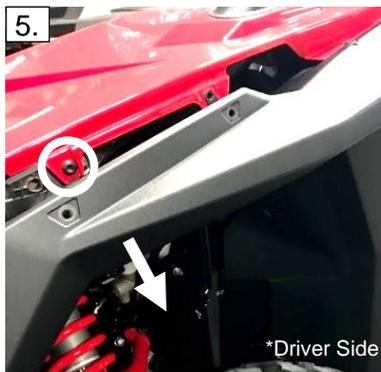


5. Carefully pull the fender down to expose the circled T40 Torx bolt. Remove.




6. With the T25 Torx bit, reach through the grille to remove the inner headlight mounting bolt. **Use care not to damage radiator fins.**


7. Carefully lift the fender to access behind the headlight (arrow). Remove the headlight wiring harness connector. Remove two circled T25 bolts.

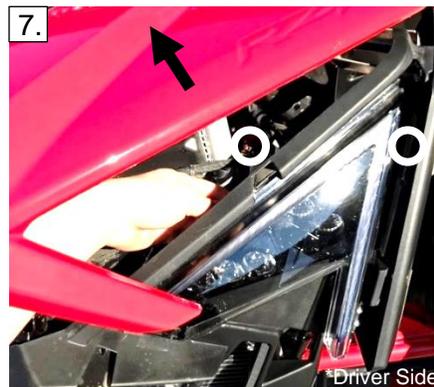


8. To release the headlight, pull the headlight frame outward and headlight upward. Masking tape can be used on the face of the headlight to prevent scratches.

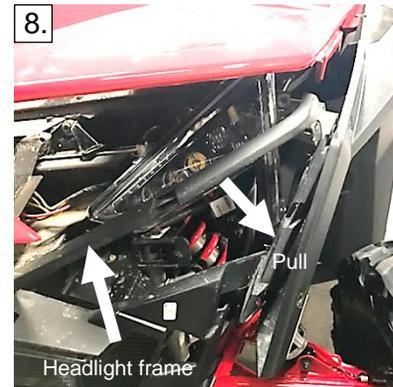


9. Using the 3mm Allen wrench, mount the S1 lights to the standard S1 brackets with the provided hardware (S1 brackets are oriented backwards). With the bracket slightly loose, place it through the headlight bracket and thread the 1/4" hardware together with the 7/16" wrench and socket. Tighten the 5mm S1 bracket bolts with the 3mm Allen wrench. Place the light to the desired depth and tighten with 7/16" wrench and socket.

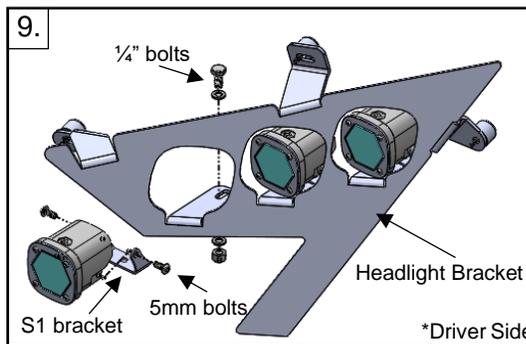

10. Carefully lift fender and pull headlight frame out of the way and install headlight assembly as shown. OEM headlight mount springs will not be used.


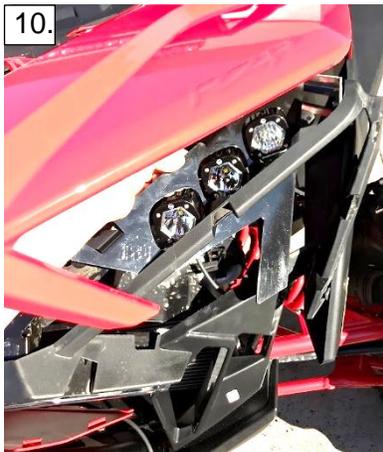


11. With the OEM T25 Torx bolts and the provided washers and bushings, attach the headlight assembly to the headlight frame. (Note: Bushings go behind the bracket, not inbetween bracket and mount).

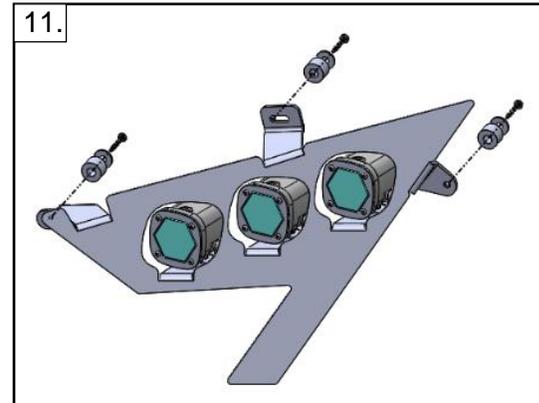

12. Replace all the T40 fasteners in reverse order for steps 5, 4, and 2.

13. With the provided 15A fuse, replace the fuse in the location labelled "lights" in the secondary fuse panel near the operator's right knee area. Connect the driver side harness adapter (no sticker) to each S1 light and the OEM connector. Repeat for the passenger side. Connector A is for the center-most light, B is for the middle light, and C is for the outer light.

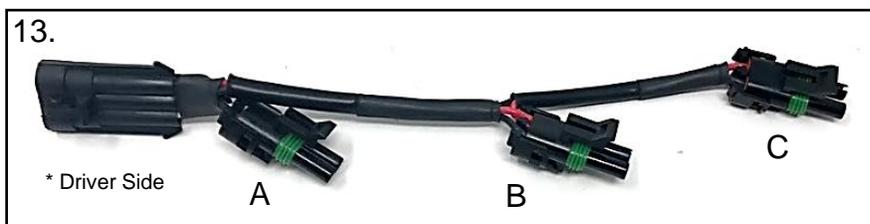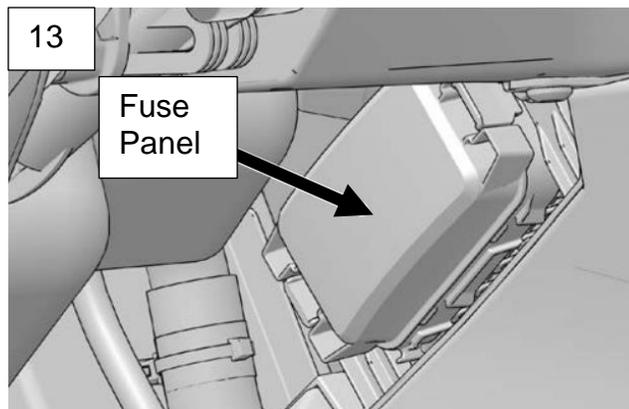

14. Repeat steps 2-13 for the opposite side headlight.

15. Perform step 1 in reverse order.

Re-torque all the fasteners after 100 miles.

Your install is now complete! Thank you for choosing Baja Designs.