



baja designs[®]
THE SCIENTISTS OF LIGHTING

Ford Bronco Sport, Dual S1/S2 Reverse kit instructions



185 Bosstick Boulevard • San Marcos • CA • 92069

Phone 760-560-2252 X3 • Fax 760-560-0383



baja designs[®]
THE SCIENTISTS OF LIGHTING

info@bajadesigns.com • www.bajadesigns.com

LIMITED LIFETIME WARRANTY

Baja Designs proudly offers a LIFETIME WARRANTY against manufacturer's defect on all the products that we manufacture.

These are comprehensive warranties; other than the exclusions below – you're covered. If your LED or HID bulb burns out, you're covered. Additionally, cutting off our connector or changing your lenses does not automatically void your warranty.

Exclusions:

Installation errors, abuse, misuse or crash damage. You must be the original owner of the product and can supply proof of purchase.

Baja Designs manufactures its own products as well as resells products manufactured by others. Baja Designs makes no express or implied warranties on products not manufactured by Baja Designs including without limitation any warranties or merchantability and fitness for a purpose. We will, however, pass on all warranties made by the manufacturer, who has sole responsibility for performing such warranties.

Baja Designs will pay the freight if your product is less than 90 days old, otherwise defective products must be returned to Baja Designs, Inc., freight prepaid. At our option, we will repair or replace items in question and return them at no charge. If the identical product is no longer available, we will replace with a similar product of equal value. Baja Designs Inc. will not be responsible for any indirect or consequential damages in connection with defective merchandise.

Items purchased through a Baja Designs authorized dealer must be returned through the dealer. Only available on LED auxiliary lights and product must be in sellable condition at MSRP. Product that has been damaged in any way after the original purchase date will be excluded from this guarantee.

Indemnification:

Buyer hereby acknowledges off-roading, racing and driving at night are dangerous activities and that the products and/or supplies purchased from Baja Designs are used in an inherently dangerous activity that may endanger life and limb; and in no event shall the seller, or seller's heirs and assigns, be held liable for consequential damages, nor shall seller's liability on any claim for damages arising out of or connected with the sale, delivery, or use of purchased products and/or supplies exceed the purchase price of the products and/or supplies

Ford Bronco Sport S2/S1 Reverse Light Kit Instructions


Tools Required:

- 10mm Socket and extension
- Flat head and Trim tool
- **S2:**
- 9/16" Wrench and Socket
- **S1:**
- 7/16" Wrench and Socket
- 3/4" Step drill (Required)
- 4mm Allen Wrench
- 3mm Allen Wrench


1. Locate the hole through the receiver hitch.
(above the receiver pin holes and closer to the bumper)



2. Assemble the two L-brackets onto either side of the receiver hitch using the provided hardware.

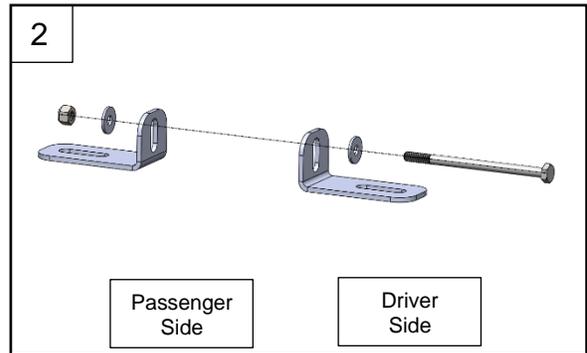


3. Place the mounting hardware into the standard light brackets before mounting to the lights. Assemble each Squadron (or S1) to their standard bracket using the 4mm Allen wrench (or 3mm Allen wrench). Mount the assemblies to the L-brackets with the 9/16" (or 7/16") wrench and socket.

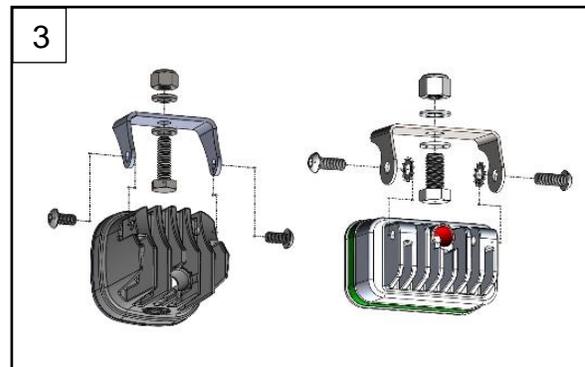

4. Attach the small splitter harness to the power cords and route the wires behind the plastic bumper on the driver side. (Make sure to tie the harness away from the muffler near the towing electrical connector). Attach the extension harness and route it over the lower driver side control arm. Take the main harness light lead and route it from the inside the engine compartment, down the driver side firewall, and connect it to the extension harness.



5. Attach harness leads to each power cords and route along the upper firewall. Use the provided wire ties to fasten the harness to the plastic inner wiper cowl.

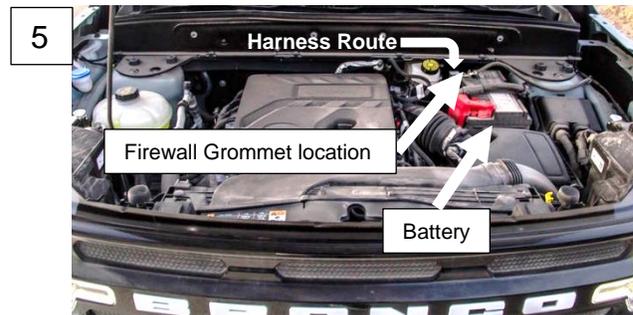


6. To route the switch through the firewall, the battery will need to be removed. First, remove the intake ducting from above the radiator by prying the two arrowed plastic fasteners with the trim tool.



7. Remove the circled connector on the air cleaner cover and the two arrowed clips attaching the harness. Using a flathead screwdriver, remove the intake air boot clamp. Pull up on the air cleaner box to remove and set aside.



8. Loosen the circled battery clamp fasteners with the 10mm socket with the extension. Remove the battery terminals (+/-) with the 10mm socket and place them aside; black lead first. Now the battery can be slid forward and removed for the moment. Remove the arrowed firewall grommet and route the harness switch lead through. Pull enough slack in from inside the cab to reach the headlight controls.

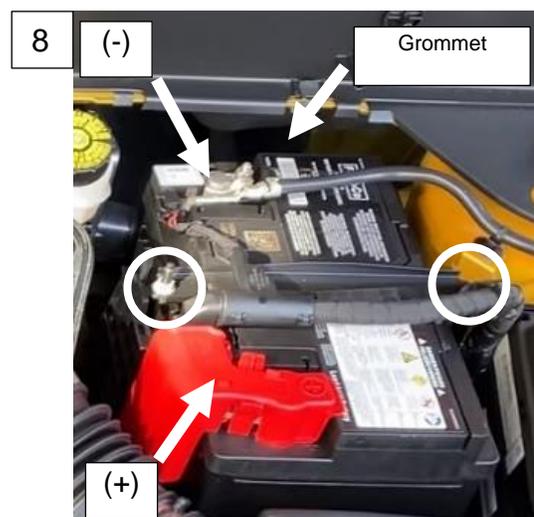

9. Carefully use the trim tool inside the cab to remove the panel to the left of the headlight controls.




10. Carefully pull the edges of the headlight control dash panel until the clips release. Remove the arrowed headlight control unit connector.



11. With the 3/4" step drill bit, drill a hole in the circled area shown. Take a quick photo of the switch wire orientation, remove the switch wires from the switch, route through the hole, reconnect, and mount the switch. Plug the headlight module back in and replace the dash panels.



12. Install the battery and repeat steps 6-8 in reverse order, this time attaching the positive battery terminal first and then the ground terminal. Mount the relay to the bolt on the strut tower as shown in the image.

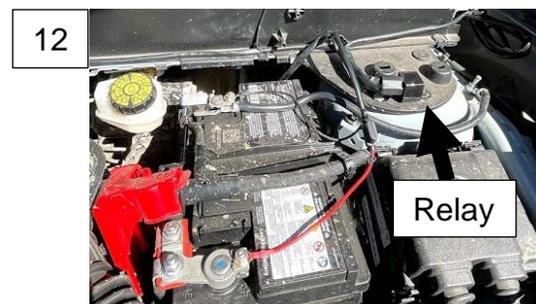

Re-torque all the fasteners after 100 miles.

Tie wires away from all hot, sharp, and/or rotating components.

Your install is now complete! Thank you for choosing Baja Designs.