




***baja designs***<sup>®</sup>  
THE SCIENTISTS OF LIGHTING

## Can-AM X3 XL Linkable Roof Mount kit

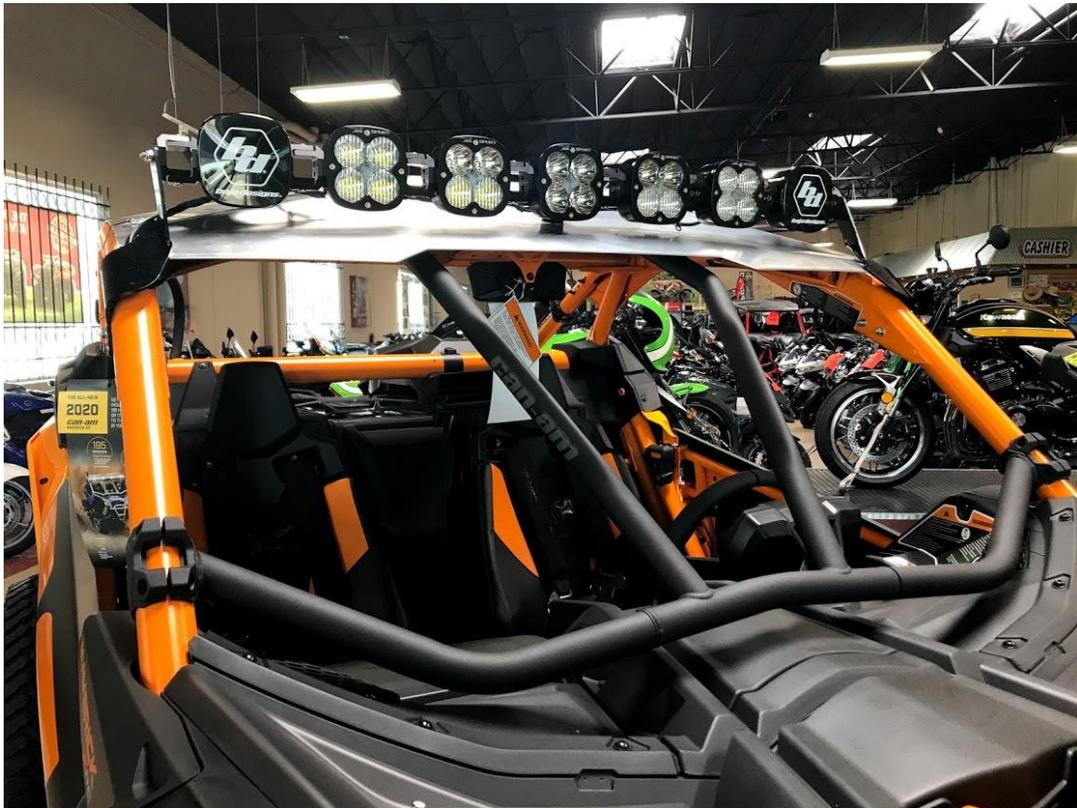

185 Bosstick Boulevard • San Marcos • CA • 92069

Phone 760-560-2252 x3 • Fax 760-560-0383

info@bajadesigns.com • [www.bajadesigns.com](http://www.bajadesigns.com)



***baja designs***®  
THE SCIENTISTS OF LIGHTING

## LIMITED LIFETIME WARRANTY

Baja Designs proudly offers a LIFETIME WARRANTY against manufacturer's defect on all the products that we manufacture.

These are comprehensive warranties; other than the exclusions below – you're covered. If your LED or HID bulb burns out, you're covered. Additionally, cutting off our connector or changing your lenses does not automatically void your warranty.

### **Exclusions:**

Installation errors, abuse, misuse or crash damage. You must be the original owner of the product and can supply proof of purchase.

Baja Designs manufactures its own products as well as resells products manufactured by others. Baja Designs makes no express or implied warranties on products not manufactured by Baja Designs including without limitation any warranties or merchantability and fitness for a purpose. We will, however, pass on all warranties made by the manufacturer, who has sole responsibility for performing such warranties.

Baja Designs will pay the freight if your product is less than 90 days old, otherwise defective products must be returned to Baja Designs, Inc., freight prepaid. At our option, we will repair or replace items in question and return them at no charge. If the identical product is no longer available, we will replace with a similar product of equal value. Baja Designs Inc. will not be responsible for any indirect or consequential damages in connection with defective merchandise.

Items purchased through a Baja Designs authorized dealer must be returned through the dealer. Only available on LED auxiliary lights and product must be in sellable condition at MSRP. Product that has been damaged in any way after the original purchase date will be excluded from this guarantee.

### **Indemnification:**





**Buyer hereby acknowledges off-roading, racing and driving at night are dangerous activities and that the products and/or supplies purchased from Baja Designs are used in an inherently dangerous activity that may endanger life and limb; and in no event shall the seller, or seller's heirs and assigns, be held liable for consequential damages, nor shall seller's liability on any claim for damages arising out of or connected with the sale, delivery, or use of purchased products and/or supplies exceed the purchase price of the products and/or supplies**

## Can-Am X3 XL Linkable 7 Light Roof Kit Instructions

### Tools Required

- 7/16" wrench
- 10mm Socket wrench
- 19mm Socket wrench w/ extension.
- 7/16" Socket wrench
- 3/16" Allen wrench
- 13mm wrench and socket.

1. Locate the mounting holes located in the circled locations on the passenger and driver side cage tubes.
2. With the 7/16" wrench and socket, mount the passenger side bracket with the provided hardware as shown. Repeat for the driver side. (Anti-seize recommended on all Stainless-steel hardware).
3. Read the XL linkable instructions to mount the preload support bracket assembly to the light bar.
4. An assistant will be needed for this step. With the 3/16" Allen wrench and 7/16" socket, mount the light with the 1/4" end link hardware in the four bracket holes. The two passenger holes are circled.
5. The passenger seat will need to be removed to install the wiring harness. Flip the bottom of the seat forward in the direction shown. Remove the two circled seat bottom 19mm fasteners with the socket wrench and extension. Remove the upper shoulder harnesses with the 19mm socket. The remaining front two seat mounting fasteners can be removed with the 13mm wrench and socket.
6. The location of the bus bar is starred in step 5. Remove the three trim fasteners at the top edge of the passenger side console panel. Then remove the panel to expose the bus bar. Remove the middle 10mm terminal nut with the socket wrench and attach the positive ring terminal of the wiring harness and tighten. **Leave the negative ring terminal off for now.**
7. Route the harness through the dash to along the existing OEM harness. Tie relay and harness away from all hot, sharp, and/or rotating components. Route the rocker switch to the desired dash location. Snap a quick photo of the switch terminals. Remove the switch terminals to mount the switch then reattach the terminals.
8. Route the light plug lead of the wiring harness from above the steering rack to the passenger side frame tube. Attach extension harness. Continue up the tube to the light and plug it in. Again, tie extra harness away from all hot, sharp, and/or rotating components.
9. Mount the negative ring terminal of the wiring harness to the top 10mm terminal nut from step 6. Install the console panel and the seat from step 5.

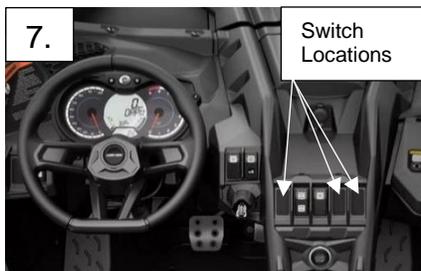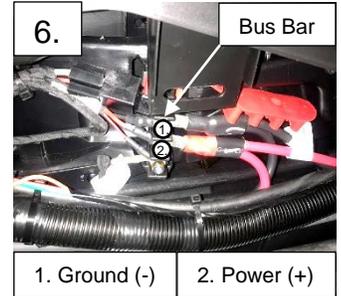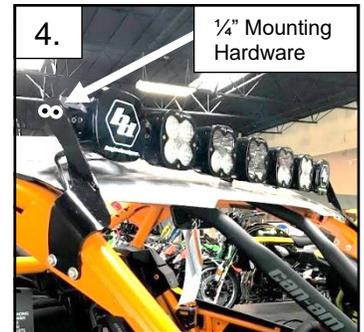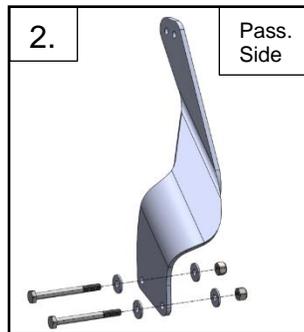

Re-torque all the fasteners after 100 miles.

Your install is now complete! Thank you for choosing Baja Designs.