

Traxda 2022 Toyota Tundra Instructions

Remove struts



remove sway bar link at bottom, remove strut mount nuts,
remove ball joint bolts

remove ball joint bolts




remove strut mount nuts

Put strut into strut compressor and remove strut mount. Install preload spacer, it will only fit one orientation.



Install preload spacer, it will only fit one orientation.

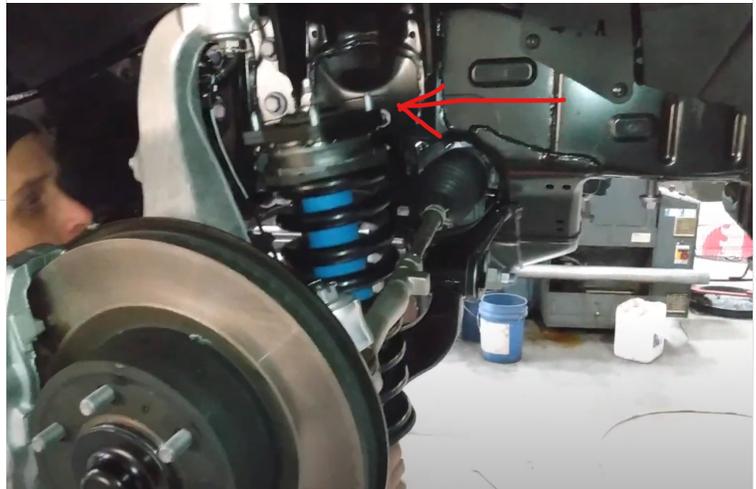

Install plates on top of strut

Reinstall assembly into truck

remove bump stop and install washer on bump stop, reinstall



Support rear differential with jack stands.

remove rear shock



remove sway bar link at chassis



remove brackets holding brake lines on at chassis




remove brackets for brake lines at differential



Remove rear springs



Put traxda spacer on top of spring isolator

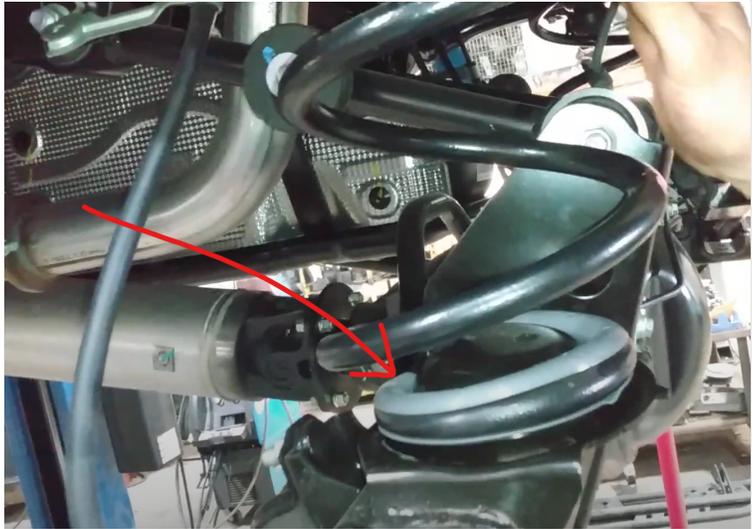

reinstall spring into truck, paying attention to pigtail on spring fits into pocket

	Left	Right
Caster (degrees)	2	2.5
Camber (degrees)	0	-1/4 or -.25
Toe	1/32 or .03125 inch toe in	
Special Tools	none	

Alignment Notes:

We recommend that a technician with experience doing alignments on lifted trucks perform the alignment. Large tires wear differently than OEM sized tires. Always do an alignment after changing tires on a vehicle.