



bajadesigns[®]
The Scientists of Lighting

44-7772, 44-7773, 44-7774 Dodge, Ram TRX (21-On), A-Pillar Kit



185 Bosstick Boulevard • San Marcos • CA • 92069

Phone 760-560-2252 • Fax 760-560-0383

info@bajadesigns.com • www.bajadesigns.com



baja designs[®]
The Scientists of Lighting

LIMITED LIFETIME WARRANTY

Baja Designs proudly offers a LIFETIME WARRANTY against manufacturer's defect on all the products that we manufacture.

These are comprehensive warranties; other than the exclusions below – you're covered. If your LED or HID bulb burns out, you're covered. Additionally, cutting off our connector or changing your lenses does not automatically void your warranty.

Exclusions:

Installation errors, abuse, misuse or crash damage. You must be the original owner of the product and can supply proof of purchase.

Baja Designs manufactures its own products as well as resells products manufactured by others. Baja Designs makes no express or implied warranties on products not manufactured by Baja Designs including without limitation any warranties or merchantability and fitness for a purpose. We will, however, pass on all warranties made by the manufacturer, who has sole responsibility for performing such warranties.

Baja Designs will pay the freight if your product is less than 90 days old, otherwise defective products must be returned to Baja Designs, Inc., freight prepaid. At our option, we will repair or replace items in question and return them at no charge. If the identical product is no longer available, we will replace with a similar product of equal value. Baja Designs Inc. will not be responsible for any indirect or consequential damages in connection with defective merchandise.

Items purchased through a Baja Designs authorized dealer must be returned through the dealer. Only available on LED auxiliary lights and product must be in sellable condition at MSRP. Product that has been damaged in any way after the original purchase date will be excluded from this guarantee.


Indemnification:

Buyer hereby acknowledges off-roading, racing and driving at night are dangerous activities and that the products and/or supplies purchased from Baja Designs are used in an inherently dangerous activity that may endanger life and limb; and in no event shall the seller, or seller's heirs and assigns, be held liable for consequential damages, nor shall seller's liability on any claim for damages arising out of or connected with the sale, delivery, or use of purchased products and/or supplies exceed the purchase price of the products and/or supplies

Tools Required

- *10mm, 7/16", 9/16" wrench
- *10mm, 7/16", 9/16", 13mm Socket
- *Flat Head or Trim Removal Tool

1. Using a 13mm socket, remove the 2x hood hinge bolts on the driver side. Attach the bracket and fasten down. To check its clearance, close the hood and run the windshield wipers. If the wind shield wiper touches the bracket, re-position until there is no contact. Once the driver side bracket is finished, attach the passenger side bracket. Once the brackets are bolted down, attach the lights to the brackets using a 9/16" wrench and socket.

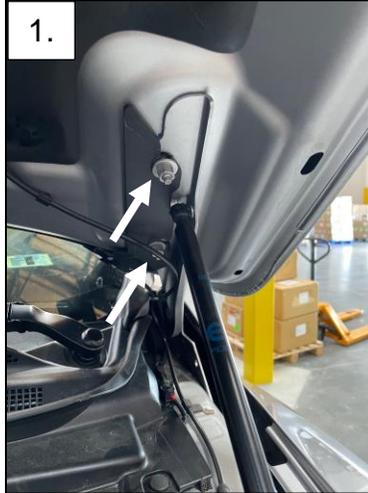


2. Remove the 8x plastic push clips on the plastic cowl and pull up.




3. Route the supplied 55" splitter harness under the cowl and plug in both lights to the harness.



4. Attach the up-fitter harness to the 55" splitter harness. Route the clasp connectors on the upfitter harness to the relay box. Located on the driver side of the relay box are the upfitter wires. Pull the wires out and separate them.

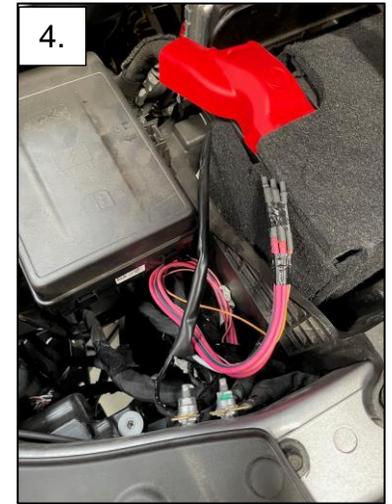

5. Locate AUX wire 5 or 6, close the clasp connector on the white wire over the auxiliary wire chosen. If you need to use Aux 1 – 4, you will need the additional 12ga splice adapter.

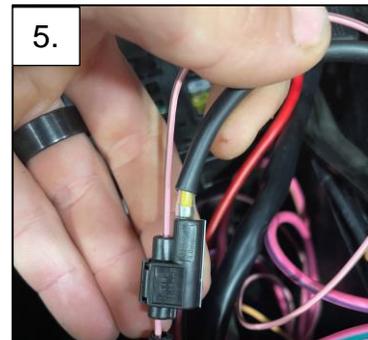

6. Next to the fuse block is a chassis ground. Using a 10mm socket, remove the nut & place the 3/8" ring terminal on the black wire to the chassis ground. Torque the chassis ground nut with all wiring attached.



*Tie all wires away from sharp, hot, and/or rotating components.

* Re-torque all the fasteners after 100 miles.

*Your install is now complete! Thank you for

Aux Switch	Color	Rating
Aux 1	Pink/Dark Blue	50Amp
Aux 2	Pink/Dark Green	20Amp
Aux 3	Pink/Violet	20Amp
Aux 4	Pink/Beige	50Amp
Aux 5	Pink/Brown	20Amp
Aux 6	Pink/Yellow	20Amp