

TOYOTA 2016-22 Tacoma Seat Riser Kit

Thank you for choosing Rough Country for all your vehicle needs.

Please read instructions before beginning installation. Check the kit hardware against the kit contents shown below. Be sure you have all needed parts and know where they go.

If question exist, please call us @1-800-222-7023. We will be happy to answer any questions concerning this product.

Check all fasteners for proper torque. Check to ensure for adequate clearance between all components.

Periodically check all hardware for tightness.

Kit Contents:

- Front Spacers x4
- Rear Spacers x4

Tools Needed:

- 14mm Wrench or Socket
- 17mm Wrench or Socket

Hardware Included:

- 10mm-1.25 x 25mm bolts x8
- 10mm-1.25 x 70mm bolts x4
- 10mm Flat Washers x12





Torque Specs:

Size	Grade 5	Grade 8	Size	Class 8.8	Class 10.9
5/16"	15 ft/lbs	20ft/lbs	6MM	5ft/lbs	9ft/lbs
3/8"	30 ft/lbs	35ft/lbs	8MM	18ft/lbs	23ft/lbs
7/16"	45 ft/lbs	60ft/lbs	10MM	32ft/lbs	45ft/lbs
1/2"	65 ft/lbs	90ft/lbs	12MM	55ft/lbs	75ft/lbs
9/16"	95 ft/lbs	130ft/lbs	14MM	85ft/lbs	120ft/lbs
5/8"	135ft/lbs	175ft/lbs	16MM	130ft/lbs	165ft/lbs
3/4"	185ft/lbs	280ft/lbs	18MM	170ft/lbs	240ft/lbs




INSTALLATION INSTRUCTIONS

1. Remove the front (2) seat bolts using a 14mm socket. Retain hardware for later use. **See Photo 1.**
2. Remove the seat trim to expose the rear seat bolts. **See Photo 2.**

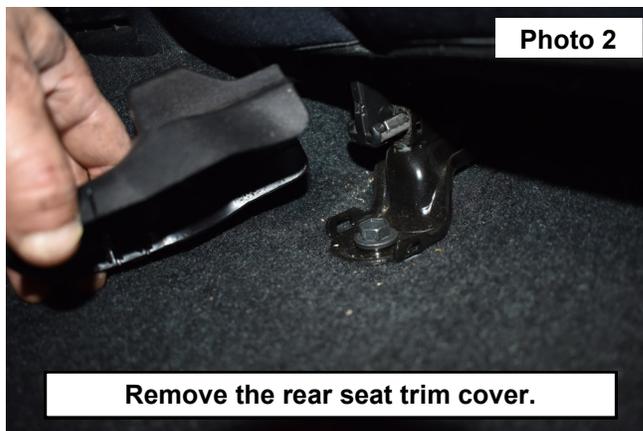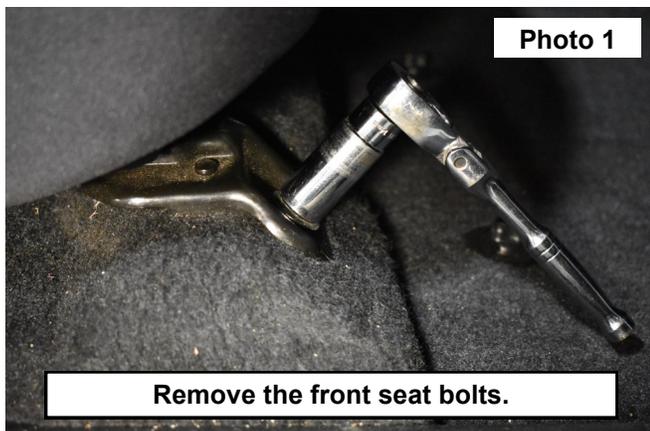


3. Remove the (2) rear seat bolts using a 14mm socket. **See Photo 3.**
4. Lift the seat to the back of the vehicle and place the brackets onto the floor. Install the pin through the floor like the OE seat frame was mounted. **See Photo 4.**

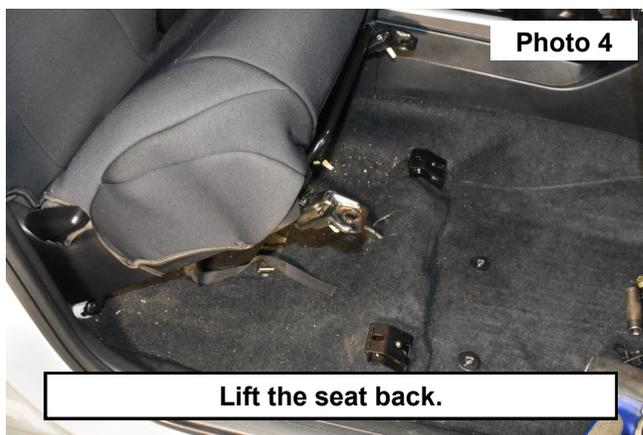



5. Secure the brackets to the floor using (2) 10mm-1.25 x 25mm bolts and (2) 10mm flat washers. Tighten the bolts using a 14mm socket. **See Photo 5.**
6. Lower the seat onto the brackets, secure the seat using (2) 10mm-1.25 x 25mm bolts and (2) 10mm flat washers into the spacers, hand tighten only. **See Photo 6.**



7. Place the (2) rear spacers under the seat mounts. **See Photo 7.**
8. Secure the seat mounts using the (2) 10mm-1.25 x 70mm bolts (2) 10mm flat washers. Tighten the bolts using a 17mm socket. **See Photo 8.**

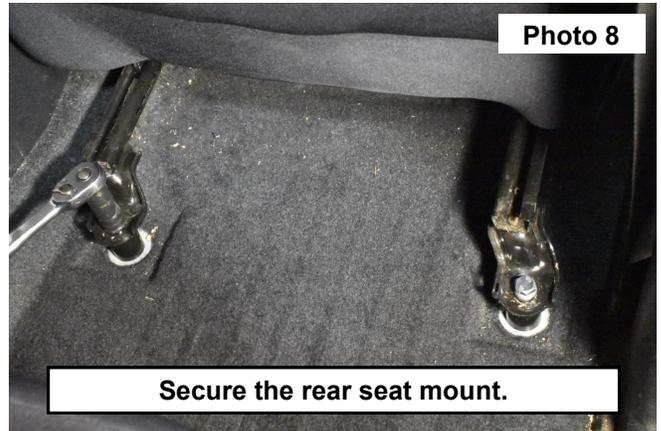

9. Install the OE seat trim onto the rear seat bracket. **See Photo 9.**
10. Tighten the front (2) seat bolts using a 17mm socket. **See Photo 10.**

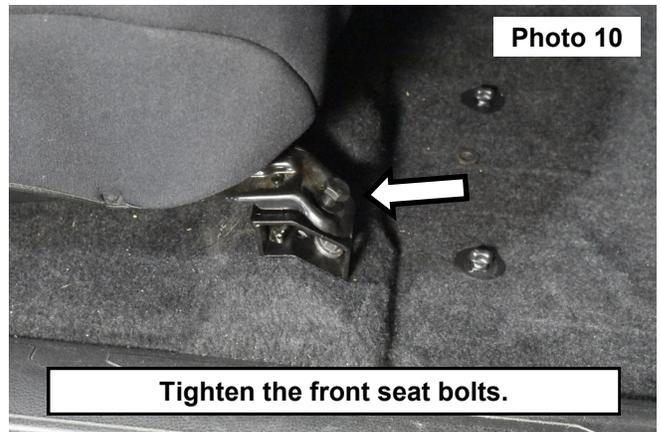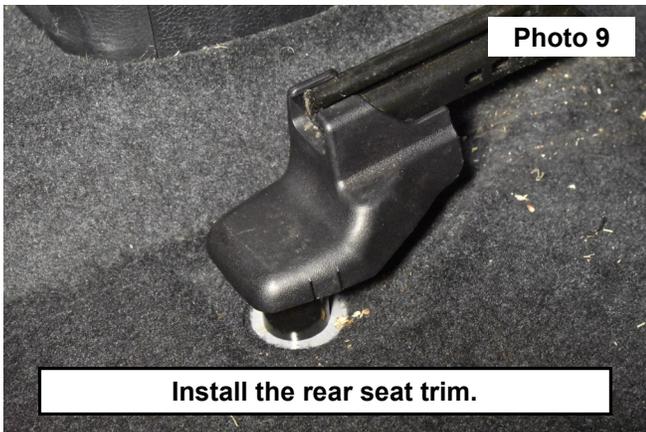

11. Repeat this process on the opposite side of the vehicle.

By purchasing any item sold by Rough Country, LLC, the buyer expressly warrants that he/she is in compliance with all applicable, State, and Local laws and regulations regarding the purchase, ownership, and use of the item. It shall be the buyers responsibility to comply with all Federal, State and Local laws governing the sales of any items listed, illustrated or sold. The buyer expressly agrees to indemnify and hold harmless Rough Country, LLC for all claims resulting directly or indirectly from the purchase, ownership, or use of the items.

