



## Installation Guide for 2023-Up Nissan Z Headlights

ALPHAREX specializes in designing and producing superior and uniquely stylish aftermarket automotive performance lighting with unrivalled innovative technology. This installation guide takes you through the step-by-step process of installing your new **ALPHAREX HEADLIGHTS** for your 2023-Up Nissan Z

**DO NOT USE DIELECTRIC GREASE!**



### Table of Contents



#### PART I REMOVE HEADLIGHTS

- **INSTALLATION TOOLS**
- **STEP 1.** Disconnecting the negative battery terminal
- **STEP 2.** Remove the front bumper
- **STEP 3.** Remove the headlight bolts
- **STEP 4.** Remove the headlights

#### PART II INSTALL HEADLIGHTS

- **STEP 1.** Install the headlights
- **STEP 2.** Test the headlight functions
- **STEP 3.** Adjust headlight level
- **STEP 4.** Complete installation

*Disclaimer: This installation article is a tutorial guide. By reading this article, you agree it is for reference only and AlphaRex USA and its distributors make no guarantee on the finished results. Under no circumstances whatsoever shall AlphaRex USA nor its distributors be liable for any damage, misuse or personal injuries. If you do not fully understand the installation procedure, it is highly recommended that you seek help from professional mechanics to do the installation.*

# PART I REMOVE HEADLIGHTS

## INSTALLATION TOOLS

PREPARE THESE TOOLS FOR INSTALLATION



Metal  
Panel  
Popper



Flat  
Screwdriver



Power Tool



1/4 Ratchet



1/4 Extension

10mm



**NOTE:** Whenever using a power tool, please make sure do not overtighten the bolts.


## STEP 1. DISCONNECTING THE NEGATIVE BATTERY TERMINAL



Whenever working on your vehicle, always start by disconnecting the negative battery terminal.



## STEP 2. REMOVE THE FRONT BUMPER

Start by extracting the push-in pins from the radiator shroud, then carefully remove and set it aside for future reinstallation.

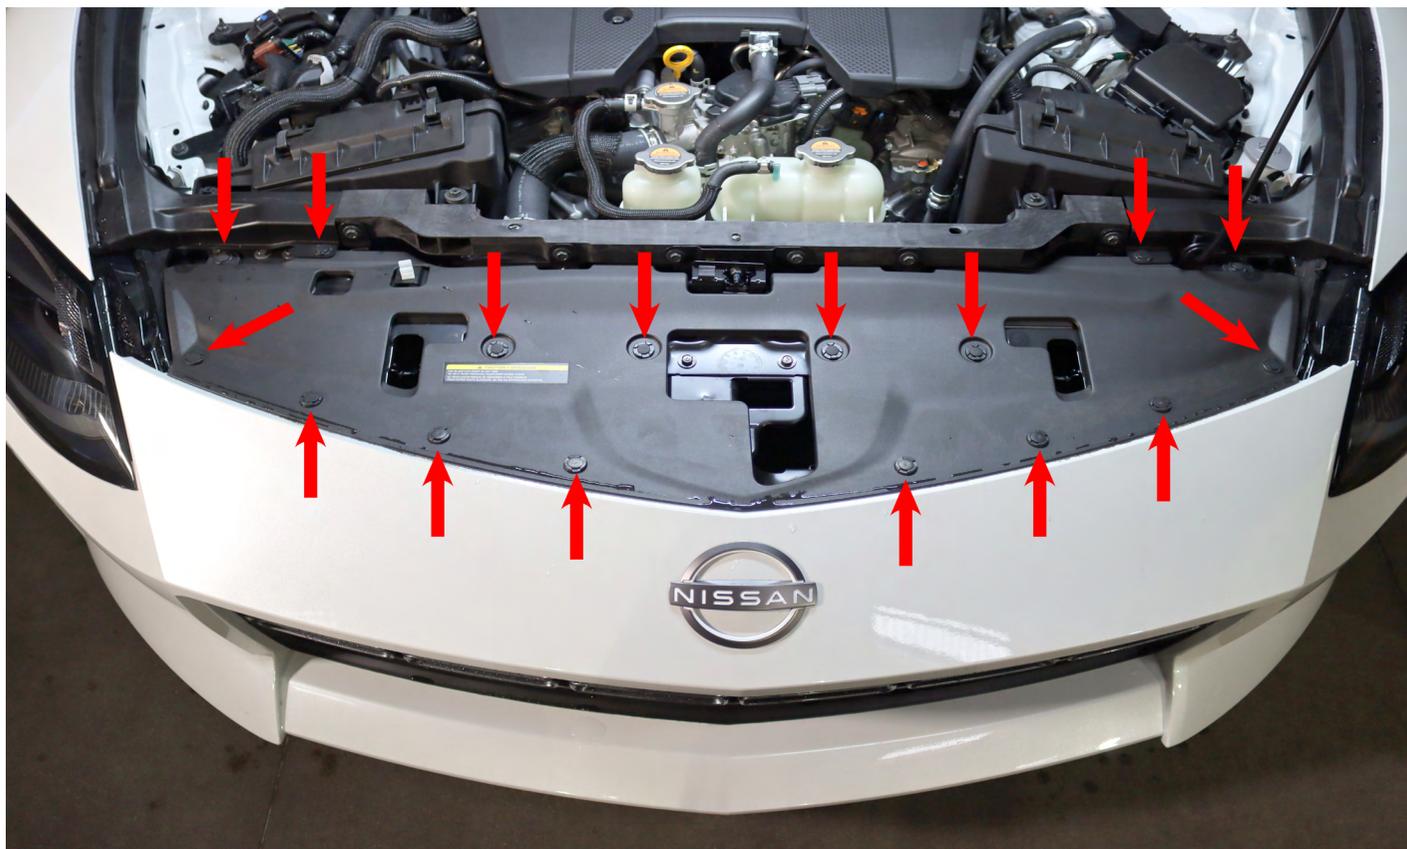

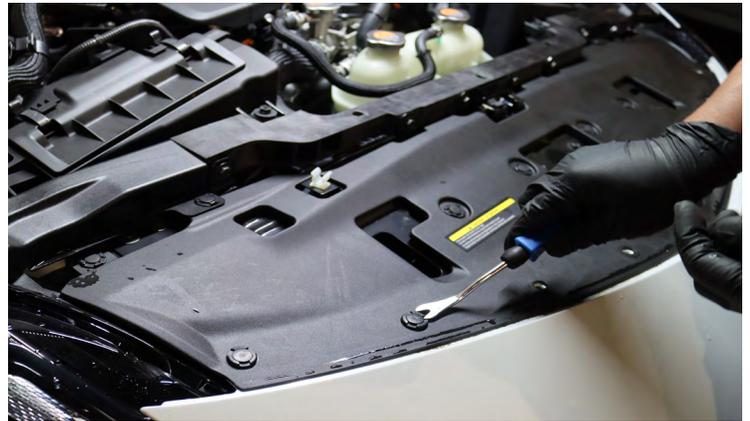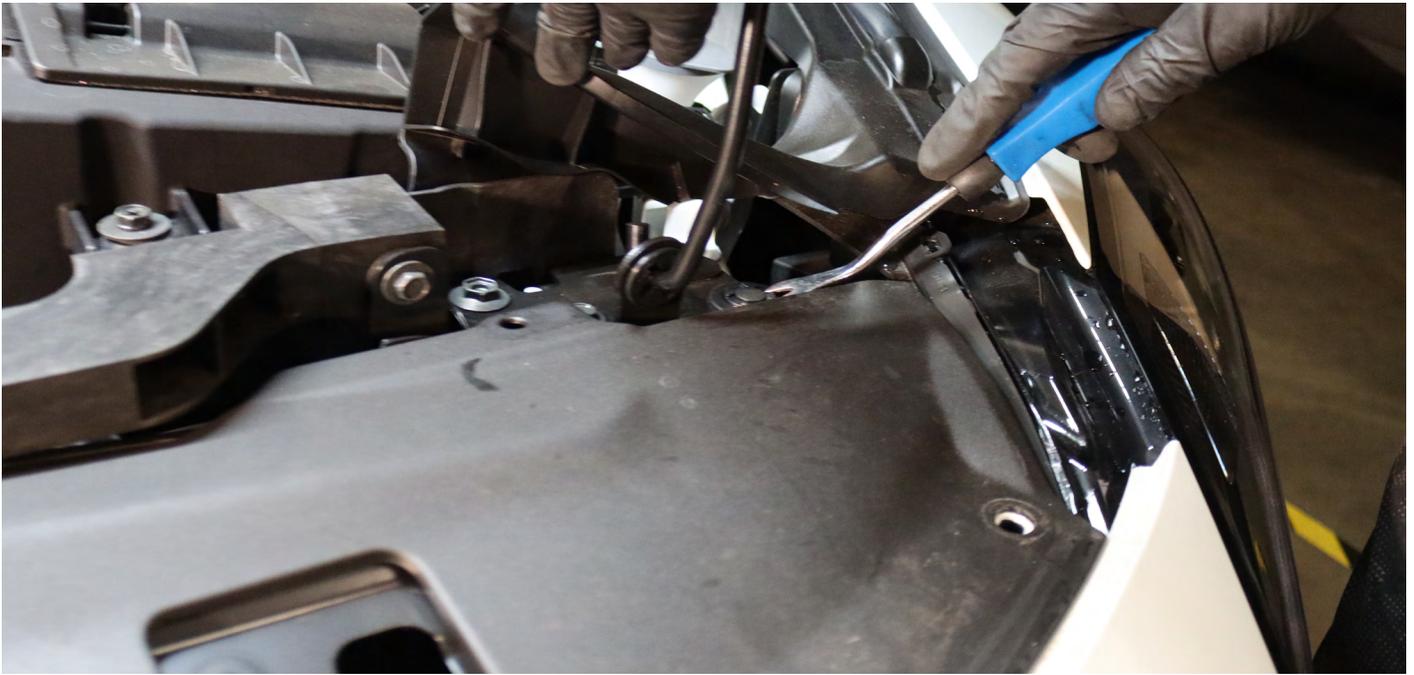

Detach the push-in pin from the wheel well and then open the liner to access the 10mm bumper bolt.



Remove the 10mm bolt.




Gently detach the front bumper by pulling outward from the side, disengaging it from the mounting clips.




Repeat the same steps for the other side of the wheel well.



To detach the entire bumper, uninstall the ten 10mm bolts located beneath the front bumper securely.

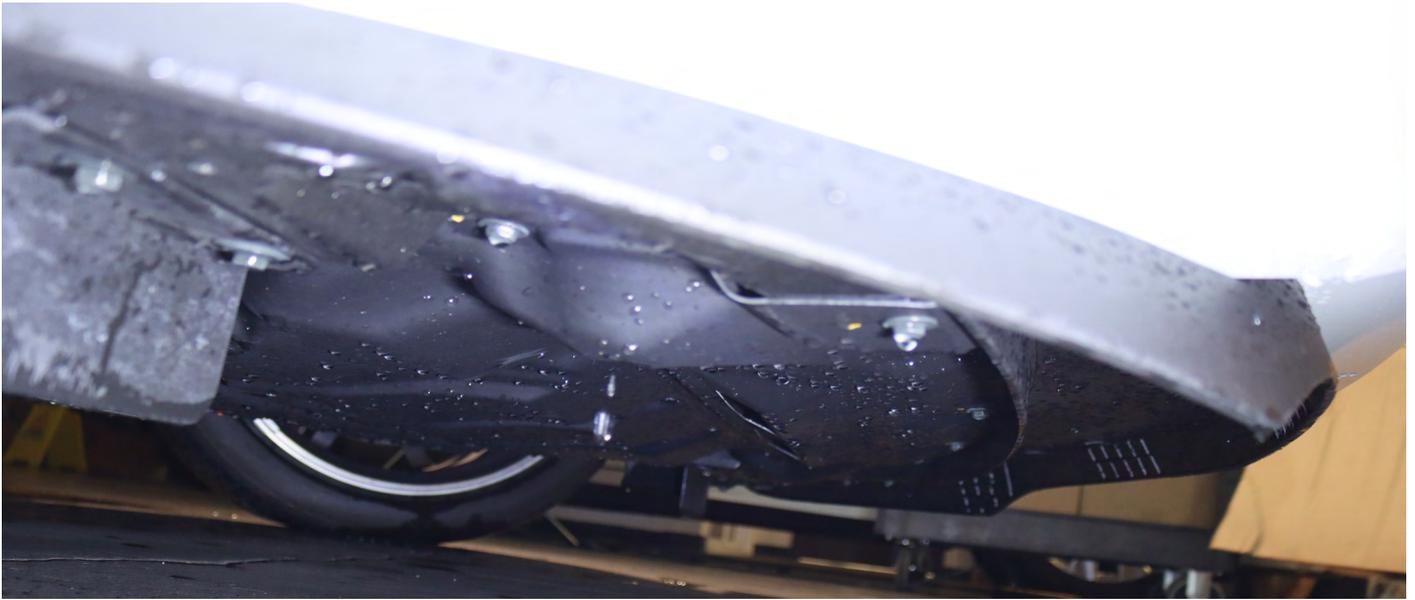


Ensure that you disconnect the sensor connections, then proceed to remove the front bumper entirely. Set it aside for later reinstallation.

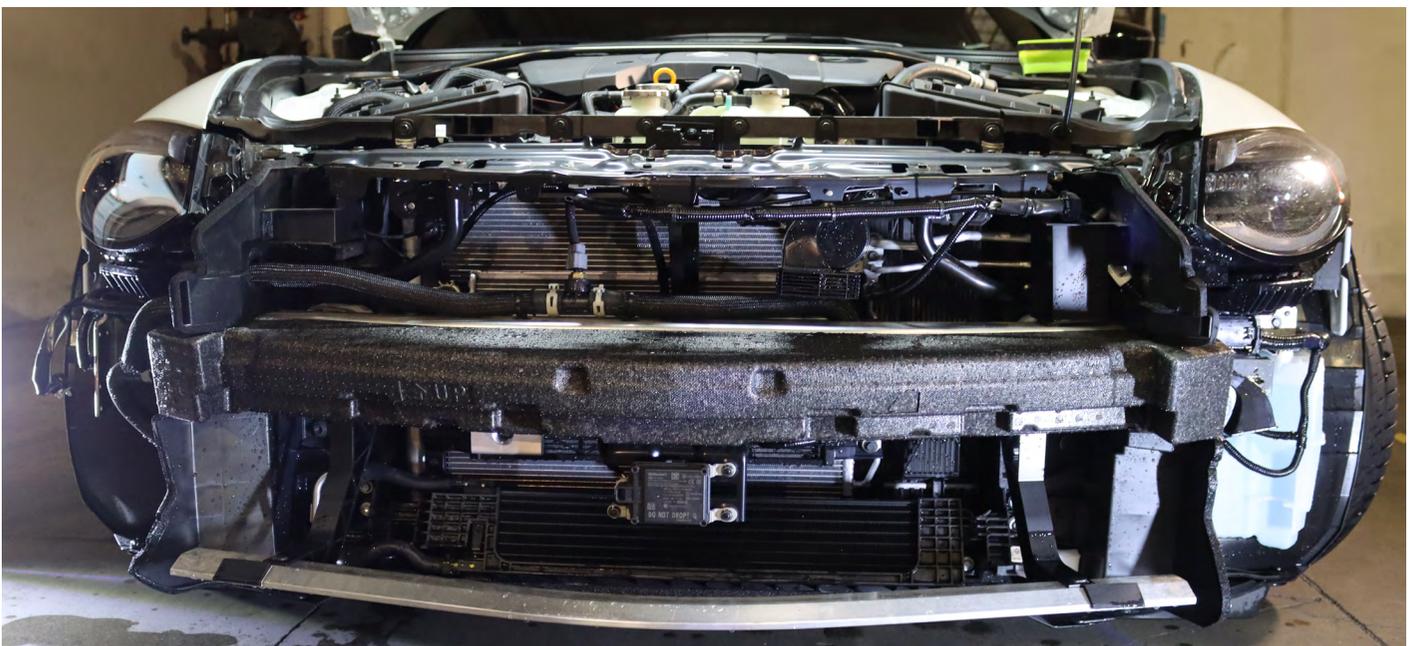


### STEP 3. REMOVE THE HEADLIGHT BOLTS

Remove the five 10mm bolts securing the headlight assembly.  
Repeat the same steps for the other side.



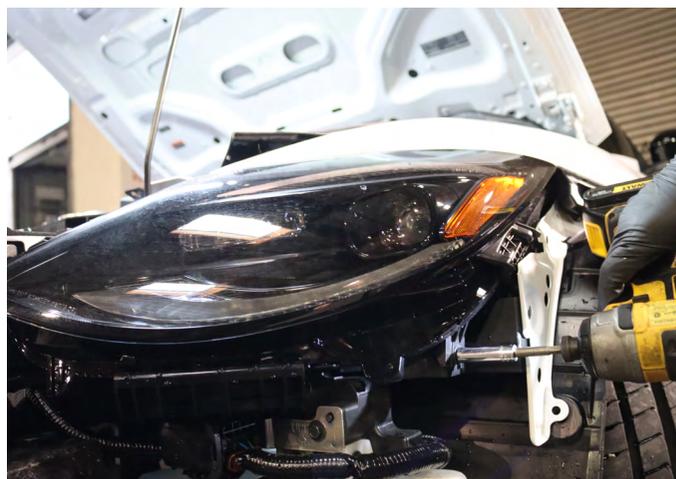


## STEP 4. REMOVE THE HEADLIGHTS

Gently pull the headlight assembly outward to disengage.  
Unplug the headlight's sockets to complete the headlight's removal.

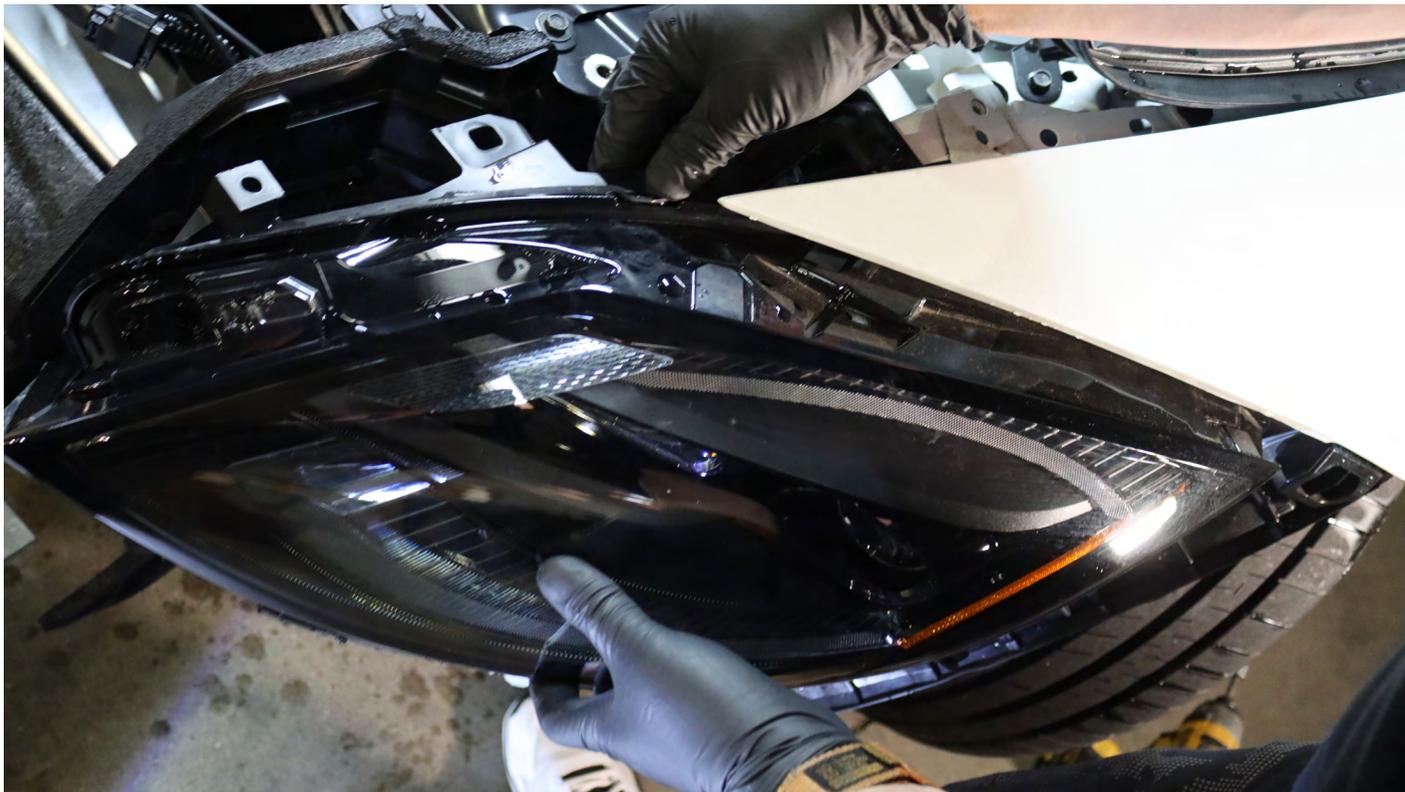

Follow the same steps to remove the other side of the headlight.

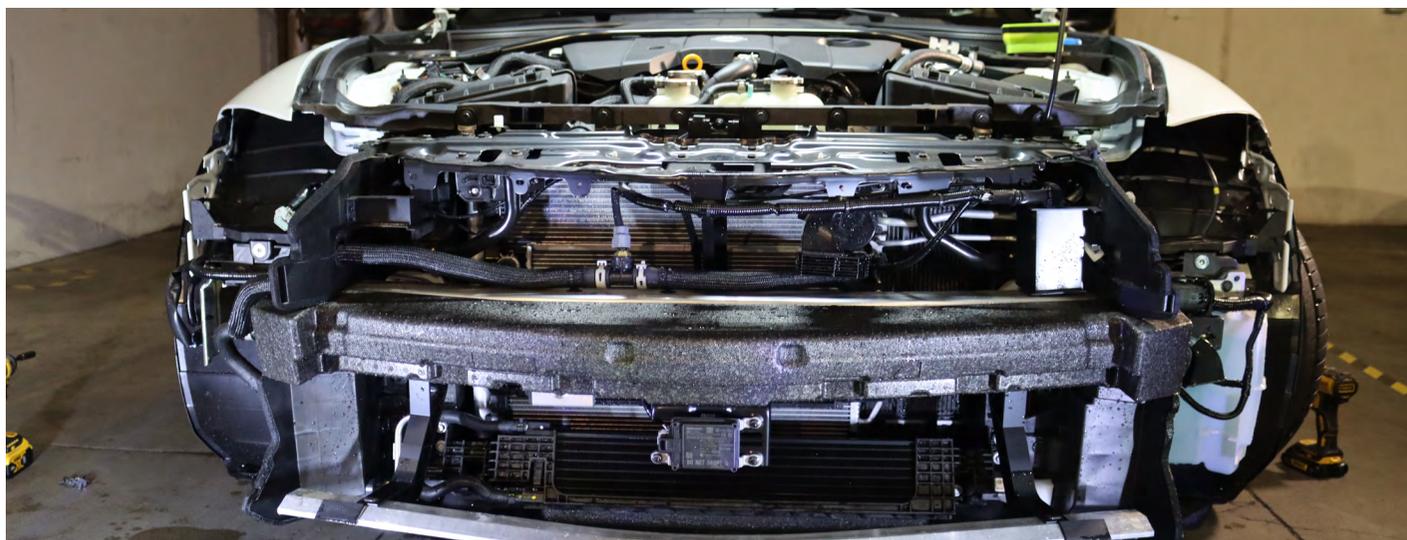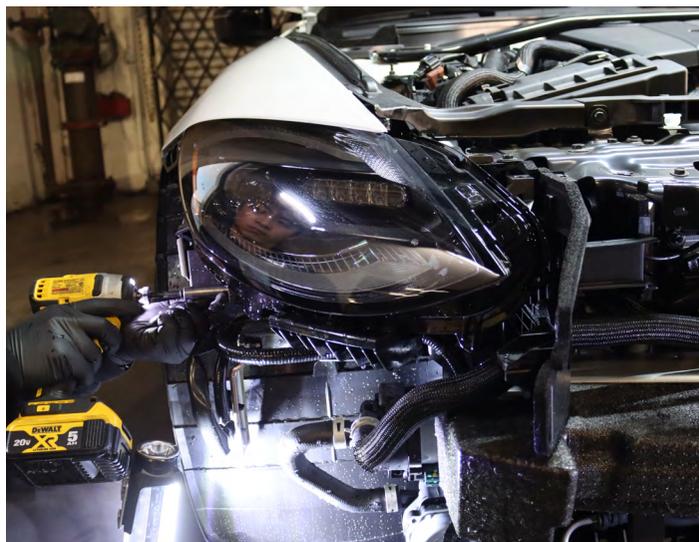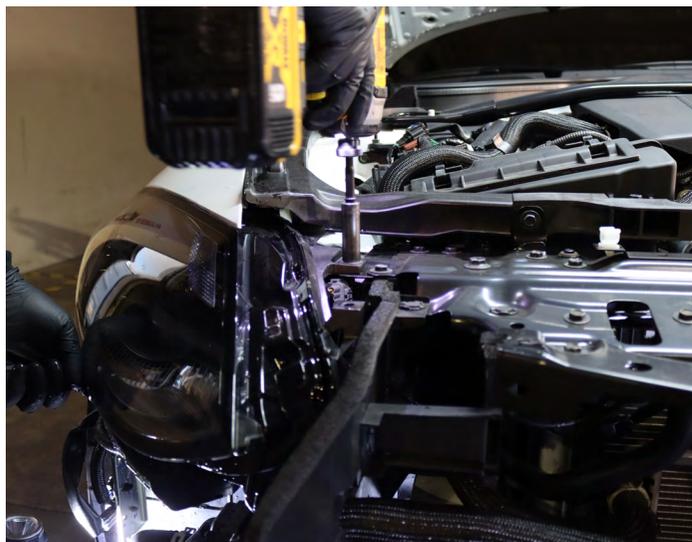



## PART II INSTALL HEADLIGHTS



### STEP 1. INSTALL THE HEADLIGHTS

Connect the headlight socket to the new ALPHAREX headlight assembly.


**DO NOT USE DIELECTRIC GREASE!**

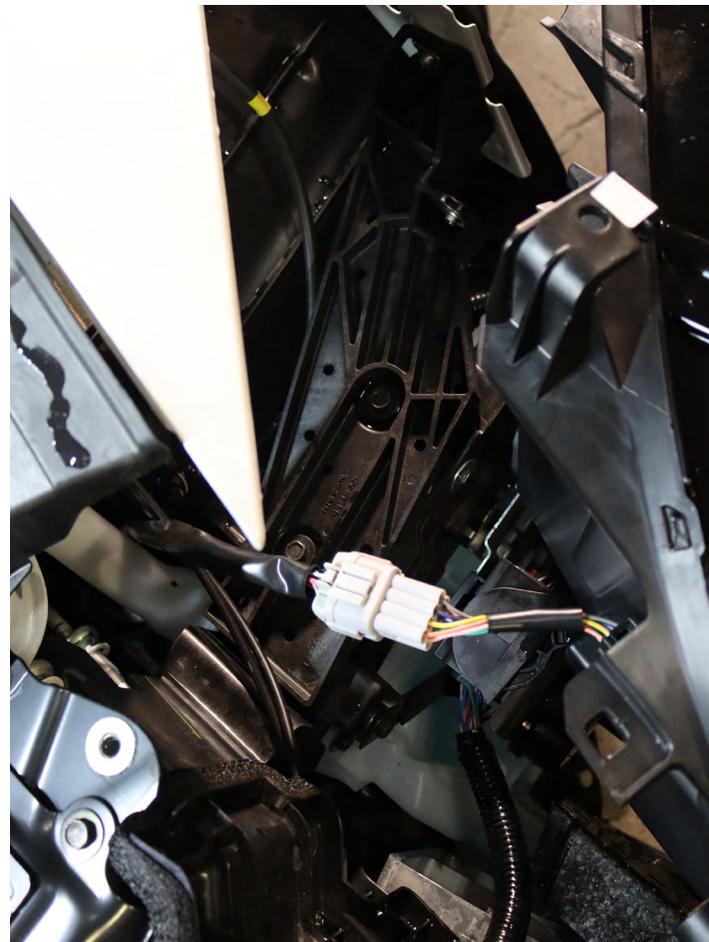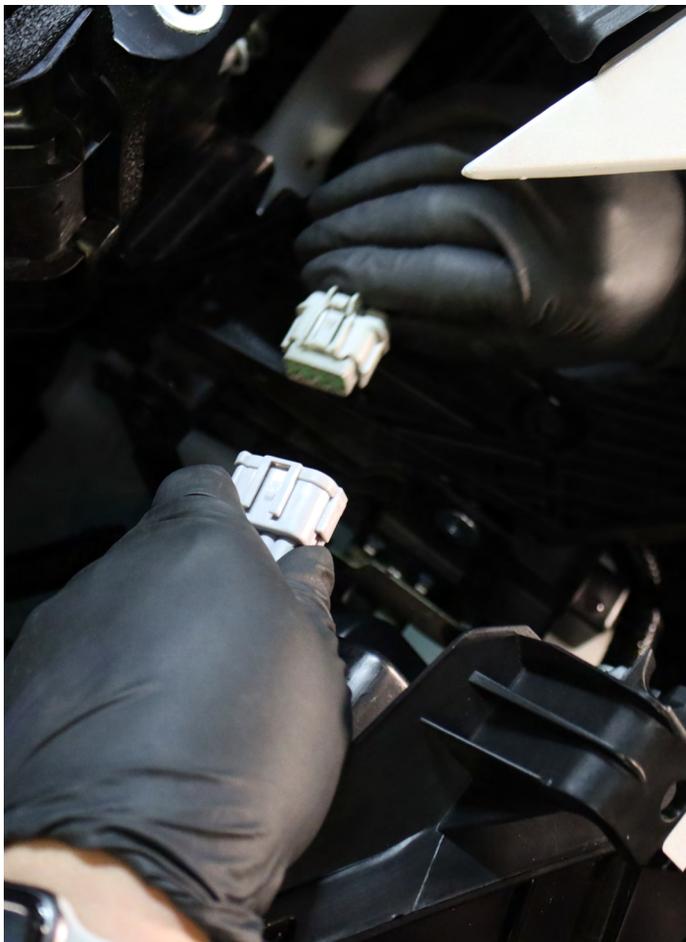


Securely install the headlight into the vehicle and tighten the five 10mm bolts in place. Repeat the same steps for the other side of the headlights.



To complete the installation, reverse the removal process, ensuring all previous steps are followed in the opposite order.

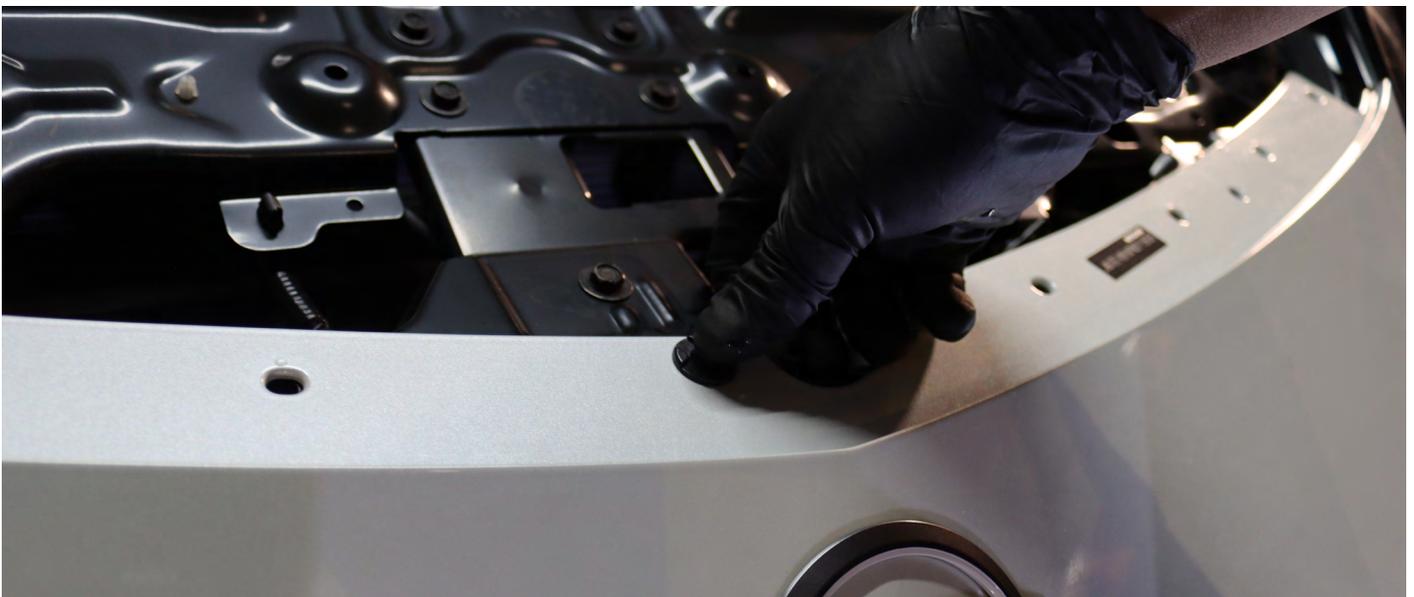

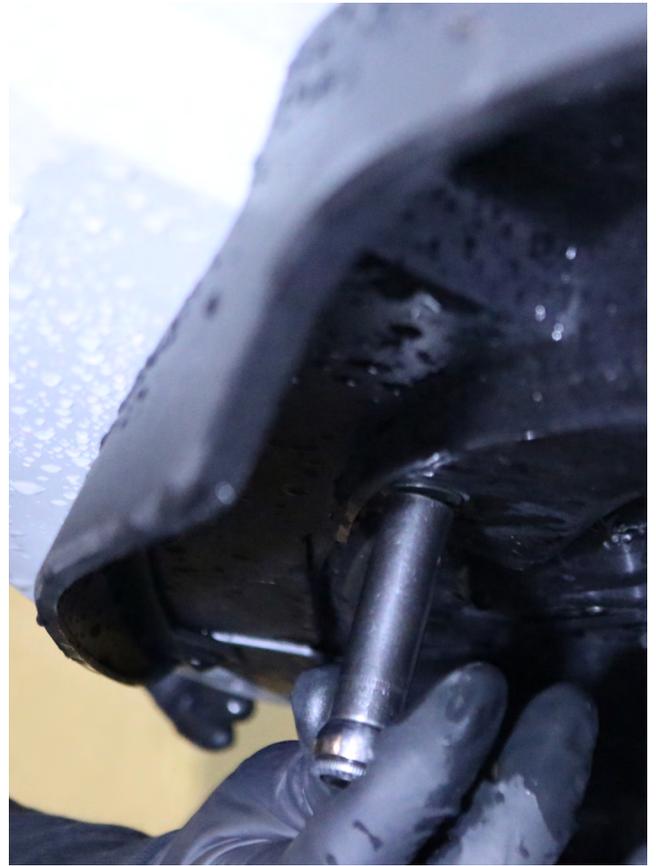


## STEP 2. TEST THE HEADLIGHT FUNCTIONS

Test the functions of your ALPHAREX headlights to ensure everything works properly.



## STEP 3. ADJUST HEADLIGHT LEVEL

Once everything has been tested, aim your ALPHAREX headlights by parking 25ft from a wall and level the headlight evenly.

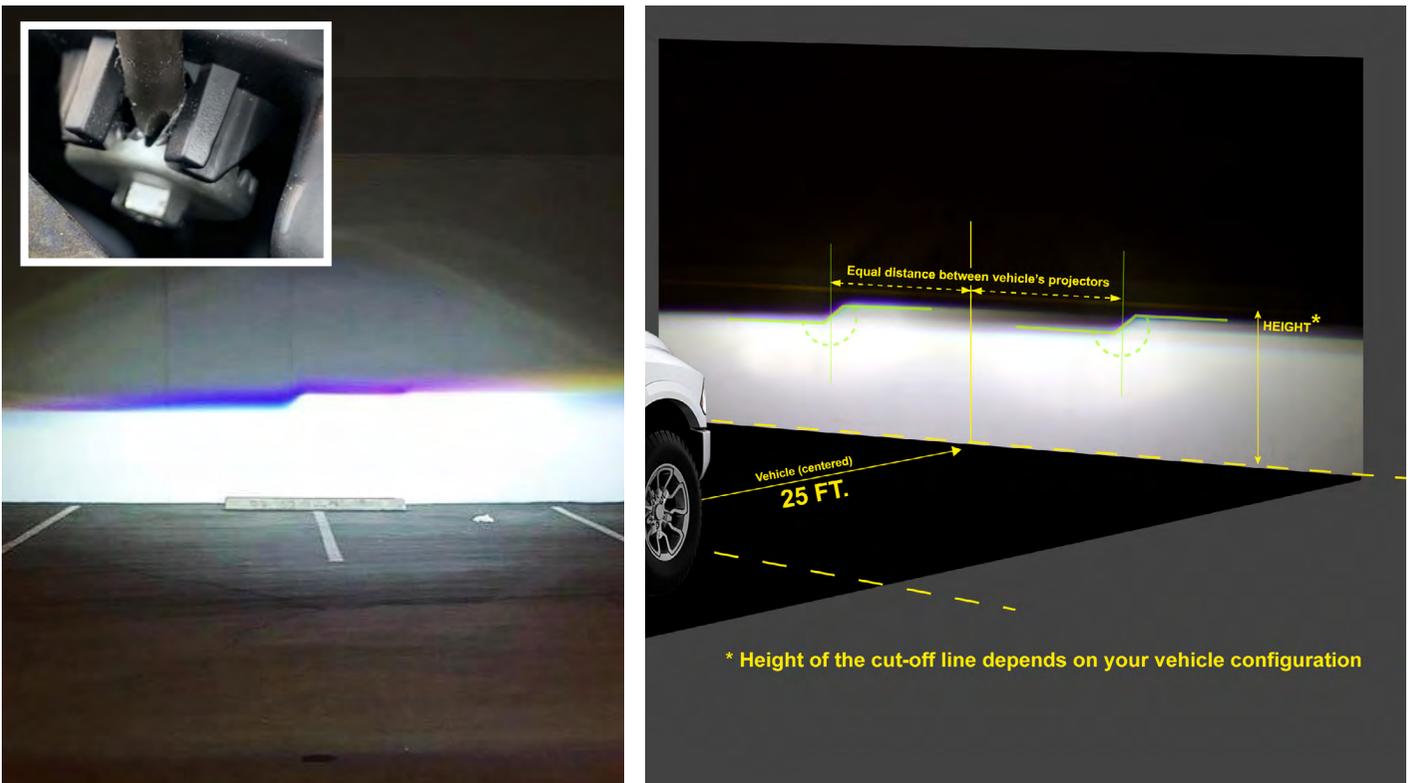

## STEP 4. COMPLETE INSTALLATION

Congratulations! You have completed the installation for ALPHAREX 23-Up Nissan Z HEADLIGHTS.

