

# Hellwig PRODUCTS.com





559-734-7451 800-367-5480 FAX 559-734-7460

## INSTALLATION INSTRUCTIONS FRONT STABILIZER BAR

### B-Body Impala

Thank you for purchasing a quality Hellwig Product.

PLEASE READ THIS INSTRUCTION SHEET COMPLETELY BEFORE STARTING YOUR INSTALLATION

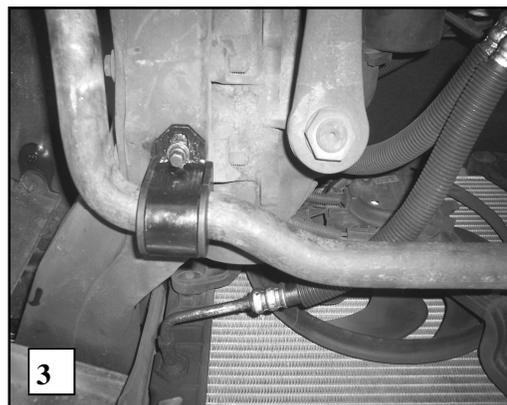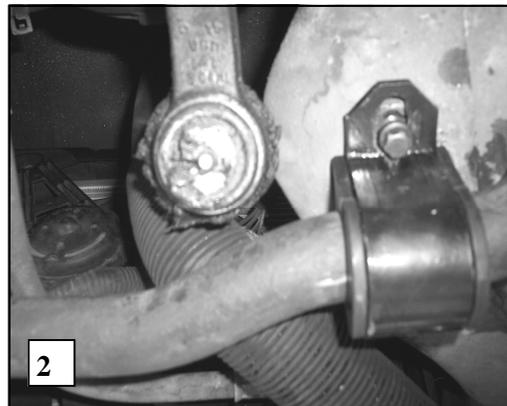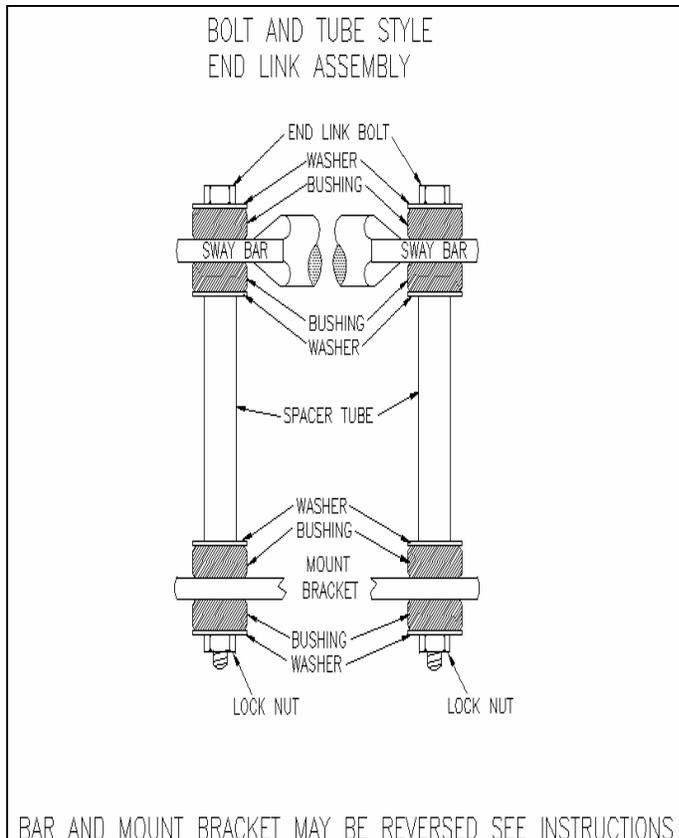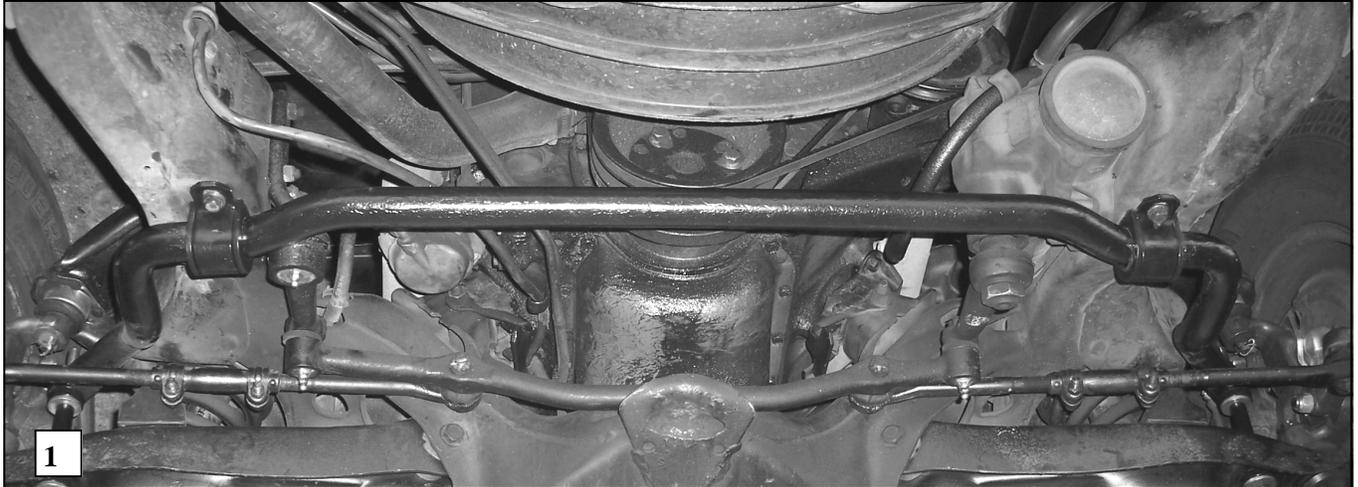

# Hellwig PRODUCTS.com

559-734-7451 800-367-5480 FAX 559-734-7460

## TORQUE TABLE

**BOLT SIZE:** 3/8" = 20-30 ft. lbs. – 7/16" = 35-45 ft. lbs. – 1/2" = 50-70 ft. lbs. – 9/16" = 70-90 ft. lbs.

**SAFETY: BEFORE STARTING YOUR INSTALLATION, BE SURE TO SET PARKING BRAKE AND CHOCK TIRES.**

**NOTE: TO EASE INSTALLATION AND TO PROPERLY ADJUST THE SWAY BAR, THE WEIGHT OF THE VEHICLE MUST BE ON THE SUSPENSION AS IF DRIVING DOWN THE ROAD. DO NOT RAISE THE VEHICLE BY THE FRAME.**

**NOTE: THIS UNIT IS DESIGNED AS A REPLACEMENT FOR THE FACTORY INSTALLED FRONT ANTI-SWAY BAR**

**NOTE: THIS KIT INCLUDES LOCK NUTS WHICH REQUIRE TIGHTENING WITH A WRENCH AFTER BEING STARTED BY HAND.**

1. Remove the factory installed anti sway bar and the mounting hardware. Keep the U-plate mounting bolts as these will be re-used to install the new front sway bar on your vehicle. ( **SEE PHOTOS**).
2. Install the D-shaped poly bushings on the new sway bar in the same location that the bushings were on the factory sway bar. ( **SEE PHOTO ONE (1)**).
3. Take the end link poly bushings and assemble the end link assemblies. ( **SEE DIAGRAM**). Install on the vehicle's lower control arms.
4. Position the U-plates over the D-shaped poly bushings and position the new sway bar on the frame with the mounting bolts that were removed in **STEP ONE**. **Leave loose at this time to allow for adjustment later.** (See photos (2 & 3) notice how your new sway bar will mount around the steering components on some models it may be a close fit ).
5. Install the end link assemblies through the coined ends of the anti sway bar. Tighten locknuts just enough so that the poly bushings start to bulge. **Do not over tighten.**
6. Tighten the frame bolts to the factory specifications. Be sure that all bolts are tightened to specifications. Re-check your installation, check for clearance on all undercarriage components; wiring, exhaust, springs, fuel and brake lines.
7. Turn wheels full lock left and then right, check for clearance on tires, wheels and steering components (tie rods).
8. After one week of driving recheck your installation. Re-check on regular monthly basis thereafter.

**ATTENTION INSTALLER: BE SURE THAT THE CUSTOMER RECEIVES THIS INSTRUCTION SHEET, ALL IMPORTANT NOTE CARDS AND THE WARRANTY FORM**