





# Hellwig PRODUCTS.com

559-734-7451 800-367-5480 FAX 559-734-7460

## INSTALLATION INSTRUCTIONS FRONT STABILIZER BAR 1979-93 FORD MUSTANG

Thank you for purchasing a quality Hellwig Product.

PLEASE READ THIS INSTRUCTION SHEET COMPLETELY BEFORE STARTING YOUR INSTALLATION

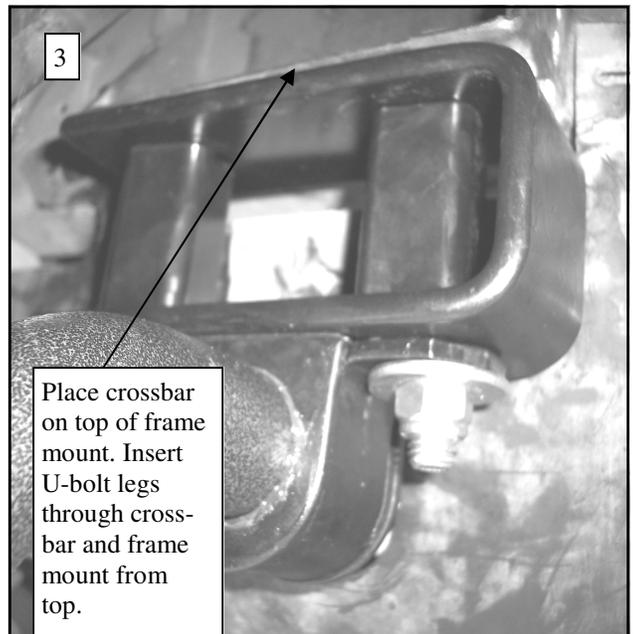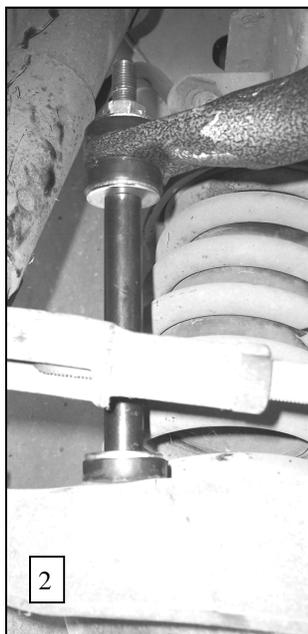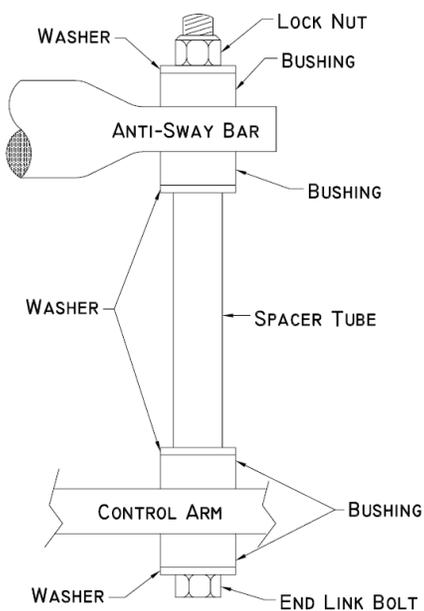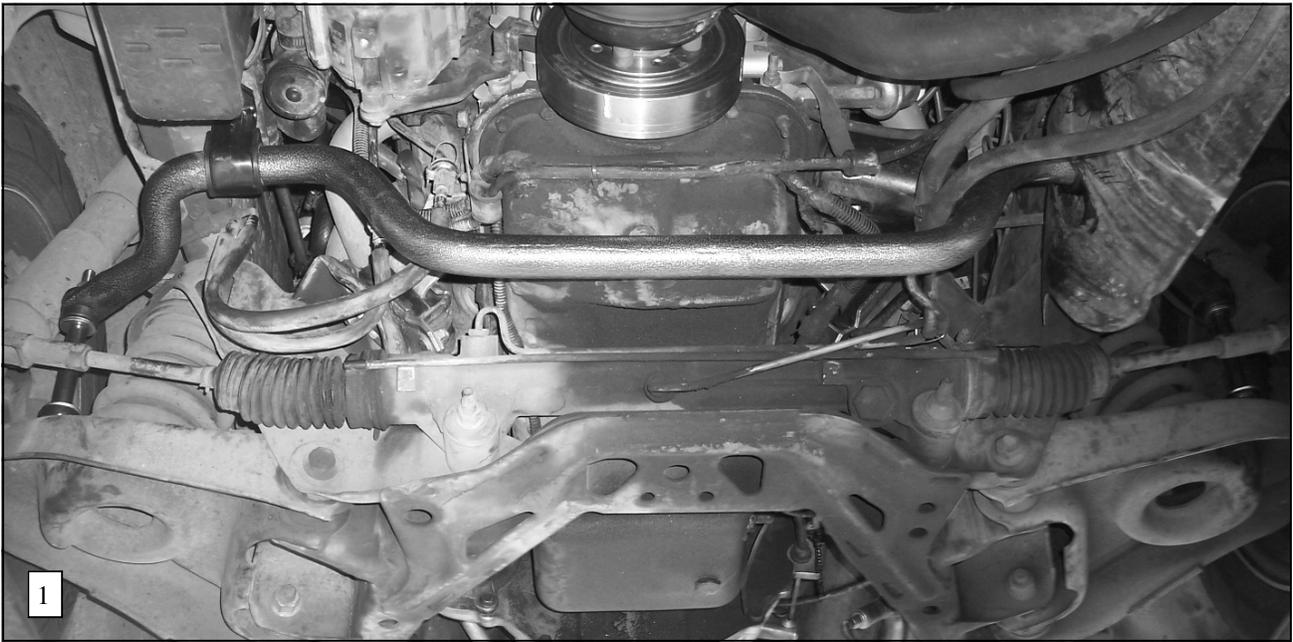

# Hellwig PRODUCTS.com

559-734-7451 800-367-5480 FAX 559-734-7460

## TORQUE TABLE

**BOLT SIZE:** 3/8" = 20-30 ft. lbs. – 7/16" = 35-45 ft. lbs. – 1/2" = 50-70 ft. lbs. – 9/16" = 70-90 ft. lbs.

**SAFETY: BEFORE STARTING YOUR INSTALLATION, BE SURE TO SET PARKING BRAKE AND CHOCK TIRES.**

**NOTE: TO EASE INSTALLATION AND TO PROPERLY ADJUST THE BAR, THE WEIGHT OF THE VEHICLE MUST BE ON THE SUSPENSION, AS IF DRIVING DOWN THE ROAD. DO NOT RAISE VEHICLE BY THE FRAME.**

1. Remove the factory mounted front sway bar and mounting hardware.
2. Lubricate and install the D-shaped poly bushings on the sway bar in the position that they will be mounted on the vehicles frame. Attach U-plates to bushings as shown in PHOTO THREE (3).
3. Place cross bar on top of frame mount and align with holes in frame. Insert U-bolt legs through holes in crossbar and frame mount. Attach u shaped plate and spacers as shown in PHOTO THREE (3),
4. Raise the sway bar up to the frame and attach using the U-plates and the mounting hardware as shown in PHOTO THREE (3). Leave loose at this time to allow for adjustment later. SEE PHOTO ONE (1).
5. Assemble the end link assemblies as per diagram. Install the end links on the lower control arms of the vehicle.
6. Raise the arms of the sway bar over the end links. Install the end links on the arms of the sway bar. Tighten until the poly bushings start to bulge. Do not over tighten or damage can result to the poly bushings. SEE PHOTO TWO (2).
7. With the sway bar centered and the end links are as straight up and down as possible—torque the frame mounting bolts to specifications.
8. Bounce the vehicle and check for clearance on all under carriage components. Make sure that all mounting are securely tightened.
9. After one week of driving recheck your installation readjust if necessary . Recheck your installation on a regular basis thereafter.

**ATTENTION INSTALLER: BE SURE THAT THE CUSTOMER RECEIVES THIS INSTRUCTION SHEET, ALL IMPORTANT NOTE CARDS AND THE WARRANTY FORM**

### **Maintenance and Inspection:**

Your Hellwig Suspension Product is built to last. However, as with all vehicle systems, it requires routine inspection. Inspect your Hellwig installation looking for secure hardware and tight fitting brackets and bushings. If you do not perform this inspection, have your professional mechanic inspect as described.