


# Hellwig PRODUCTS.com

559-734-7451 800-367-5480 FAX 559-734-7460

## INSTALLATION INSTRUCTIONS FRONT STABILIZER BAR

Thank you for purchasing a quality Hellwig Product.

PLEASE READ THIS INSTRUCTION SHEET COMPLETELY BEFORE STARTING YOUR INSTALLATION

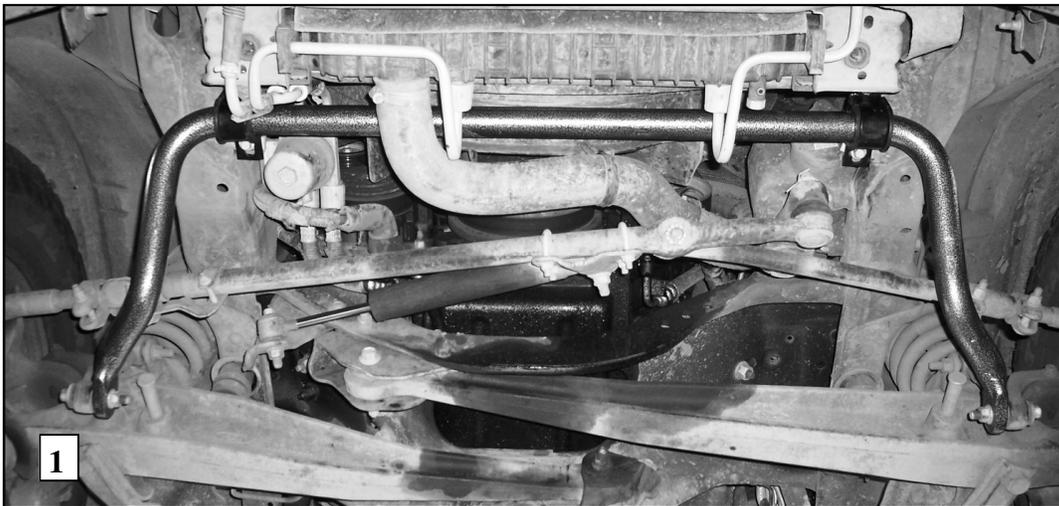

# Hellwig PRODUCTS.com

559-734-7451 800-367-5480 FAX 559-734-7460

## TORQUE TABLE

BOLT SIZE: 3/8" = 20-30 ft. lbs. : 7/16" = 35-45 ft. lbs. : 1/2" = 50-70 ft. lbs. : 9/16" = 70-90 ft. lbs

**SAFETY: BEFORE STARTING YOUR INSTALLATION, BE SURE TO SET PARKING BRAKE AND CHOCK TIRES.**

**NOTE: TO EASE INSTALLATION AND TO PROPERLY ADJUST BAR, THE WEIGHT OF THE VEHICLE MUST BE ON THE SUSPENSION, AS IF DRIVING DOWN THE ROAD. DO NOT RAISE VEHICLE BY FRAME.**

**NOTE: THIS ANTI SWAY BAR IS DESIGNED TO REPLACE THE FACTORY MOUNTED SWAY BAR USING THE FACTORY END LINKS AND MOUNTING HARDWARE FOR THE U-PLATES AND THE FACTORY END LINKS.**

1. Remove the factory installed sway bar. Leave the end links attached to the vehicle and keep the hardware as they will be reused.
2. Lubricate the inside of the D-shaped bushings and place them on the Hellwig sway bar in approximately the same locations as on the stock bar.
3. Attach the bar to the factory end links using the factory hardware.
4. Swing the bar up and use the Hellwig U-plates and factory hardware to bolt the bar loosely in the stock location.
5. Center the bar and then torque all bolts to specified values.
6. Bounce the vehicle with the wheels straight and full lock left and right to make sure there is plenty of clearance between the bar and any steering, oil pan, fuel lines, electrical lines, etc.
7. Test drive the vehicle and then recheck the installation. Check the installation periodically from then on.

**ATTENTION INSTALLER: BE SURE THAT THE CUSTOMER RECEIVES THIS INSTRUCTION SHEET, ALL IMPORTANT NOTE CARDS AND THE WARRANTY FORM**

### **Maintenance and Inspection:**

Your Hellwig Suspension Product is built to last. However, as with all vehicle systems, it requires routine inspection. Inspect your Hellwig installation looking for secure hardware and tight fitting brackets and bushings. If you do not perform this inspection, have your professional mechanic inspect as described.