


HELLWIG INSTALLATION INSTRUCTIONS

FACTORY AND GENERAL OFFICES • 16237 AVENUE 296, VISALIA, CA 93291 • (209) 734-74


JEEP CHEROKEE MINI REAR (Anti-Sway Bar)



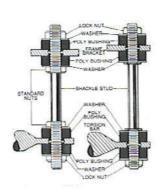



TORQUE RATINGS

3/8 Inch ... 35 ft. lbs.
7/16 Inch ... 45 ft. lbs.
1/2 Inch ... 75 ft. lbs.
9/16 Inch ... 90 ft. lbs.
5/8 Inch ... 120 ft. lbs.

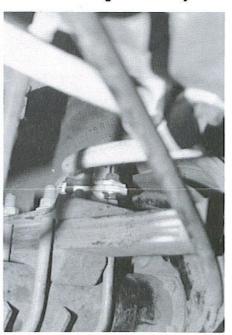

2

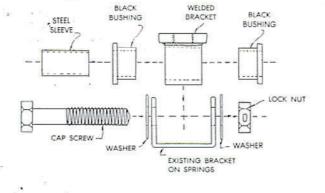

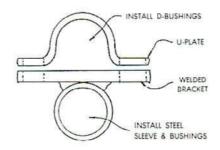

NOTE: This unit is designed to replace the factory installed rear anti-sway bar.

- Remove the factory installed rear anti-sway bar and all mounting hardware, the bolts used to mount the U-plates to the frame will be reinstalled in step 3.
- 2. Position the bar above the rear axle so that the hump and arms are toward the rear the same as the factory bar removed in step 1.
- 3. Place the D-shaped poly bushings on the bar in the same location as on the factory bar at the frame, install the U-plates over the bushings and mount them to the frame using the bolts removed in step 1. Leave loose at this time. (See Photo #1)
- Install the black bushings and steel sleeve into the welded bracket as in the diagram and mount to the factory U-shaped bracket located on top of the leaf spring upper plates. (See Diagram and Photo #2)
- 5. Place the remaining poly bushings on the ends of the bar and using the U-plates, mount them to the welded brackets installed in step 4. Leave loose at this time. (See Photo #2)
- 6. Before tightening the mounting hardware be sure not to pinch or damage any brake lines, hoses or wiring.
- 7. Bounce the vehicle checking for clearance on all undercarriage componets, the bar should not come into contact with any part of the undercarriage. Due to a slight difference in the exhaust and parking brake cable hanger brackets it may be necessary to bend one of these brackets slightly to get the proper clearances.
- 8. Recheck your installation after one week of driving and every thirty (30) days thereafter.

ATTENTION INSTALLER: Be sure the customer receives this instruction sheet, all important note cards, warning cards and the warranty form.

Kit-7568