

Hellwig PRODUCTS.com

559-734-7451 800-367-5480 FAX 559-734-7460


INSTALLATION INSTRUCTIONS

Spacer Kit 7799

Silverado, Sierra with 6 speed Auto

Thank you for purchasing a quality Hellwig Product.

PLEASE READ THIS INSTRUCTION SHEET COMPLETELY BEFORE STARTING YOUR INSTALLATION

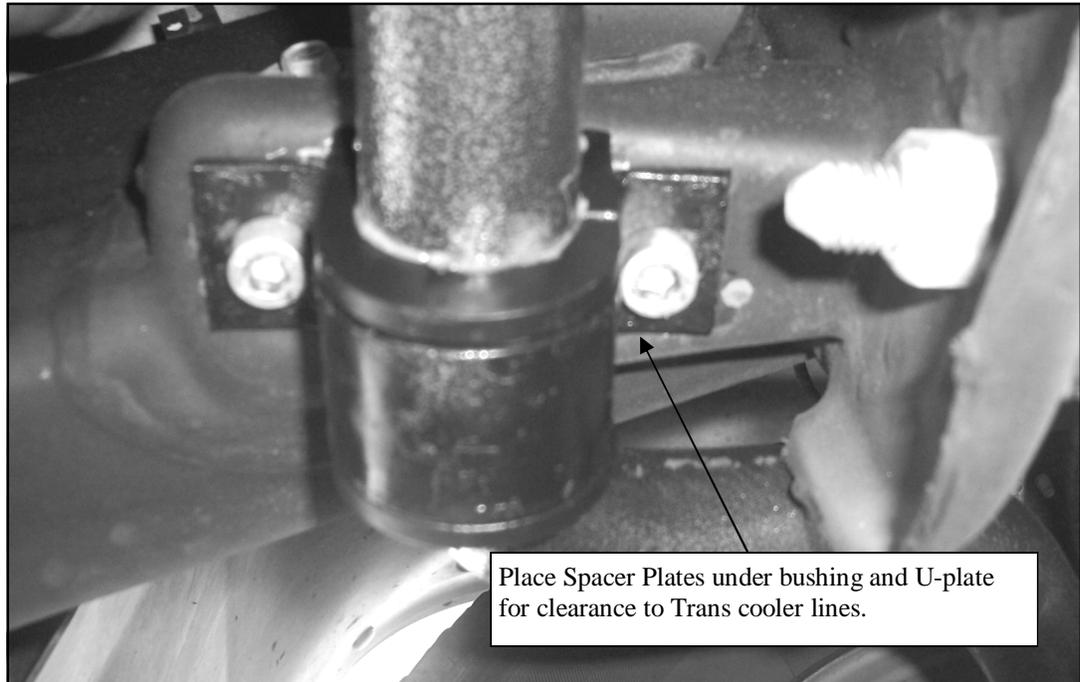

1. Follow 7685 instructions and keep factory mounting hardware attaching U-plate to frame.
2. To ease installation, loosely install sway bar to frame without spacer plates using factory hardware—make sure that sway bar does not contact transmission cooler lines. Then install spacer plates under bushing and U-plate on one side at a time. After spacers are installed, torque bolts to 20-25 ft-lb.
3. Ensure that sway bar will not contact the transmission cooler lines when suspension articulates. Have a helper bounce vehicle and check clearance of sway bar to cooler lines. If clearance is not sufficient, contact Hellwig Tech Support.

ATTENTION INSTALLER: BE SURE THAT THE CUSTOMER RECEIVES THIS INSTRUCTION SHEET, ALL IMPORTANT NOTE CARDS AND THE WARRANTY FORM