



## Super Stock Induction System® Installation Instructions: 2000-2004 Porsche Boxster / Boxster S H6-2.7L / 3.2L

	Kit Part #	55-10720	Tools Required	Part List:	
	Make:	Porsche	5/16" nut driver	1 Air filter (PN 30-10090)	i
	Model:	Boxster/ Boxster S	Slotted screwdriver	1 Intake tube	
	Engine:	2.7L / 3.2L H6		1 Coupler Straight 3.25"x2"	
	Year:	2000-2004		1 Coupler Straight 3"x2"	
				4 Clamp #052	
252 Granite St.					i i
Corona, CA 92878					i i
TEL: 951-493-7100					i i
www.aFepower.com					i i

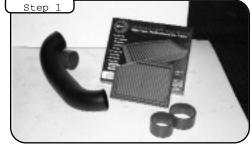

Complete kit. Make sure all components are present prior to beginning installation.

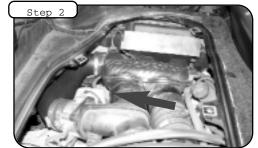

Complete stock intake.



In order to access engine compartment. Refer to your owner's manual for engine access instructions.



Disconnect hose clamps on both ends of the intake tube.



Carefully remove intake tube out of the engine compartment.



Install the smaller 3" coupler and clamps on the throttle body. Do not tighten clamps at this time.




Install the larger 3.25" coupler and clamps on the air box. Do not tighten clamps at this time.



Carefully install the new intake tube in the engine compartment. Tighten all four clamps securing intake tube.



Open the air filter access tray on the side of the air box and remove the OE air filter.

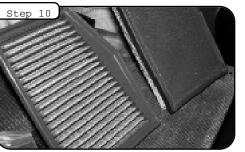

Install the new aFe high flow air filter and reinstall the air filter access tray.



Your installation is now complete . Make sure you tighten all clamps and check all electrical connections. Re check periodically

Note: Place the enclosed CARB EO sticker on or near the device on a smooth, clean surface. EO identification label is required to pass the smog inspection.

