

advanced FLOW engineering Turbo Inlet (with Factory Intake)

Instruction Manual P/N: 59-20001

Make: Hyundai	Model: Veloster N	Year: 2019-2022	Engine: L4-2.0L(t)
Make: Hyundai	Model: i30N	Year: 2019-2023	Engine: L4-2.0L(t)
Make: Hyundai	Model: Kona N	Year: 2022-2023	Engine: L4-2.0L(t)

(This turbo inlet will only fit with the factory air intake)



- Please read the entire instruction manual before proceeding.
- Ensure all components listed are present.
- If you are missing any of the components, call customer support at 951-493-7185.
- Ensure you have all necessary tools before proceeding.
- Do not attempt to work on your vehicle when the engine is hot.
- Retain factory parts for future use.


Label	Qty.	Description	Part Number
A	1	Aluminum Adaptor, Turbo	05-01531
B	1	Silicone Coupling	05-01533
C	1	Clamp #048	03-50007
D	1	Clamp #044	03-50019

Installation will require the following tools:

8mm and 10mm socket, extension, ratchet, pliers and flat-head screwdriver

Warranty Information available at: <https://afepower.com/contact#warranty>

Emissions Disclaimer: This product is not currently CARB exempt and is not available for purchase in California or for use on any vehicle registered with the California Department of Motor Vehicles.

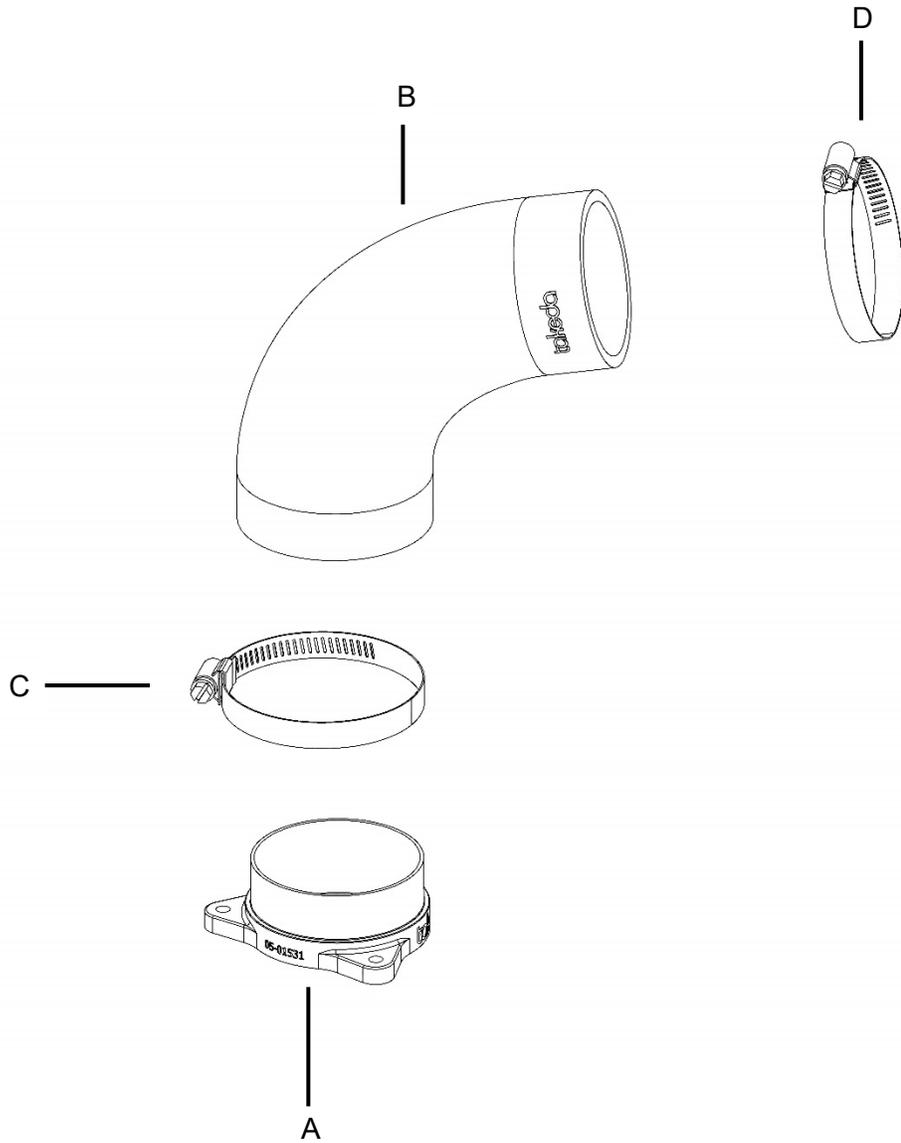

**Figure A****Refer to Figure A for Steps 1-3**

Step 1: Remove the engine cover by pulling upward on it.

Step 2: Using pliers, open the clamp securing the hose to the air intake tube, and then slide the clamp away from the intake tube. This clamp will be reused. Disconnect the rubber hose from the air intake tube.

Step 3: Loosen the clamp securing the factory intake tube to the factory air box using a 10mm socket and ratchet.

**Figure B****Refer to Figure B for Steps 4-6**

Step 4: Using pliers, open the clamps securing the small hoses to the air intake tube toward the firewall.

Slide the clamps away from the tube and disconnect the small rubber hoses from the intake tube. Those clamps will be reused.

Step 5: Loosen the clamp at the turbo inlet using a 10mm socket and ratchet.

Step 6: Remove the factory intake tube from the vehicle.

**Figure C****Refer to Figure C for Step 7**

Step 7: Locate and disconnect the wire harness that is attached to the metal bracket on the bottom side of the turbo inlet. The wire harness will slide off of the bracket when pulled towards the driver side.

**Figure D****Refer to Figure D for Steps 8-9**

Step 8: Remove the three 10mm bolts securing the factory turbo inlet to the Turbo. These bolts will be reused.

Step 9: Remove the factory turbo inlet. Be careful not to drop or damage the turbo inlet gasket. The gasket will be reused for the installation of the Takeda Turbo Inlet.



Figure E

Refer to Figure E for Steps 10-11

Step 10: Using a 10mm nut driver or socket, remove the wire harness bracket from the factory turbo inlet.

Step 11: Transfer the bracket and bolt to the Takeda turbo inlet. Secure it as shown.

**Figure F****Refer to Figure F for Steps 12-13**

Step 12: Install the Takeda turbo inlet onto the turbo. Slide the factory gasket between the adaptor and turbo. Secure it using the three 10mm bolts removed at Step 8.

Step 13: Reconnect the wire harness to the bracket on the turbo inlet.

**Figure G****Refer to Figure G for Steps 14-15**

Step 14: Install the Takeda coupling onto the Takeda turbo inlet. Make sure to align the notch in the coupling with the aluminum adaptor to ensure correct orientation.

Step 15: Install the clamps on the coupling, but do not tighten the clamps yet.



Figure H

Refer to Figure H for Step 16

Step 16: Remove the factory coupling from the factory air intake tube.

**Figure I****Refer to Figure I for Step 17**

Step 17: Install the factory air intake tube into the takeda coupling and reconnect the other end to the factory air intake box. Make sure the tube and coupling are correctly aligned, then tighten all clamps.



Figure J

Refer to Figure J for Steps 18-20

Step 18: Reconnect the three hoses that were disconnected during Step 2 and 4.

Step 19: Reinstall the engine cover.

Step 20: Make sure all clamps and connections are secured. Your installation is now complete. Thank you for choosing Takeda USA.



advanced FLOW engineering, inc.

Corona, CA 92879

<https://afepower.com/contact>