



# Installation

**Kit P/N:**  
TR-3008P (Polished)  
TR-3008B (Wrinkle Black)

**Make:**  
Infiniti  
**Model:**  
G37 Coupe (Dual intake)  
Q60 (Dual Intake)

<b>Year:</b>	<b>Engine:</b>
'08-'13	V6-3.7L
'14-'15	V6-3.7L

### Parts Identification: Passenger side

- 1 Air filter ( Pro Dry S™ TF-9009D)
- 1 Intake tube, short ram T5-3008P1
- 1 Housing T5-3008B3
- 1 Coupler, straight (05-01107)
- 2 Clamp, #044
- 1 Screw, M6 x1 x 20
- 1 Washer, flat M6
- 2 Screws, M4 x 8
- 1 5/8" hose @ 2" L

**Note:** Please read instructions before installation and have tools ready.

### Tools Required:

- 10mm socket or wrench
  - Ratchet w/ extension
  - Phillips screw driver
  - Flat head screw driver
  - 5/16" nut driver
  - Pliers
- 06-80309 Pg1

1



2



Complete Stock passenger side intake. Please disconnect battery terminals before installation.

3



With 10mm socket or wrench, loosen the 5 bolts holding in engine cover and remove.

4



Disconnect MAF sensor harness. With 10mm socket or wrench loosen bolt holding in air box.

5



Loosen clamps on intake using 5/16" nut driver.

6



Disconnect the crank case line from the intake tube using pliers.

7



Remove complete intake out of vehicle.

8



Remove MAF sensor from stock intake.

9



Install MAF sensor to new tube using provided M4 screws. Attach coupling with clamps to tube.



# Accessories



Replacement Filter P/N:  
TF-9009D




Pre Filter P/N:  
TP-7011B

Note: Filter Cleaning: When cleaning your Pro Dry S™ filter, be sure to use only "Restore Kit" (Takeda P/N: TP-7015C Pro Dry S™ cleaner only.)

Pro Dry S™ cleaning:  
see cleaning instruction sheet TF-9000I.

For replacement part(s) or "Restore Kit" please log on to [takedausa.com](http://takedausa.com)  
P.O. Box 1719 Corona CA, 92878

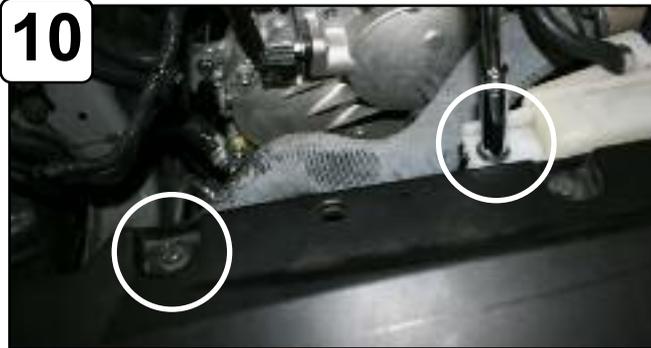

10 With 10mm socket or wrench loosen the 2 bolts on radiator reservoir and support.



11 Install heat shield and secure to radiator support and tighten using bolts from previous step.



12 Loosen bolt on engine securing harness bracket.



13 First re-connect MAF sensor harness. Install into vehicle and position tube. Do not tighten clamps.



14 Secure tab to engine and tighten using provided screw and flat washer.



15 Tighten all clamps using 5/16" nut driver. Attach the crank case line using the provided 5/8" hose.



16 Install air filter and tighten using 5/16" nut driver.



17 Your passenger side is now complete. Continue to page 3 for driver side installation..

Place the included CARB EO sticker on or near the device on a smooth, clean surface. E.O. identification label is required in passing the smog check inspection.



# Installation

**Kit P/N:**  
 TR-3008P (Polished)  
 TR-3008B (Wrinkle Black)

**Make:**  
 Infiniti

<b>Model:</b>	<b>Year:</b>	<b>Engine:</b>
G37 Coupe (Dual intake)	'08-'13	V6-3.7L
Q60 (Dual Intake)	'14-'15	V6-3.7L

## Parts Identification: Driver side

- 1 Air filter ( Pro Dry S™ TF-9009D)
- 1 Intake tube, short ram T5-3008P2
- 1 Coupler, straight (05-01107)
- 2 Clamp, #044
- 1 Screw, M6 x1 x 20
- 1 Washer, flat M6
- 2 Screws, M4 x 8
- 1 5/8" hose @ 2" L

**Note: Please read instructions before installation and have tools ready.**

### Tools Required:

- 10mm socket or wrench
  - Ratchet w/ extension
  - Phillips screw driver
  - Flat head screw driver
  - 5/16" nut driver
  - Pliers
- 06-80309 Pg3



Complete Stock driver side intake.



With 10mm socket or wrench, loosen the bolt holding in air box.



Disconnect MAF sensor harness. Loosen clamps using 5/16" nut driver.



Disconnect the crank case line using pliers.



Remove complete intake out of vehicle.



Remove MAF sensor from stock intake.



Install MAF sensor to new tube using provided M4 screws.



Attach coupling with clamps to tube.



takeda

