



# Installation

### Kit P/N:

TR-4202P (POLISHED)  
TR-4202B (WRINKLE BLACK)

### Make:

Mitsubishi

### Model:

Lancer EVO X

### Year:

'08-'13

### Engine:

L4-2.0L turbo

### Parts Identification:

- 1 Air filter ( *Pro Dry 5™* TF-9007D)
- 1 Intake tube, 05-T4202P1
- 1 Housing, 05-T4202B2
- 1 Adaptor, 3-angle
- 1 Coupling, straight 05-00664
- 1 Coupling, reducer 05-00735
- 1 Clamp #072
- 3 Clamp #048
- 1 Rubber trim @ 15"L
- 1 Screw, hex M6
- 1 Flat washer M6
- 3 Screw, button head M6
- 1 Grommet, rubber

### Tools Required:

- 10mm socket or wrench
- Ratchet w/ extension
- Flat head screw driver
- 5/16" nut driver
- 4mm allen key

*Note: Read instructions before installation and have tools ready.*



With 10mm socket or wrench loosen the bolt holding bottom half of air box.



Lift and remove bottom half of air box out of vehicle.



Complete Stock intake. *Please disconnect battery terminals before installation.*



Pull back MAF sensor from intake tube.



Install filter adaptor to housing and secure using button head screws provided. Tighten using 4mm allen key. Attach rubber trim to top of housing.



Disconnect MAF sensor harness. Loosen clamp using 10mm socket or wrench.



Un-clip upper half of air box and remove.



Install housing into vehicle and position.



# Accessories



Replacement Filter P/N:  
TF-9007D



Pre Filter P/N:  
TP-7011B

Note: Filter Cleaning: When cleaning your **Pro Dry S™** filter, be sure to use only "Restore Kit" (Takeda P/N: TP-7015C **Pro Dry S™** cleaner only.)

**Pro Dry S™** cleaning:  
see cleaning instruction sheet TF-9000I.

For replacement part(s) or "Restore Kit" please log on to [takedausa.com](http://takedausa.com)  
P.O. Box 1719 Corona CA, 92878



10

With provided washer and screw tighten down housing using 10mm socket or wrench.



11

Remove MAF sensor from air box using 10mm socket or wrench.



12

Install MAF sensor back to intake tube.



13

Attach couplers with clamps to intake tube.




14

Install and position intake tube assembly to MAF sensor and adaptor.



15

Tighten clamps using 5/16" nut driver.

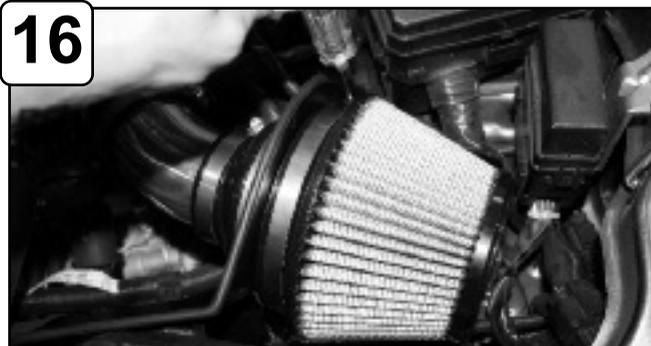

16

Install air filter and tighten using 5/16" nut driver.



17

Re-connect MAF sensor harness. Tighten intake clamp using 10mm socket or wrench.



18

The installation of your Takeda performance intake is now complete. Please check all components and re-tighten if necessary. Thank you for choosing Takeda!