




INSTALLATION INSTRUCTIONS

DPF-Back Exhaust

MAKE: Dodge
MODEL: RAM
YEAR: 2014-2018
ENGINE: V6-3.0L


49-42065-B
49-42065-P

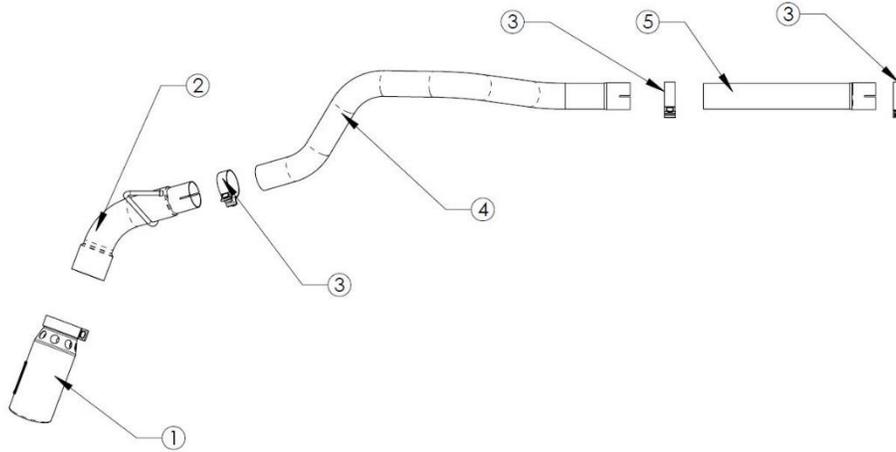

Item	Description	Part Number	Quantity
1	Exhaust Tip, Bolt-On Black	49T40501-B121	1
1	Exhaust Tip, Bolt-On Polished	49T40501-P121	1
2	Tailpipe	05-144717	1
3	Clamp, Band: 3"	05-41055	3
4	Over-Axle Tube	05-144716	1
5	Extension Pipe	05-144715	1

aFe POWER recommends professional installation on this product. Thoroughly inspect the aFe POWER exhaust system to make sure there is no damage from shipping (if damage is noted, immediately contact aFe POWER customer service). Allow time for your vehicle to cool down prior to installation. When working on your vehicle proceed with caution. Wear protective safety equipment; eye goggles and gloves to ensure a safe installation.

Install band clamps to proper torque specifications of 40-45 ft-lb.

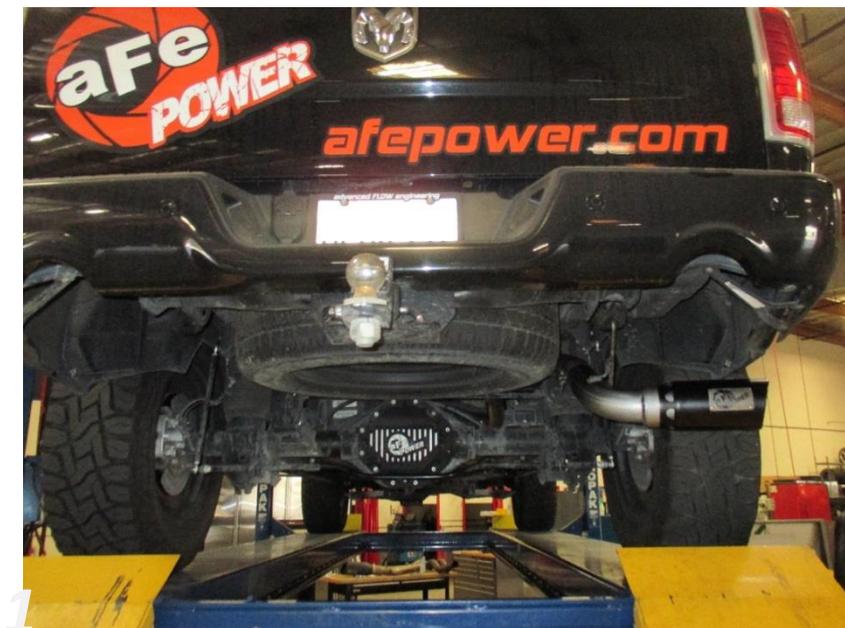



INSTALLATION INSTRUCTIONS

MAKE: Dodge
MODEL: RAM
YEAR: 2014-2018
ENGINE: V6-3.0L

DPF-Back Exhaust

49-42065-B
49-42065-P

1. **(Read instructions prior to installation.)** It is recommended to not fully tighten the exhaust until it has been fully installed. Leave loose for adjustability.
2. Secure vehicle on jack stands (refer to your manual for specified jack stand positions).
3. For faster installation, spread out the parts of the exhaust alongside your vehicle as shown in the diagram above.
4. Secure the stock exhaust with jack/stands.
5. Loosen the 15mm nut on the band clamp securing the OE exhaust to the DPF.
6. Remove the OE hangers from the factory isolation mounts.
7. Remove the OE exhaust.
8. Install the aFe POWER Cat-Back Extension Pipe using the supplied 3" band clamp.
Note: Special notch must in line with pin on OE exhaust.
9. Install aFe POWER Over-Axle section using the supplied 3" band clamp and sliding in hangers in factory isolation mounts.
Note: Do not tighten any of the band clamps at this moment.
10. Install aFe POWER Tailpipe using the supplied 3" band clamp and sliding the hanger in the factory isolation mounts.
11. Install tip and adjust aFe POWER DPF-Back for desired fit, once you are happy with the fitment you may now tighten down the band clamps.
12. Ensure that all the components of the aFe POWER exhaust system are aligned and are at a safe clearance from all wires, hoses, brake lines, body parts, and tires.
13. Start from the front of the aFe exhaust system and evenly tighten all clamps and fasteners.
14. Start the vehicle and check for any leaks. If any leaks are found, determine cause and repair as necessary.
15. Remove vehicle from jacks stands.
16. It is recommended to re-tighten all clamps and hardware after 50-100 miles.