



**CS-DBLT-1419
Rear Brake Line Tabs**

**Carli Suspension, Inc.
596 Crane St.
Lake Elsinore, CA 92530
888-992-2754**

Note

Please review the product instructions prior to attempting installation to ensure installer is equipped with all tools and capabilities necessary to complete the product installation. We recommend thoroughly reading the instructions at least twice prior to attempting installation.

Before beginning disassembly of the vehicle, check the "Parts Checklist" section of the instructions to ensure you've received all parts necessary to complete installation. Further, verify that the parts received are PROPER TO YOUR application (year range, motor, etc.) to avoid potential down-time in correcting potential discrepancies. Any discrepancies will be handled by Carli Suspension and the correcting products will be shipped UPS Ground.

Lifetime Warranty

Carli Suspension provides a limited lifetime product warranty against defects in workmanship and materials from date of purchase to the original purchaser for all products produced by Carli Suspension.

Proof of purchase (from the original purchaser only) will be required to process any warranty claims. Carli Suspension products must be purchased for the listed Retail Price reflected by the price listed on the Carli Suspension Website at the time of purchase. Carli Suspension reserves the right to refuse warranty claims made by any customer refusing or unable to present proof of purchase or presenting proof of purchase reflecting a price lower than Carli Suspension's Retail Price at the time the item was purchased.

Carli Suspension's Limited Lifetime Warranty excludes the following parts which are subject to wear: Bushings, Heim Joints, Uniballs, Limit Straps. Carli Suspension cannot warrant a product's cosmetic finish due to the varying extreme elements that may be encountered.

Parts Checklist



- Driver's Side Lower Control Arm Bracket
 - (Qty. 1) 5/16" x 3/4" Grade 8 Bolt
 - (Qty. 1) 5/16" Washer



- Driver's Side Control Arm Mount Bracket
 - (Qty. 2) 5/16" x 3/4" Grade 8 Bolt
 - (Qty. 3) 5/16" Washer
 - (Qty. 1) 5/16" C-Lock Nut
 - (Qty. 1) Insulated P-Clamp



- Differential Top-Mount 3-Prong Bracket
 - (Qty. 1) 5/16" x 3/4" Grade 8 Bolt
 - (Qty. 1) 5/16" Washer
 - (Qty. 1) M10 x 30mm Bolt
 - (Qty. 1) M10 Washer




- Passenger's Side Control Arm Bracket
 - (Qty. 1) 5/16" x 3/4" Grade 8 Bolt
 - (Qty. 1) 5/16" Washer



Installation Instructions

1. 13mm Socket - Remove the factory bolt securing the driver's side brake cable bracket to the passenger bracket.
2. 13mm Socket - Remove the bolt securing the passenger bracket to the driver's side lower control arm.

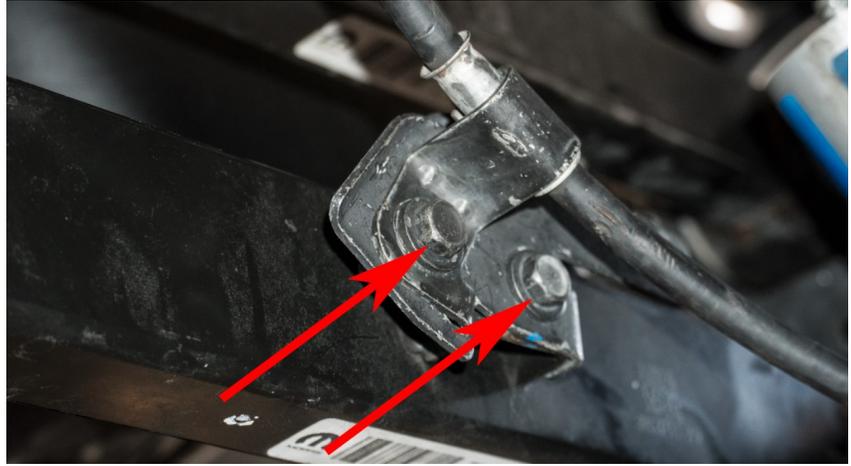

3. Remove the bracket from the passenger side cable as this will not be reused. To clarify, the bracket that connected the passenger's side brake cable to the driver's side lower control arm.



4. 15mm Socket - Remove the bolt securing the factory brake line tab to the top of the differential.



5. 13mm Socket - Remove the bolt securing the brake line bracket to the inside of the passenger's side control arm bracket.




6. Install Carli Bracket to the driver's side lower control arm using the factory bolt.
7. Use provided 5/16" x 3/4" bolt and washer to secure the factory brake cable bracket to the Carli bracket noting to install the factory index to the hole in the Carli Bracket.



8. Install the Carli Bracket to the rear, upper control arm mount. Slide the capture-nut end of the Carli bracket into the control arm bracket and secure in place using the provided 5/16" x 3/4" bolt and washer through the existing hole between the control arms.
9. With the bracket in place, use the provided Insulated P-Clamp and 5/16" x 3/4" bolt, washers and C-Lock Nut to secure the brake cable to the bracket.



10. Use the factory bolt and the provided M10 x 30mm bolt to secure the 3-prong bracket to the top of the differential. The bracket will offset downward with the capture nut threads facing up.
11. Use provided 5/16" x 3/4" bolt and washer to secure the factory brake cable bracket to the Carli bracket.

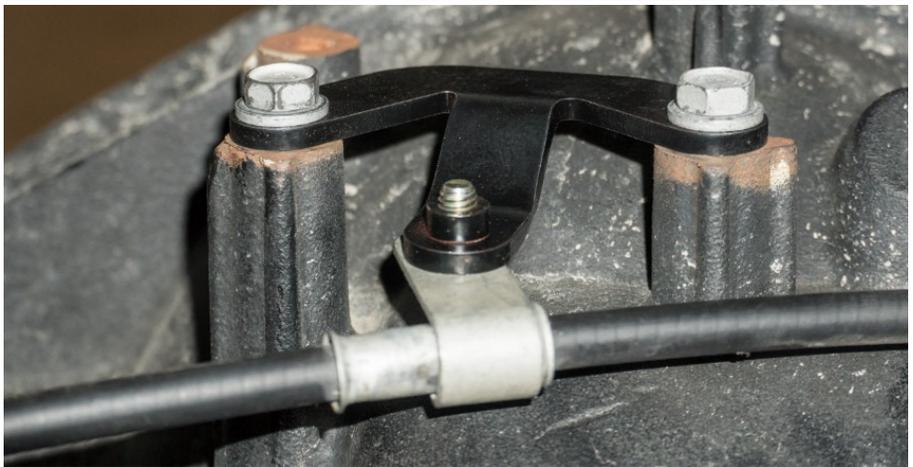

12. Use the Factory Bolt to secure the Carli Bracket to the Passenger-Side Inner Control Arm mount.
13. Use provided 5/16" x 3/4" bolt and washer to secure the factory brake cable bracket to the Carli bracket noting to install the factory index to the hole in the Carli Bracket.

