# **POLARIS XPEDITION ADV REAR WINDOWS**

## Thank you for choosing Rough Country for all your vehicle needs.

Please read instructions before beginning installation. Check the kit hardware against the kit contents shown below. Be sure you have all needed parts and know where they go.

If question exist, please call us @1-800-222-7023. We will be happy to answer any questions concerning this product. Check all fasteners for proper torque. Check to ensure for adequate clearance between all components. Periodically check all hardware for tightness.

KIT CONTENTS: 2 - Rear Window 15' - Rubber Seal TOOLS NEEDED: 10mm Socket 4mm Allen Wrench Box Cutter

#### **HARDWARE INCLUDED:**


8 - 6mm x 30mm Button Head Bolt

16 - 6mm Washer

8 - Nylon Washer

8 - 6mm Lock Nut

8 - 6mm x 40mm Button Head Bolt (Window / MOLLE combo)

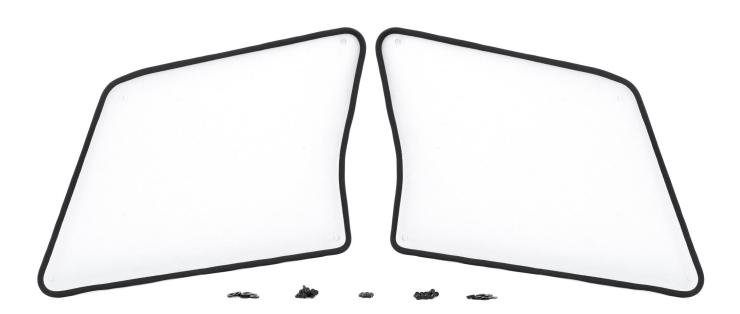

## **Torque Specs:**

s 10.9
9ft/lbs
23ft/lbs
5ft/lbs
'5ft/lbs
20ft/lbs
55ft/lbs
l0ft/lbs
5ft/ '5ft/ '0ft/ 55ft/



### **INSTALLATION INSTRUCTONS**

- 1. Cut the rubber seal in half with a box cutter. Install the supplied rubber seal around both of the rear windows.
- Install the rear window to the vehicle mounting locations using the supplied 6mm button head bolt, 6mm flat washer, two nylon washers, and 6mm lock nut. Tighten with a 4mm Allen wrench and 10mm socket. See Photo 1 and Photo 2.
- 3. Repeat for remaining three factory mounting locations and then repeat for other side of vehicle.





By purchasing any item sold by Rough Country, LLC, the buyer expressly warrants that he/she is in compliance with all applicable, State, and Local laws and regulations regarding the purchase, ownership, and use of the item. It shall be the buyers responsibility to comply with all Federal, State and Local laws governing the sales of any items listed, illustrated or sold. The buyer expressly agrees to indemnify and hold harmless Rough Country, LLC for all claims resulting directly or indirectly from the purchase, ownership, or use of the items.