

FORD 2017-25 F-250/F-350 Rear Air Spring Kit

Thank you for choosing Rough Country for all your vehicle needs.

Please read instructions before beginning installation. Check the kit hardware against the kit contents shown below. Be sure you have all needed parts and know where they go.

If question exist, please call us @1-800-222-7023. We will be happy to answer any questions concerning this product.

Check all fasteners for proper torque. Check to ensure for adequate clearance between all components.

Periodically check all hardware for tightness.

▲ NOTICE Airbags will not increase the maximum load capacity.

Kit Contents:

Pass Side Upper Bracket x1
Dr Side Upper Bracket x1
Lower Bracket Tops x2
Lower Brackets x2
Inflation Valves x2
Lower Strap x2
90° Fittings x2
Air Bags x2
Air Line x20ft

Tools Needed:

14mm Socket/Wrench
15mm Socket/Wrench
9/16" Socket/Wrench
7/32" Allen Wrench

Hardware Included:

3/8" x 1-1/4" Flat Head Bolts x4
3/8" x 3/4" Flat Head Bolts x4
3/8" x 4" Carriage Bolts x4
3/8" x 1" Hex Bolts x12
3/8" Flat Washers x12
3/8" Lock Washers x4
3/8" Flange Nuts x16
3/8" Clip Nuts x4
Zip Ties x6



Torque Specs:

Size	Grade 5	Grade 8	Size	Class 8.8	Class 10.9
5/16"	15 ft/lbs	20ft/lbs	6MM	5ft/lbs	9ft/lbs
3/8"	30 ft/lbs	35ft/lbs	8MM	18ft/lbs	23ft/lbs
7/16"	45 ft/lbs	60ft/lbs	10MM	32ft/lbs	45ft/lbs
1/2"	65 ft/lbs	90ft/lbs	12MM	55ft/lbs	75ft/lbs
9/16"	95 ft/lbs	130ft/lbs	14MM	85ft/lbs	120ft/lbs
5/8"	135ft/lbs	175ft/lbs	16MM	130ft/lbs	165ft/lbs
3/4"	185ft/lbs	280ft/lbs	18MM	170ft/lbs	240ft/lbs

▲ NOTICE



Min/Max psi for Airbags:

5-100 psi




INSTALLATION INSTRUCTIONS


1. Jack up the rear of the vehicle and place on jack stands. Remove the rear wheels.
2. Remove the rear bump stop using a 15mm socket/wrench. **See Photo 1.**
3. Remove the clip nuts from the frame. **See Photo 2.**

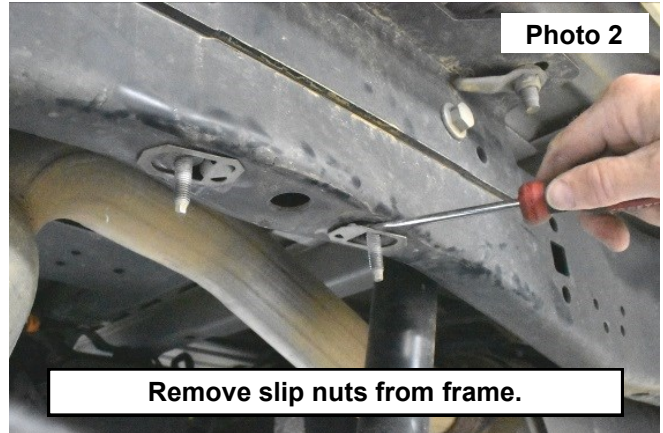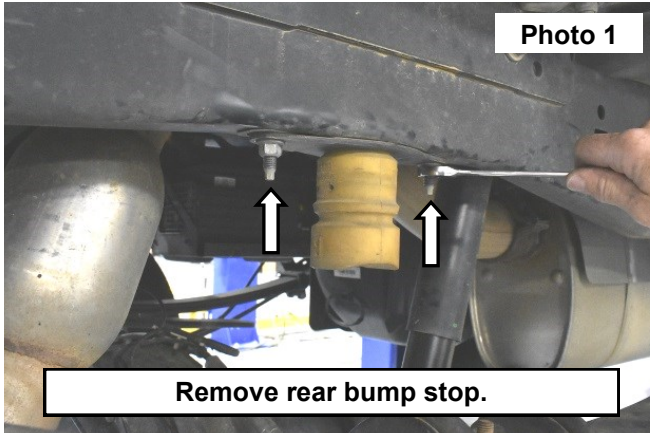



4. Install the supplied clip nuts in the stock location. **NOTE: Be sure to fully seat the clip nuts. See Photo 3.**
5. Install the 90° fitting in the top of the air bag using a 14mm wrench. **See Photo 4.**

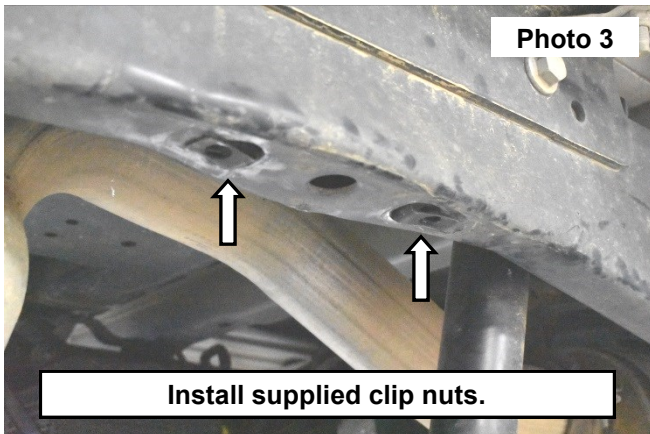


6. Place the top bracket on the air bag and install the supplied 3/8" x 3/4" flat head bolts using a 7/32" Allen wrench. **See Photo 5. NOTE: The Bracket will have a "D" or "P" marked for driver and passenger side.**
7. Measure the factory block height. 1" block, uses the bottom hole of the lower bracket. 2" block, uses the middle hole. 3" block, uses the top hole. **See Photo 6.**

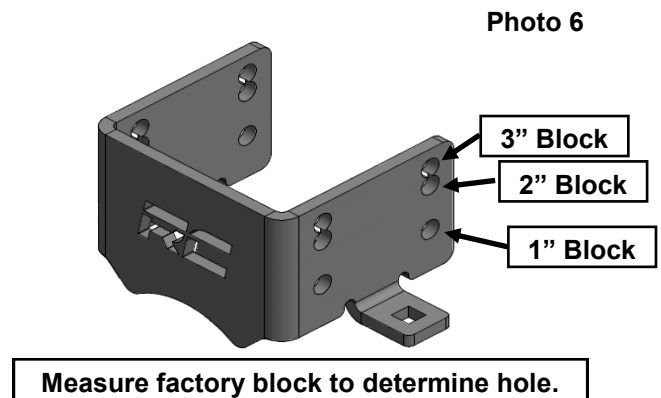

8. Assemble the two lower brackets, using holes determined in previous step, with the supplied 3/8" x 1" bolts, nuts, and flat washers using a 9/16" socket/wrench. **See Photo 7.**
9. Install the lower bracket assembly to the bottom of the air bag with the supplied 3/8" x 1" bolts, lock washers, and flat washers using a 9/16" socket/wrench. **See Photo 8.**

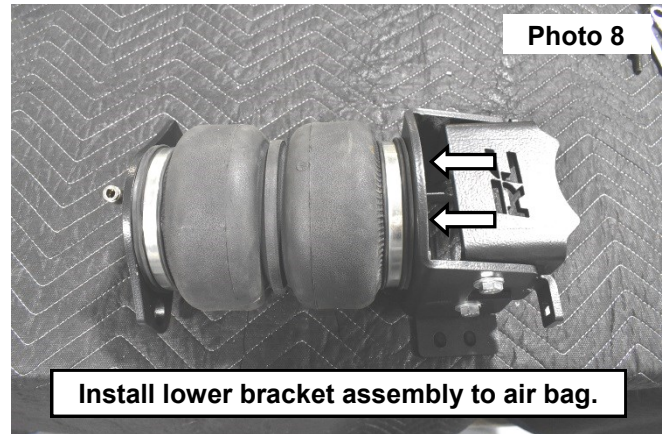
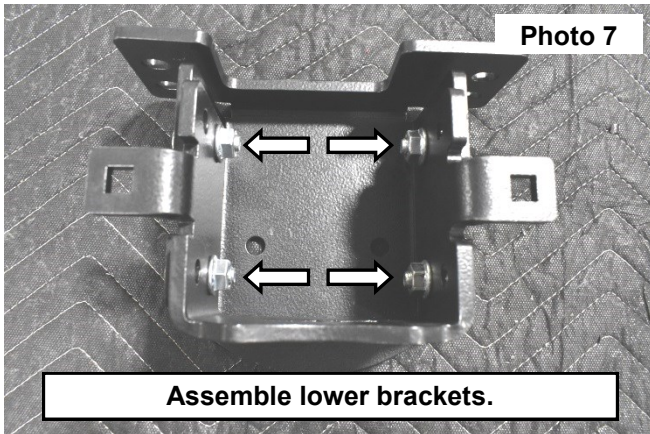


10. Place the air bag assembly on the rear axle inside of the leaf springs. **See Photo 9.**
11. Secure the air bag assembly to the axle using the lower strap and supplied 3/8" x 4" carriage bolts and 3/8" flange nuts using a 9/16" wrench. **See Photo 10 and Photo 11.**

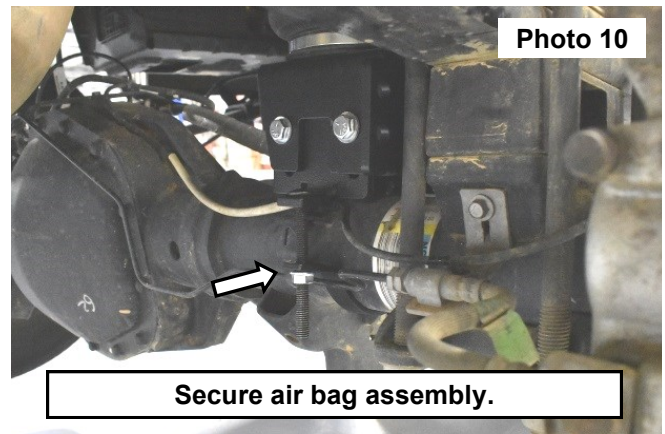

NOTE: Do not overtighten or strap may bend.


12. Install the supplied 3/8" U-bolts around the stock U-bolts with the supplied 3/8" flange nuts using a 9/16" socket/wrench. **See Photo 12. NOTE: Do not overtighten or stock U-bolts may bend.**

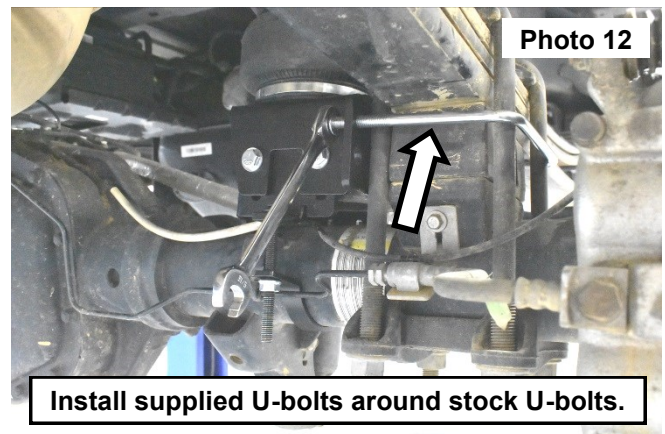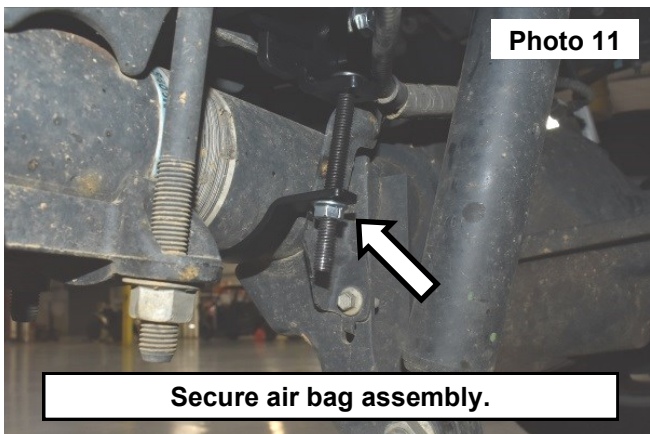

13. Install the top bracket to the frame with the supplied 3/8" x 1-1/4" flat head bolts using a 7/32" Allen wrench.

NOTE: Be sure the clip nuts are fully seated in the frame for the bolts to align. See Photo 13.

14. Remove the license plate screws. **See Photo 14.**

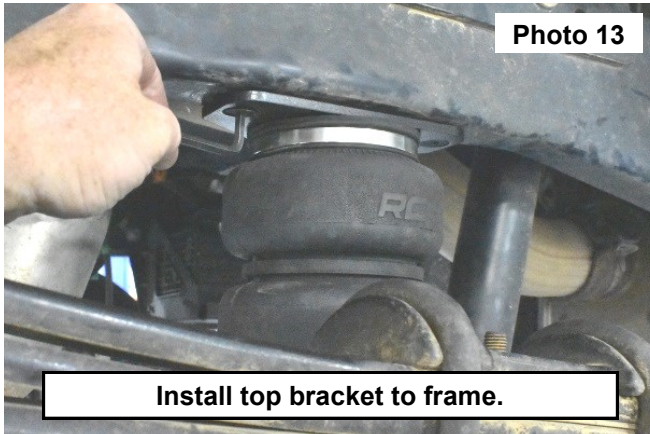

Install top bracket to frame.




Remove license plate screws.

15. Install inflation valves in the stock screw locations. **See Photo 15.**

16. Install the supplied 1/4" DOT air line in the inflation valve and 90° fitting. **See Photo 16 and Photo 17.**

NOTE: Max/Min for Airbags is 5-100 psi.


17. Put on wheels and lower.

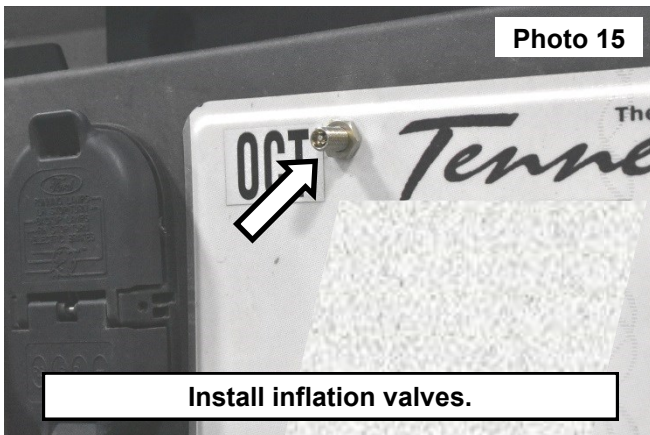

Install inflation valves.



Install DOT Air Line in inflation valve.

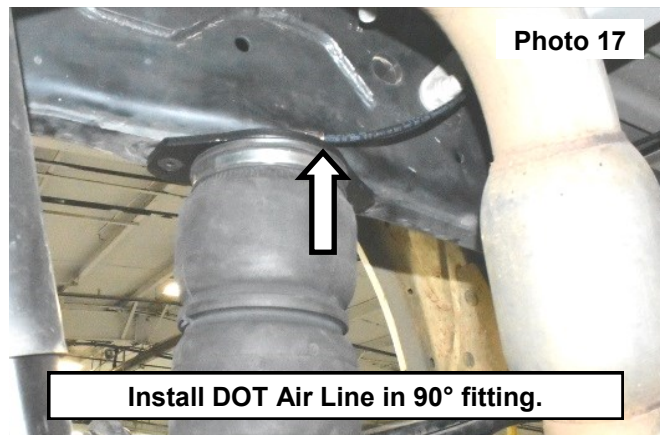

Install DOT Air Line in 90° fitting.

By purchasing any item sold by Rough Country, LLC, the buyer expressly warrants that he/she is in compliance with all applicable, State, and Local laws and regulations regarding the purchase, ownership, and use of the item. It shall be the buyers responsibility to comply with all Federal, State and Local laws governing the sales of any items listed, illustrated or sold. The buyer expressly agrees to indemnify and hold harmless Rough Country, LLC for all claims resulting directly or indirectly from the purchase, ownership, or use of the items.

