

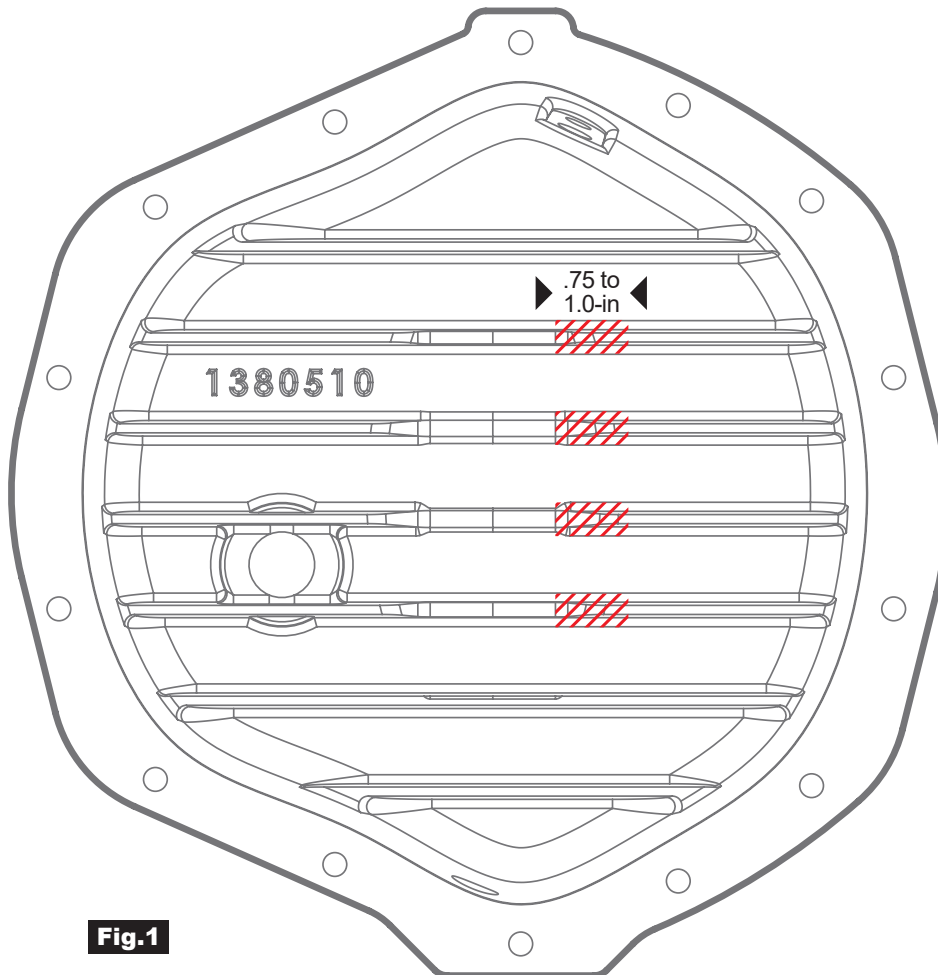


Fig.1

NOTICE:

In some Dodge/RAM 2500 applications, the internal baffles might come in contact with the tone ring.

*Prior to tightening the bolts, make sure the tone ring in your Dodge/RAM is cleared. If more clearance is needed, extend the cutout in the four baffles to the driver side by 0.75-1.0 inch (**Fig1**).*