

ROUGH COUNTRY

Ram 2019- Up 1500 Fog Light Kit

Thank you for choosing Rough Country for all your vehicle needs.

Please read instructions before beginning installation. Check the kit hardware against the kit contents shown below. Be sure you have all needed parts and know where they go.

If question exist, please call us @1-800-222-7023. We will be happy to answer any questions concerning this product.

Check all fasteners for proper torque. Check to ensure for adequate clearance between all components.

Periodically check all hardware for tightness.

Kit Contents:

3.5" Round LED Light Kit x1
Driver Side Light Bracket x1
Pass Side Light Bracket x1

Tools Needed:

4mm Allen Wrench
7mm Socket
8mm Socket

Hardware Included:

6mm x20mm Button Head Bolt x4
6mm Flat Washer x4
6mm Body Clips x4




Torque Specs:

Size	Grade 5	Grade 8	Size	Class 8.8	Class 10.9
5/16"	15 ft/lbs	20ft/lbs	6MM	5ft/lbs	9ft/lbs
3/8"	30 ft/lbs	35ft/lbs	8MM	18ft/lbs	23ft/lbs
7/16"	45 ft/lbs	60ft/lbs	10MM	32ft/lbs	45ft/lbs
1/2"	65 ft/lbs	90ft/lbs	12MM	55ft/lbs	75ft/lbs
9/16"	95 ft/lbs	130ft/lbs	14MM	85ft/lbs	120ft/lbs
5/8"	135ft/lbs	175ft/lbs	16MM	130ft/lbs	165ft/lbs
3/4"	185ft/lbs	280ft/lbs	18MM	170ft/lbs	240ft/lbs




INSTALLATION INSTRUCTIONS


1. Remove the (2) outer bolts in the fender liner using an 8mm socket. **See Photo 1.**
2. Remove the (2) inner bolts inside of the fender liner using an 8mm socket. **See Photo 2.**

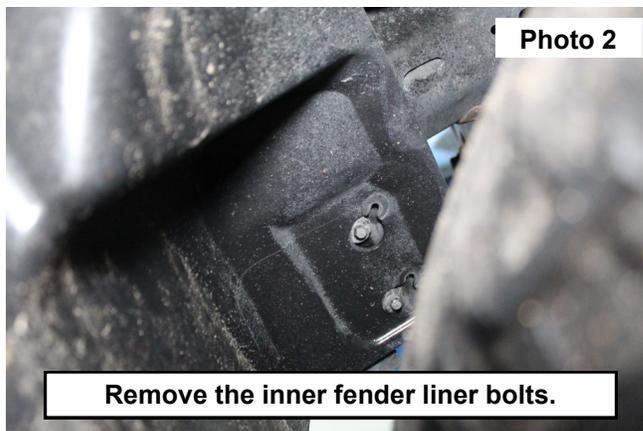


3. Remove the (3) bolts that secure the OE fog light to the bumper using a 7mm socket. **See Photo 3.**
4. Unplug the OE fog light and remove from the vehicle. **See Photo 4.**

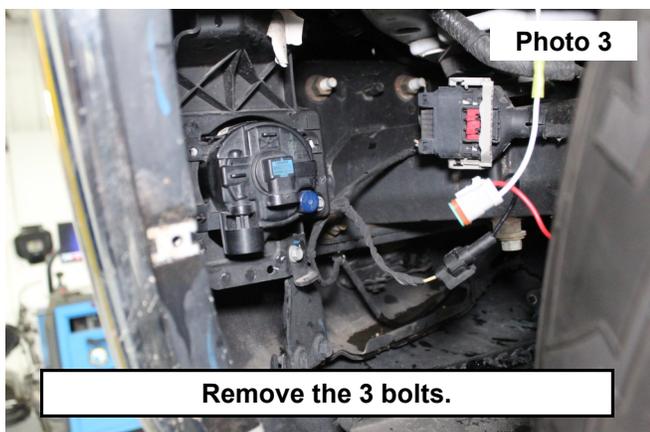


5. Install (2) of the 6mm body clips onto the round LED fog light bracket. **See Photo 5.**
6. Locate the drivers side bracket, the bracket will have a D cut into the back of the bracket. **See Photo 6.**

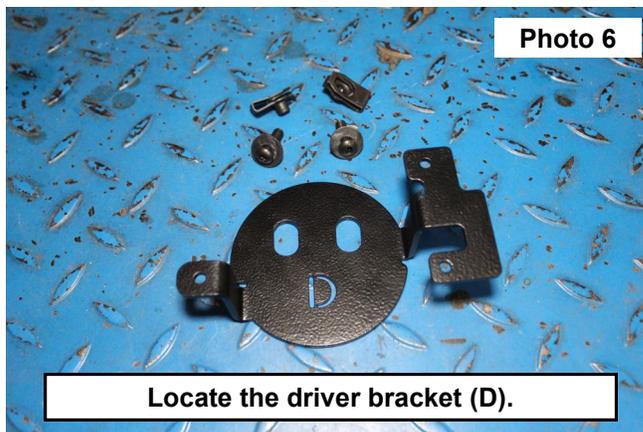


7. Secure the bracket marked (D) to the clips installed in the light bracket using (2) 6mm flat washers and (2) 6mm button head allen bolts. Snug the bolts using a 4mm Allen wrench. The light will be adjusted when installed to the bumper. **See Photo 7.**
8. Install the fog light assembly into the bumper using the retained OE bolts. Tighten using a 7mm socket. **See Photo 8.**

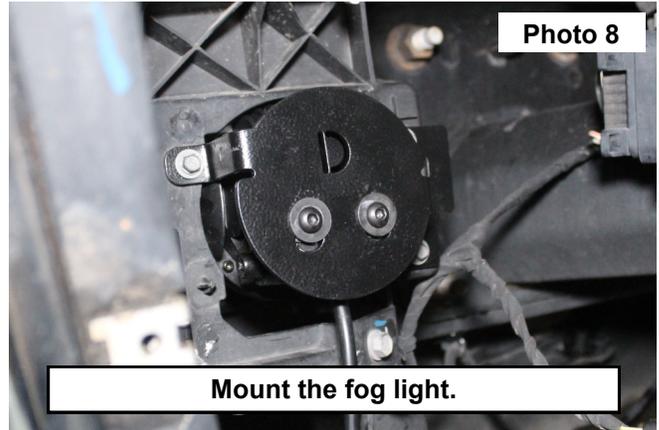

9. Adjust the light into the desired position. Then tighten the (2) 4mm bolts in the back of the bracket using a 4mm Allen wrench. **See Photos 9 and 10.**

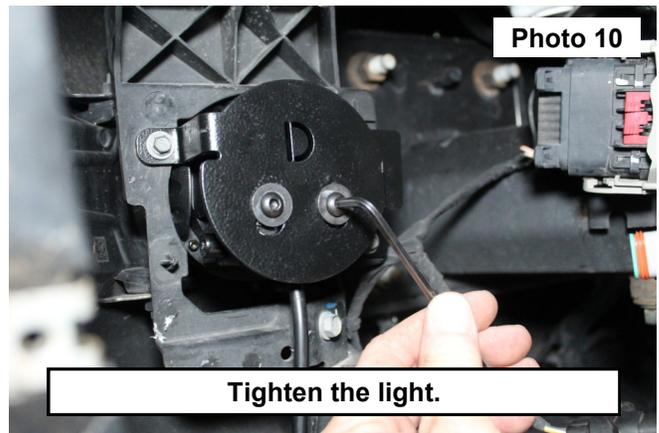

10. Repeat the installation on the passengers side fog light of the vehicle.
11. Connect the supplied wiring harness to the fog lights. Then using the corresponding instruction sheet and follow the wiring steps within the instruction sheet. **See Photo 11.**
12. Install the OE fender liner using the retained OE bolts. Tighten using an 8mm socket. **See Photo 12.**

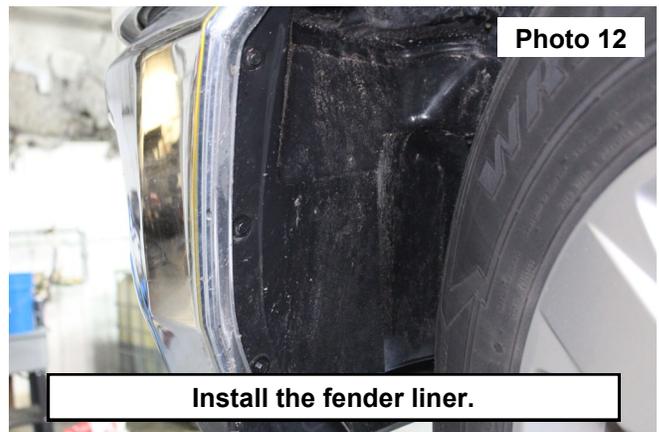

By purchasing any item sold by Rough Country, LLC, the buyer expressly warrants that he/she is in compliance with all applicable, State, and Local laws and regulations regarding the purchase, ownership, and use of the item. It shall be the buyers responsibility to comply with all Federal, State and Local laws governing the sales of any items listed, illustrated or sold. The buyer expressly agrees to indemnify and hold harmless Rough Country, LLC for all claims resulting directly or indirectly from the purchase, ownership, or use of the items.

