

CFMOTO UFORCE U10 1000 Pro Rear Cargo Rack with Cube Lights

Thank you for choosing Rough Country for all your vehicle needs.

Please read instructions before beginning installation. Check the kit hardware against the kit contents shown below. Be sure you have all needed parts and know where they go.

If question exist, please call us @1-800-222-7023. We will be happy to answer any questions concerning this product.

Check all fasteners for proper torque. Check to ensure for adequate clearance between all components.

Check and retighten wheels at 50 miles and again at 500 miles. Periodically check all hardware for tightness.

KIT CONTENTS:


- 1x DR Cargo Rack Bottom Brace
- 1x PASS Cargo Rack Bottom Brace
- 1x Left Side Basket
- 1x Right Side Basket
- 1x Rear Cap
- 1x Front Cap
- 1x Floor Stiffener
- 2x Top Rack Mount

TOOLS NEEDED:

- 9/16 socket or wrench
- 1/2 socket or wrench
- 10mm socket or wrench
- 4mm Allen wrench
- 3/16 Allen wrench

HARDWARE INCLUDED:

- 4x 3/8-16 x 3/4" carriage bolt
- 4x 3/8-16 top lock flange nut
- 4x 5/16-18 nylock nut
- 10x M8 x 20 hex bolts
- 14x 8mm flat washer
- 22x M6 nylock nut
- 22x M6 x 20mm button head
- 22x 6mm flat washer
- 4x 5/16-18 x 1" button head

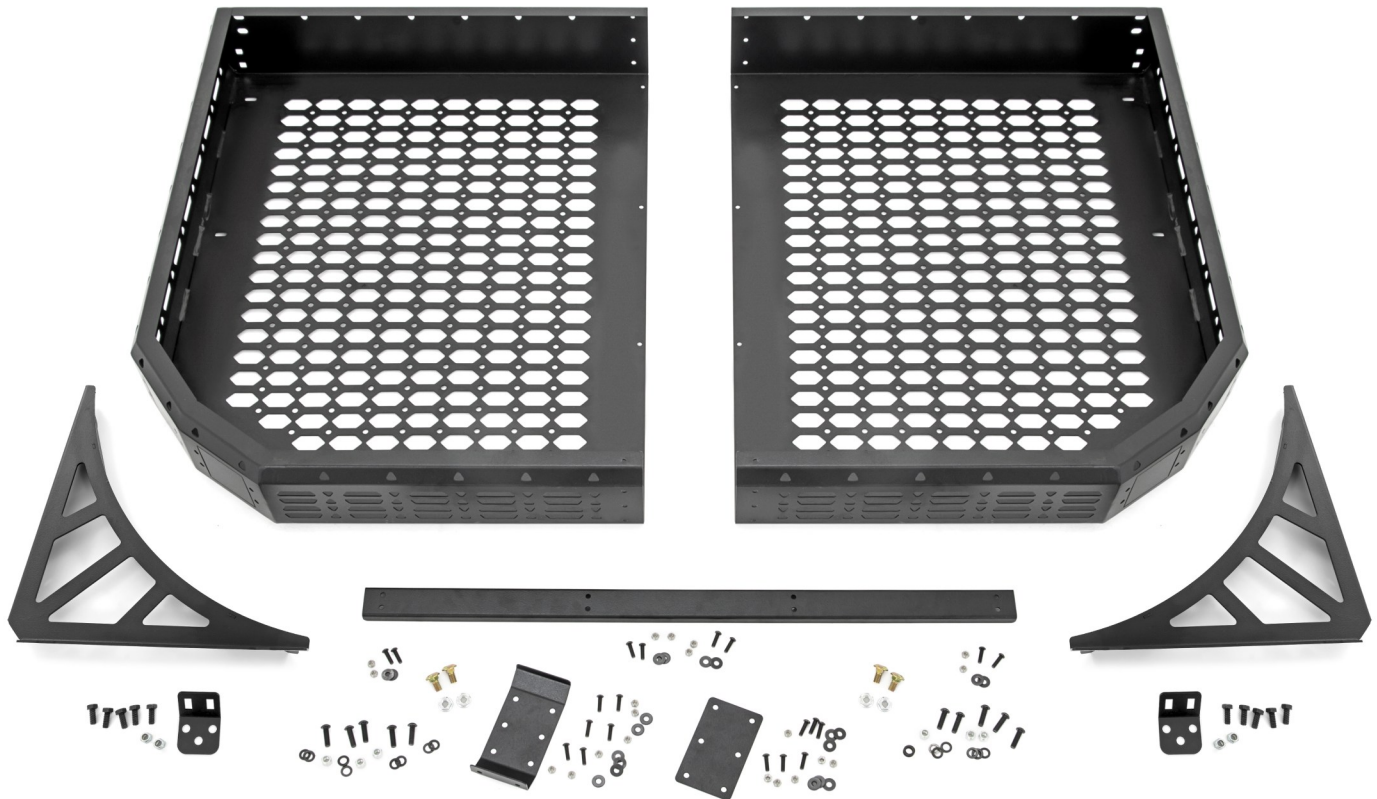


Torque Specs:



Size	Grade 5	Grade 8	Size	Class 8.8	Class 10.9
5/16"	15 ft/lbs	20ft/lbs	6MM	5ft/lbs	9ft/lbs
3/8"	30 ft/lbs	35ft/lbs	8MM	18ft/lbs	23ft/lbs
7/16"	45 ft/lbs	60ft/lbs	10MM	32ft/lbs	45ft/lbs
1/2"	65 ft/lbs	90ft/lbs	12MM	55ft/lbs	75ft/lbs
9/16"	95 ft/lbs	130ft/lbs	14MM	85ft/lbs	120ft/lbs
5/8"	135ft/lbs	175ft/lbs	16MM	130ft/lbs	165ft/lbs
3/4"	185ft/lbs	280ft/lbs	18MM	170ft/lbs	240ft/lbs

INSTALLATION INSTRUCTONS


1. Stand rack on end with square ends facing together. **See Photo 1.**
2. Insert floor stiffener onto bottom of rack and attach using (8 ea.) 6mm x 20mm button head bolts, 6mm flat washers, and 6mm nylock nuts using a 4mm allen wrench. **See Photo 2.**

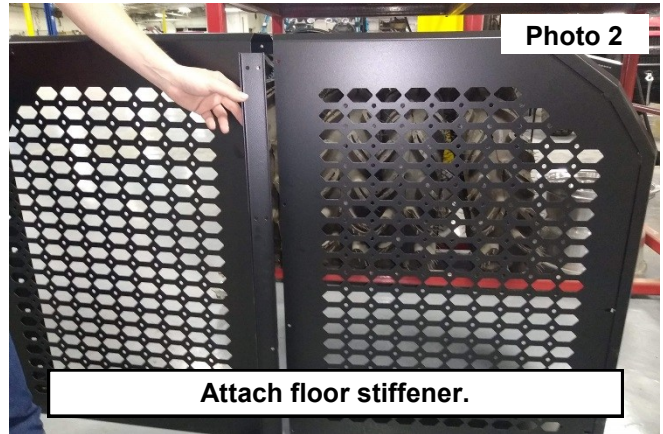

3. Connect front cap to rack using (6 ea) 6mm x 20mm button heads, 6mm flat washers, and 6mm nylock nuts. Secure using a 4mm allen wrench. **See Photo 3.**
4. Connect rear cap to rack using (6 ea) 6mm x 20mm button heads, 6mm flat washers, and 6mm nylock nuts. Secure using a 4mm allen wrench. **See Photo 4.**

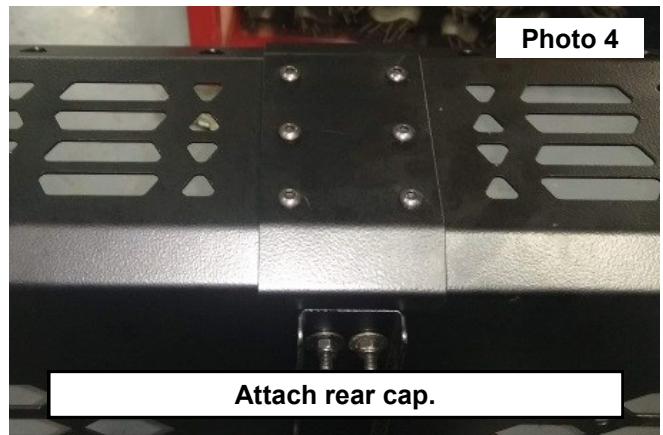
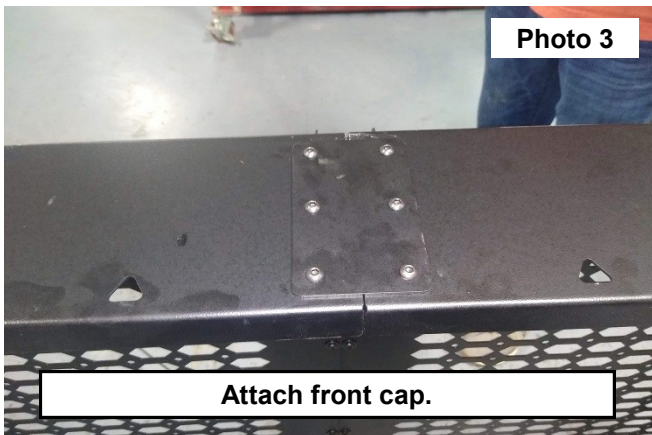


5. Loosely attach DR side brace to UTV using (2 ea) 8mm x 20mm hex bolts, and 8mm flat washers and repeat for PASS side. **See Photo 5.**
6. Attach DR side top rack mount to rack with (2 ea) 3/8-16 x 3/4" carriage bolts and 3/8 flange nuts using 9/16 socket or wrench and repeat for PASS side. **See Photo 6.**


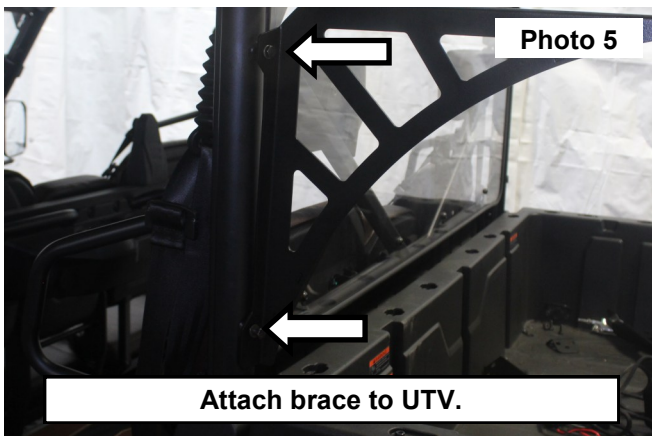


INSTALLATION INSTRUCTIONS

- Loosely attach cargo rack to UTV using (6) 8mm x 20mm hex bolts. **See Photo 7.**
- Align cargo rack with side braces and loosely attach (4 ea) 5/16-18 x 1" button head bolts and 5/16-18 nylock nuts. **See Photo 8.**

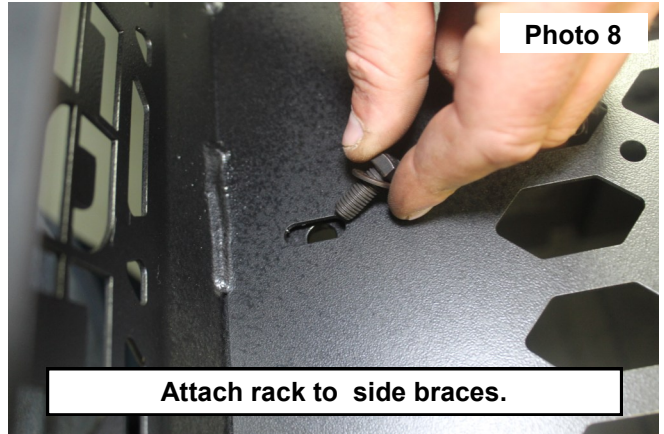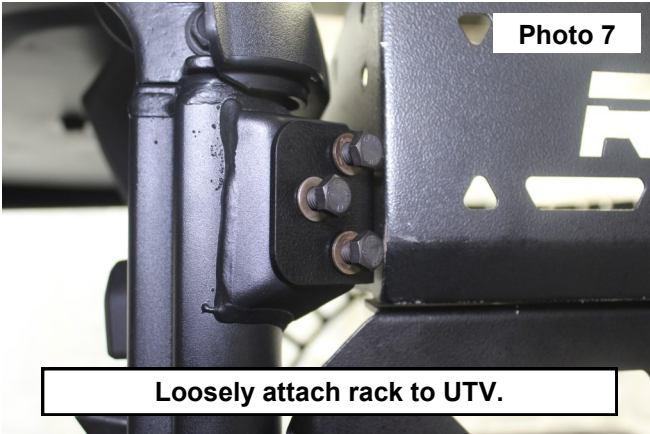

- Secure side braces to UTV at this time using 13mm socket or wrench. **See Photo 9.**
- Using a 3/16 allen wrench and 1/2 socket, secure the (4) 5/16 button head bolts securing the rack to side braces. **See Photo 10.**

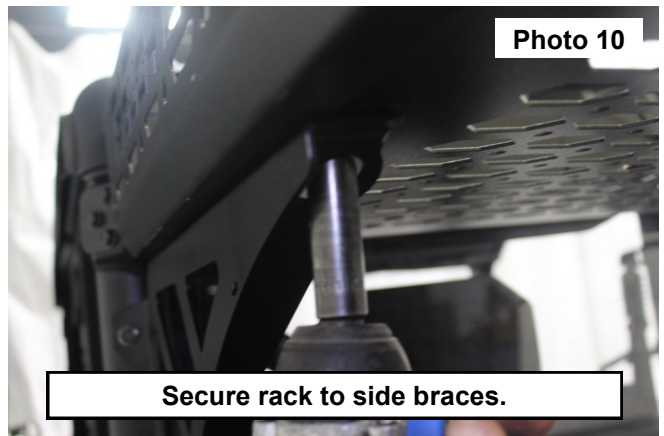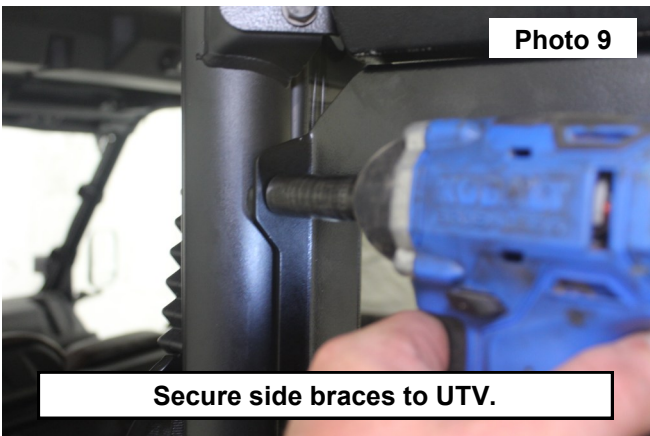

By purchasing any item sold by Rough Country, LLC, the buyer expressly warrants that he/she is in compliance with all applicable, State, and Local laws and regulations regarding the purchase, ownership, and use of the item. It shall be the buyers responsibility to comply with all Federal, State and Local laws governing the sales of any items listed, illustrated or sold. The buyer expressly agrees to indemnify and hold harmless Rough Country, LLC for all claims resulting directly or indirectly from the purchase, ownership, or use of the items.

