

ROUGH COUNTRY

Full Size Cross Rails for Retractable Bed Cover Kit

Thank you for choosing Rough Country for all your vehicle needs.

Please read instructions before beginning installation. Check the kit hardware against the kit contents shown below. Be sure you have all needed parts and know where they go.

If question exist, please call us @1-800-222-7023. We will be happy to answer any questions concerning this product. Check all fasteners for proper torque. Check to ensure for adequate clearance between all components. Periodically check all hardware for tightness.

Kit Contents:

Bed Cover Cross Rails - 2
Bed Cover Cross Rail Mounts - 4

Tools Needed:

5mm Allen Wrench
13mm Wrench or Socket

Hardware Included:

8mm Hammer Nut - 8
8mm Flat washer - 8
8mm Lock washer - 8
8mmx15mm Button head - 8
8mmx20mm Button head - 16
8mm Flange nut - 16



Torque Specs:

Size	Grade 5	Grade 8	Size	Class 8.8	Class 10.9
5/16"	15 ft/lbs	20ft/lbs	6MM	5ft/lbs	9ft/lbs
3/8"	30 ft/lbs	35ft/lbs	8MM	18ft/lbs	23ft/lbs
7/16"	45 ft/lbs	60ft/lbs	10MM	32ft/lbs	45ft/lbs
1/2"	65 ft/lbs	90ft/lbs	12MM	55ft/lbs	75ft/lbs
9/16"	95 ft/lbs	130ft/lbs	14MM	85ft/lbs	120ft/lbs
5/8"	135ft/lbs	175ft/lbs	16MM	130ft/lbs	165ft/lbs
3/4"	185ft/lbs	280ft/lbs	18MM	170ft/lbs	240ft/lbs



INSTALLATION INSTRUCTIONS


1. Locate the 4 Bed cover cross rail mounts, 8-8mm hammer nuts, 8-8mm flat washers, and 8-8mmx15mm button head bolts in the kit box and assemble the 4 cross rail mounts. **Photo 1 and Photo 2**



2. Line up the 2 8mm hammer nuts on the rail mounts so they will drop in and slide into the track of the bed cover. 2 mounts required per side of bed. **Photo 3**
3. Once all mounts are located in bed cover tracks loosely tighten the bolts and hammer nuts with a 5mm Allen wrench so all mounts can be positioned across the bed from one another prior to installing rail. **Photo 4**



4. Align both driver side and passenger side bed cover cross mounts up and lay 1 of the cross rails spanning the bed on the mounts. Attach each end of rail to mount using 4-8mmx20mm button head bolts and 4-8mm flange nuts with a 5mm Allen wrench and a 13mm box wrench loosely tighten all rail ends to mounts. **Photo 5 and Photo 6**

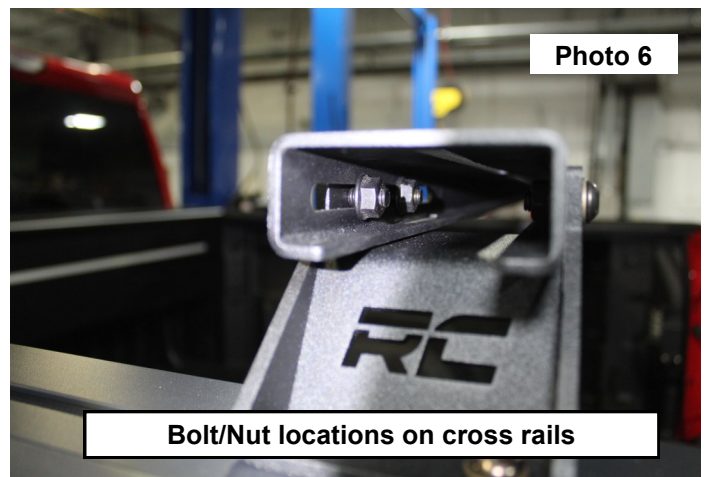

5. Once all mounts and rails are assembled tighten all 8mm flange nuts and 8mm x 20mm bolts with a 5mm Allen wrench and 13mm wrench completely. Hammer nuts and 8mm x 15mm bolts can be completely tightened upon customer preference of cross rail placement within bed cover track. **Photo 7**

