


KRYPTONITE LEVELING KEY INSTALLATION INSTRUCTIONS

1. On a clean level surface, put the truck in Park, ensure the parking brake is engaged and chock the rear tires. Measure the current ride height and record it on the back of this card (Top of the tire to the bottom of the fender). From here you will jack up the front end of the truck and support the frame with jack stands. **NEVER WORK ON AN UNSUPPORTED VEHICLE.**
2. Take this time to paint mark the torsion bar for an index reference. Remove the torsion bolts from the cross member. Using a torsion key unloading tool apply pressure to the key and remove the key stop. You can now safely unload the key and slide the torsion bar forward to remove your OEM key.
3. Clean the area inside of the cross member prior to installing the new key. Use the torsion key tool to reinstall the key stop. When threading the bolt back in, stop once the bolt contacts the torsion key. From here you will turn the bolt in 2 full rotations. Paint marking the bolt will help with tracking your rotations. Minor adjustments may be needed after initial setup, be sure to roll the truck to settle the suspension.

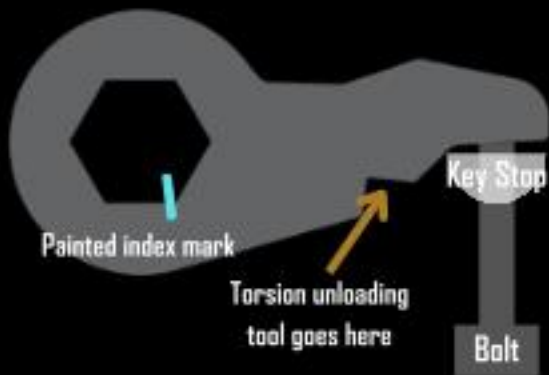

Driver ride
height



Passenger ride
height



Bolt Face/Index mark

 **FOLLOW US**
@kryptoniteproducts

KRYPTONITEPRODUCTS.COM