




# INSTALLATION INSTRUCTIONS

**MAKE:** RAM  
**MODEL:** 1500  
**YEAR:** 2025-2026  
**ENGINE:** L6-3.0L (tt)

**Cat-Back Exhaust**  
 49-32088-B (Black Tip)  
 49-32088-P (Polished Tip)

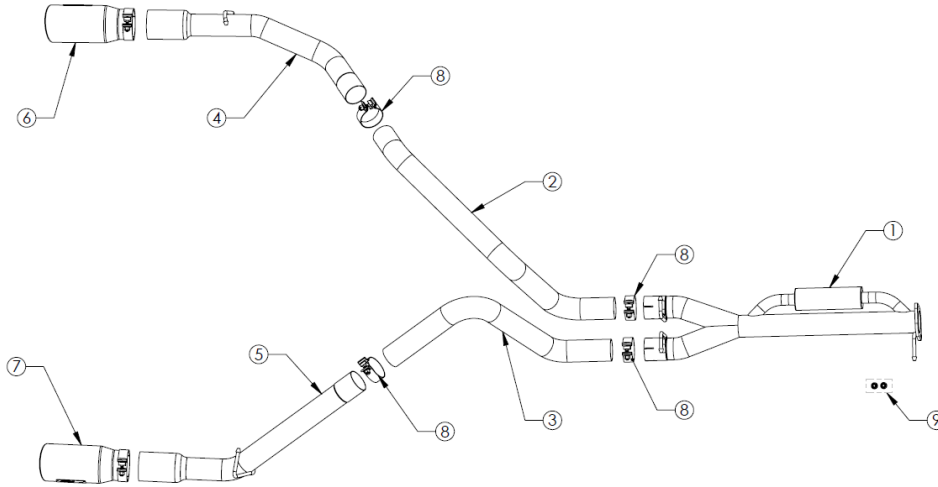

Item	Description	Part Number	Quantity
1	Expansion Chamber Assy	05-245605	1
2	Over Axle, Drivers Side	05-145454	1
3	Over Axle, Passenger Side	05-145455	1
4	Tailpipe, Drivers Side	05-145456	1
5	Tailpipe, Passenger Side	05-145457	1
6	EXH Tip 4 In x 5 Out x 12L Bolt-On Right Blk	49T40501-B12	1
7	EXH Tip 4 In x 5 Out x 12L Bolt-On Left Blk	49T40502-B12	1
6	EXH Tip 4 In x 5 Out x 12L Bolt-On Right Pol	49T40501-P12	1
7	EXH Tip 4 In x 5 Out x 12L Bolt-On Left Pol	49T40502-P12	1
8	Clamp, Band: 3"	05-41055	4
9	Nut, Flg M10 x 1.5	03-50189	2

**aFe POWER recommends professional installation on this product.** Thoroughly inspect the aFe POWER exhaust system to make sure there is no damage from shipping (if damage is noted, immediately contact aFe POWER customer service). Allow time for your vehicle to cool down prior to installation. When working on your vehicle proceed with caution. Wear protective safety equipment; eye goggles and gloves to ensure a safe installation.

Install band clamps to proper torque specifications of 40-45 ft-lb.





## INSTALLATION INSTRUCTIONS

**MAKE:** RAM  
**MODEL:** 1500  
**YEAR:** 2025-2026  
**ENGINE:** L6-3.0L (tt)

**Cat-Back Exhaust**  
49-32088-B (Black Tip)  
49-32088-P (Polished Tip)

---

**NOTE: Without a vehicle lift, it may be necessary to cut the OE exhaust to remove it from the vehicle.**

1. **(Read instructions prior to installation.)** It is recommended to not fully tighten the exhaust until it has been fully installed. Leave loose for adjustability.
2. Secure vehicle on jack stands (refer to your manual for specified jack stand positions).
3. For faster installation, spread out the parts of the exhaust alongside your vehicle as shown in the diagram above.
4. Secure the stock exhaust with jack/stands.
5. Loosen the clamps securing the passenger tail pipe to the exhaust and remove the tail pipes and tips.
6. Loosen clamp on passenger over axle and remove O.E over axle.
7. Loosen the Bolts securing the OE muffler assembly and remove the muffler.
8. Install the aFe power Expansion Chamber Assy using the OE Bolts, gasket and provided nuts, Support the front pipe to prevent excess stress.
9. Install the Over axle tubes with the supplied clamps. Do not fully tighten, leave loose enough to allow for adjustment.
10. Install the Tailpipe/Tip assemblies using the provided clamps.
11. Adjust system for alignment and tighten all clamps.
12. Ensure that all the components of the aFe POWER exhaust system are aligned and are at a safe clearance from all wires, hoses, brake lines, body parts, and tires.
13. Start from the front of the aFe exhaust system and evenly tighten all clamps and fasteners.
14. Start the vehicle and check for any leaks. If any leaks are found, determine cause and repair as necessary.
15. Remove vehicle from jacks stands.
16. It is recommended to re-tighten all clamps and hardware after 50-100 miles.