



BRIGHT IS ONLY THE BEGINNING

# INSTALL GUIDE

## 05-15 TACOMA XB TAIL LIGHTS

LF726/LF727



WARNING: IT IS THE INSTALLERS RESPONSIBILITY TO CONFIRM COMPLIANCE WITH STATE AND LOCAL LAWS. BY READING THIS DOCUMENT, YOU AGREE IT IS ONLY TO BE USED AS AN EDUCATIONAL GUIDE. MORIMOTO LIGHTING NOR ITS DEALERS MAKE GUARANTEES ON ANY FINISHED RESULTS, NOR ARE THEY TO BE HELD RESPONSIBLE FOR ANY DAMAGE, MISUSE, OR PERSONAL INJURIES. IF YOU ARE UNABLE TO CLEARLY UNDERSTAND AND ADAPT THE INFORMATION BELOW, PROFESSIONAL INSTALLATION IS RECOMMENDED.

IMPORTANT: IF YOUR VEHICLE IS EQUIPPED WITH ANYTHING BUT MORIMOTO OR OEM TAILLIGHTS, SIDE MARKERS OR OTHER OEM EXTERIOR LIGHTING; YOU MAY EXPERIENCE A HYPER FLASH AND/OR PROBLEMS WITH THE SEQUENTIAL SIGNAL SETTING ON THESE HEADLIGHTS. THIS IS NOT A DEFECT IN THE HEADLIGHT AND CAUSED BY UN-MATCHED IMPEDANCE WITH YOUR ORIGINAL VEHICLE SETTINGS.



# 05-15 TACOMA XB TAIL LIGHTS

TABLE OF CONTENTS	PAGE
DISASSEMBLY -----	3
BOOST BAR INSTALLATION (OPTIONAL) -----	5
TAIL LIGHT INSTALLATION -----	8

## WHAT'S INCLUDED



2X (PAIR) TAIL LIGHTS



OPTIONAL: 1X BOOST BAR REVERSE LIGHT



## REQUIRED TOOLS

- RATCHET
- 10MM SOCKET
- ZIP TIES (FOR BOOST BAR)



## DISASSEMBLY

1. LOWER THE TAILGATE OF THE TRUCK AND REMOVE THE TWO 10MM BOLTS ON THE INNER EDGE OF THE TAIL LIGHT




2. WITH THE BOLTS REMOVED, PULL THE TAIL LIGHT HOUSING STRAIGHT BACK, OFF THE VEHICLE



## DISASSEMBLY

3. LOCATE THE MAIN TAIL LIGHT PLUG ON THE BACK OF THE HOUSING. DEPRESS THE TAB ON THE CONNECTOR, AND PULL AWAY FROM THE HOUSING TO DISCONNECT IT

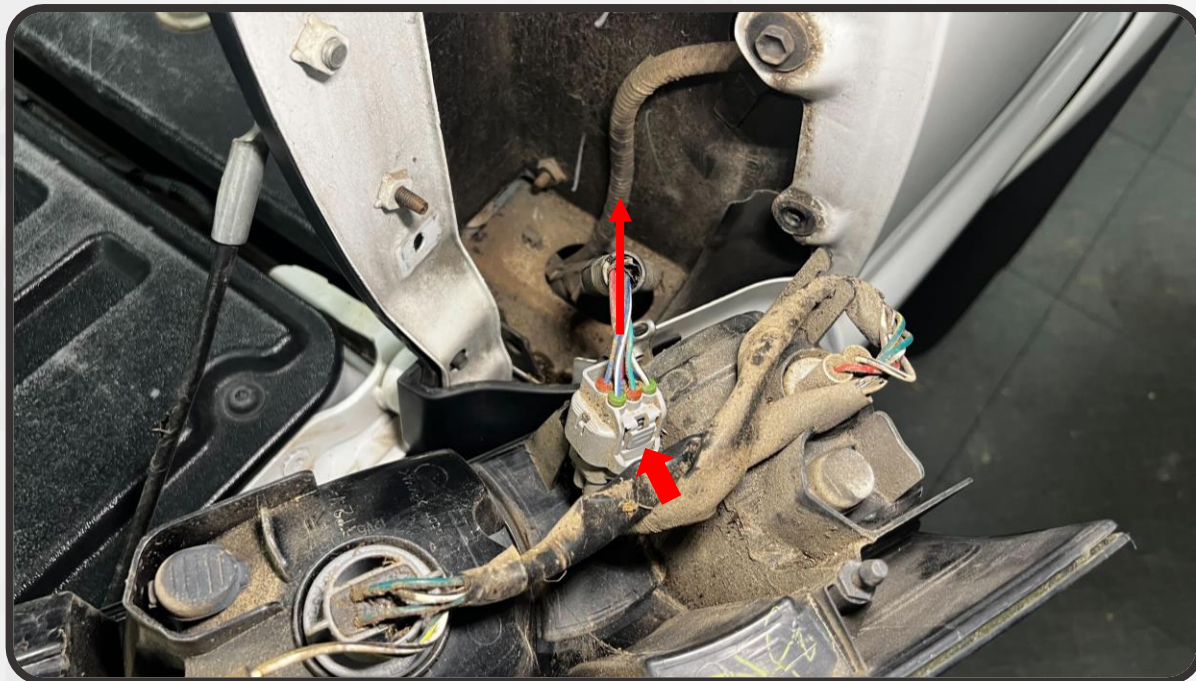

4. REPEAT STEPS 1-3 ON THE OPPOSITE SIDE OF THE VEHICLE

IF YOU ARE ALSO INSTALLING THE OPTIONAL MORIMOTO BACK-UP LIGHT BOOST BAR, PROCEED TO THE NEXT PAGE. IF NOT, SKIP AHEAD TO PAGE 8



## BOOST BAR INSTALLATION (OPTIONAL)

5. REMOVE THE TWO SCREWS SECURING THE LICENSE PLATE




6. PLACE THE BACK-UP LIGHT BOOST BAR OVER THE LICENSE PLATE MOUNTING HOLES AND REINSTALL THE LICENSE PLATE SCREWS



## BOOST BAR INSTALLATION (OPTIONAL)

7. ROUTE THE BOOST BAR WIRING OVER THE TOP OF THE BUMPER TO THE BACK-SIDE, UNDER THE BED

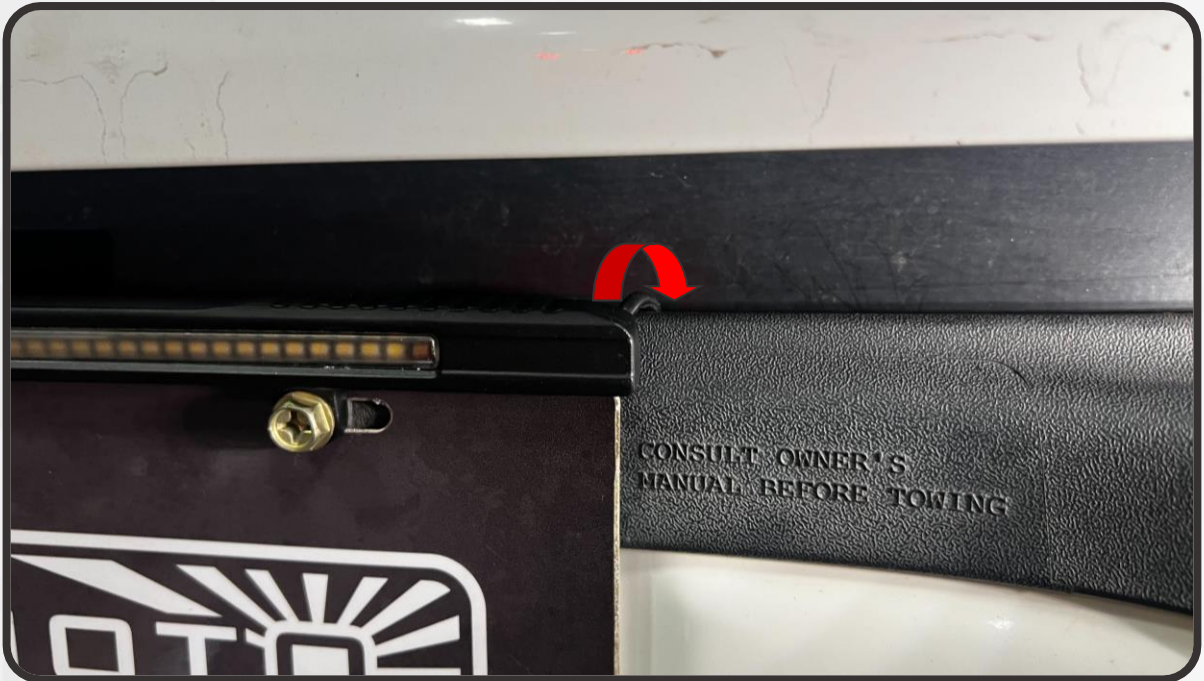


8. MOVING UNDERNEATH THE TRUCK, ROUTE THE BOOST BAR WIRING BACK TO THE TAIL LIGHT WIRING THAT IS JUST BEHIND THE BUMPER. SECURE THE BOOST BAR WIRE TO THE TAIL HARNESS USING A ZIP TIE, AND BEGIN ROUTING IT ALONG THE HARNESS TOWARDS THE PASSENGER SIDE TAIL LIGHT CAVITY



## BOOST BAR INSTALLATION (OPTIONAL)

- CONTINUE ROUTING THE BOOST BAR WIRE ALONG THE TAIL LIGHT HARNESS, SECURING THE WIRE TO THE HARNESS WITH ZIP TIES AS YOU GO

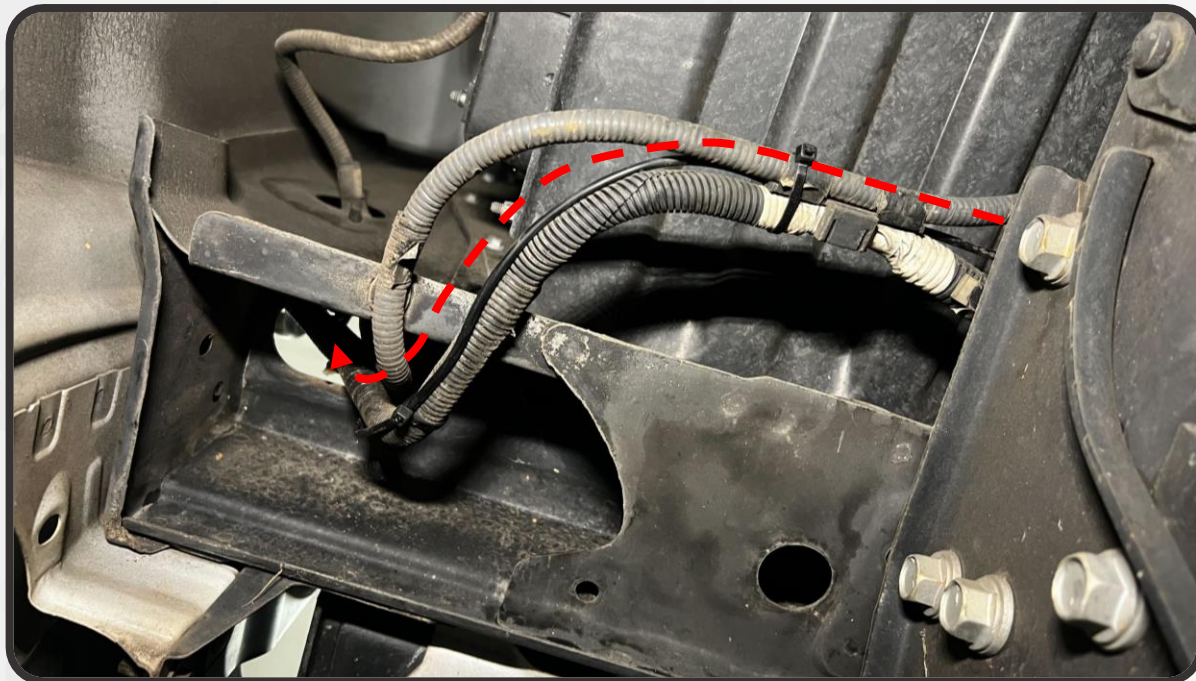


- ROUTE THE HARNESS UP THROUGH THE HOLE IN THE BOTTOM OF THE TAIL LIGHT CAVITY. SECURE ANY EXCESS WIRE OUT OF THE WAY



## TAIL LIGHT INSTALLATION

11. TAKE THE NEW TAIL LIGHT ASSEMBLY AND CONNECT IT TO THE VEHICLE WIRING. CONNECT THE BOOST BAR TO THE BOOST BAR CONNECTOR ON THE TAIL LIGHT IF YOU ARE INSTALLING IT AS WELL (PASSENGER SIDE ONLY)

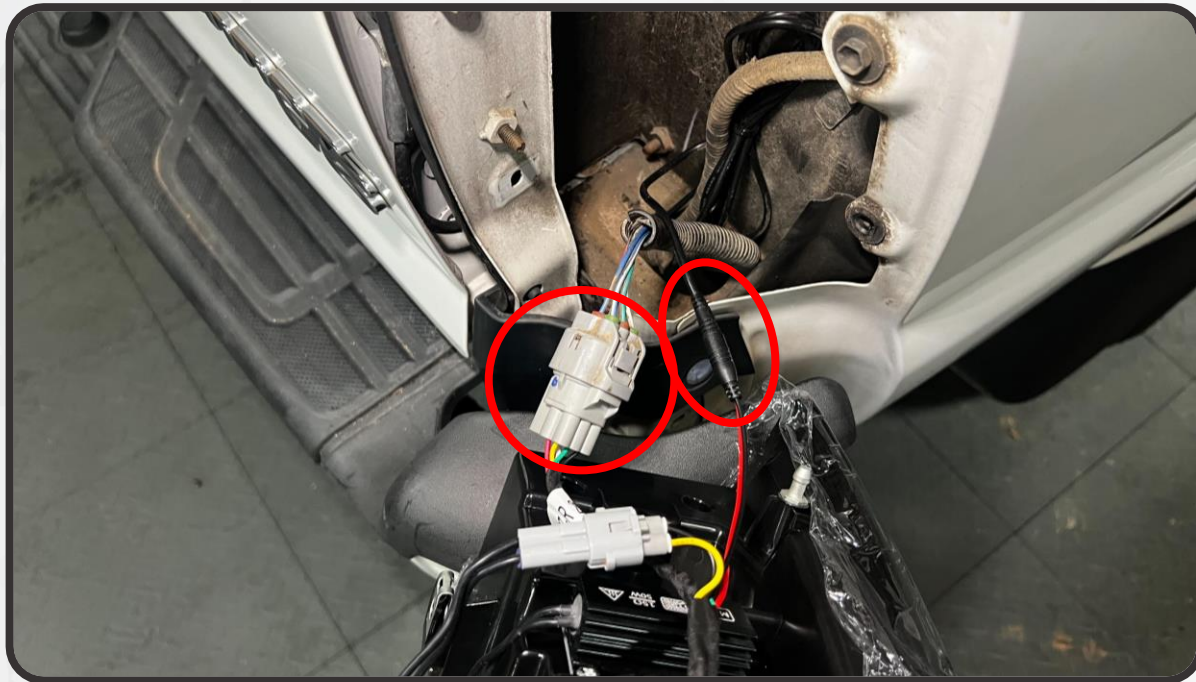

12. PUSH THE NEW TAIL LIGHT ASSEMBLY INTO POSITION UNTIL THE TWO TABS ON THE OUTER EDGE POP INTO PLACE



# TAIL LIGHT INSTALLATION

13. REINSTALL THE TWO 10MM BOLTS AND TIGHTEN UNTIL HAND SNUG. DO NOT OVERTIGHTEN



14. REPEAT STEPS 11-13 ON THE OPPOSITE SIDE OF THE TRUCK
15. GET IN THE VEHICLE AND CONFIRM THAT ALL FUNCTIONS ARE WORKING PROPERLY



## 05-15 TACOMA XB TAIL LIGHTS



- ENJOY YOUR NEW MORIMOTO XB TAIL LIGHTS! -

