

ROUGH COUNTRY

Tesla 2024-26 Cybertruck 50" Lightbar Mount

Thank you for choosing Rough Country for all your vehicle needs.

Please read instructions before beginning installation. Check the kit hardware against the kit contents shown below. Be sure you have all needed parts and know where they go.

If question exist, please call us @1-800-222-7023. We will be happy to answer any questions concerning this product.

Check all fasteners for proper torque. Check to ensure for adequate clearance between all components.

Periodically check all hardware for tightness.

Kit Contents:


50" Single Row LED Light Kit x1
 Driver Side Roof Bracket x1
 Pass Side Roof Bracket x1
 Double Side Stick Tabs x3

Tools Needed:

4mm Allen Wrench
 5mm Allen Wrench
 10mm Wrench or Socket
 Weather Proof Tape

Hardware Included:

Rubber Bumper x2
 6mm- x20mm Button Head Bolt x2
 6mm- 20mm Nylock Nuts x2
 6mm Flat Washer x2

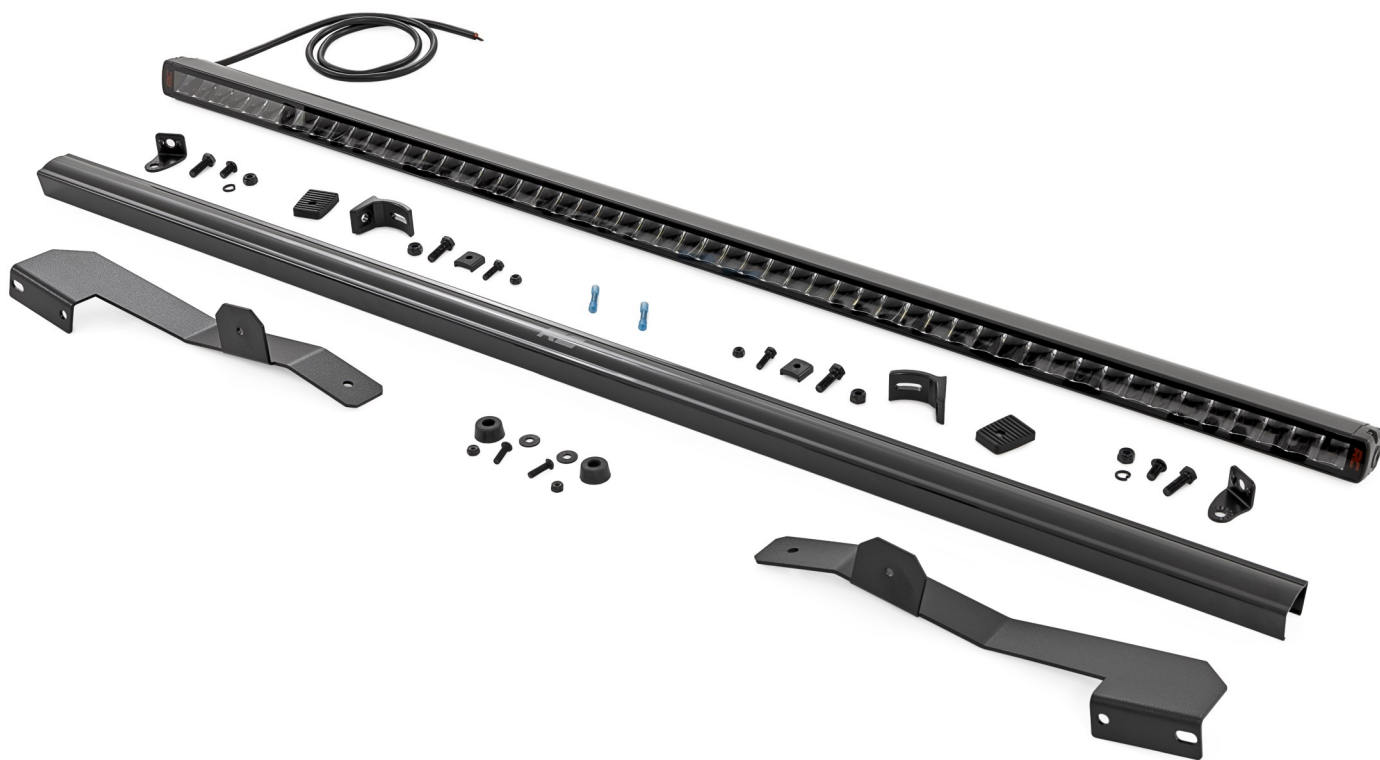



Torque Specs:

Size	Grade 5	Grade 8	Size	Class 8.8	Class 10.9
5/16"	15 ft/lbs	20ft/lbs	6MM	5ft/lbs	9ft/lbs
3/8"	30 ft/lbs	35ft/lbs	8MM	18ft/lbs	23ft/lbs
7/16"	45 ft/lbs	60ft/lbs	10MM	32ft/lbs	45ft/lbs
1/2"	65 ft/lbs	90ft/lbs	12MM	55ft/lbs	75ft/lbs
9/16"	95 ft/lbs	130ft/lbs	14MM	85ft/lbs	120ft/lbs
5/8"	135ft/lbs	175ft/lbs	16MM	130ft/lbs	165ft/lbs
3/4"	185ft/lbs	280ft/lbs	18MM	170ft/lbs	240ft/lbs





INSTALLATION INSTRUCTIONS


1. Place the rubber bumper onto the bottom of the light bar bracket. **See Photo 1.**
2. Secure the rubber bumper using (1) 6mm x 20 button head bolt through the rubber bumper and into the bracket. Place (1) flat washer and (1) nut onto the bolt and tighten using a 4mm Allen wrench and a 10mm wrench. **See Photo 2.**

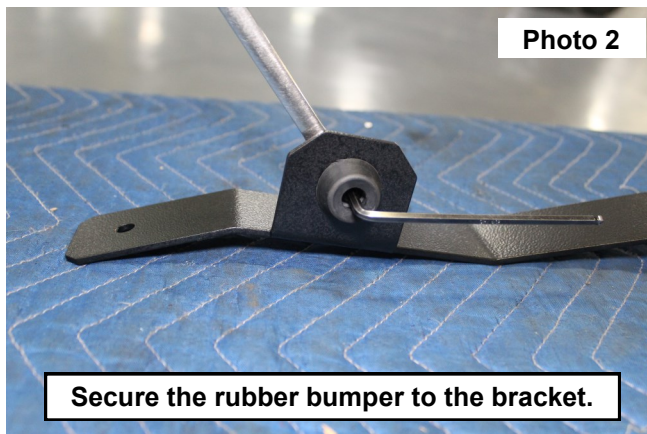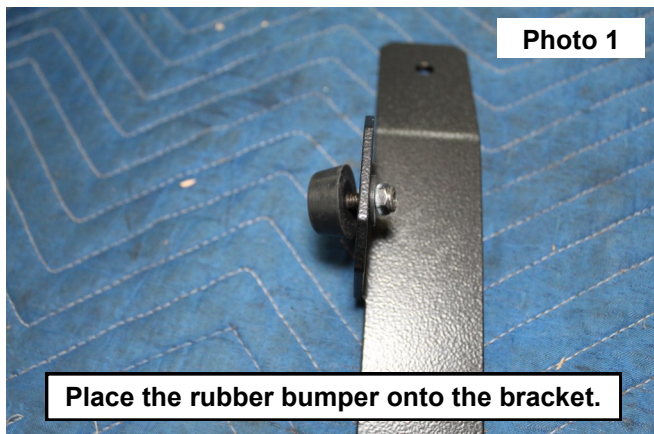



3. Open the factory anchor point cover to access the factory mounting points by pressing the inner side of the factory cover. Remove the OE nuts using a 10mm socket. **See Photo 3.**
4. Place the light bracket onto the studs and secure using the retained OE nuts. Tighten using a 10mm socket. **See Photo 4.**
5. Repeat steps 3 and 4 on the opposite side of the vehicle.

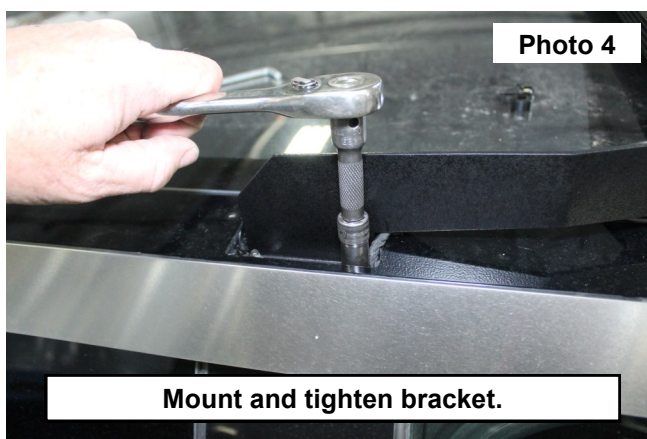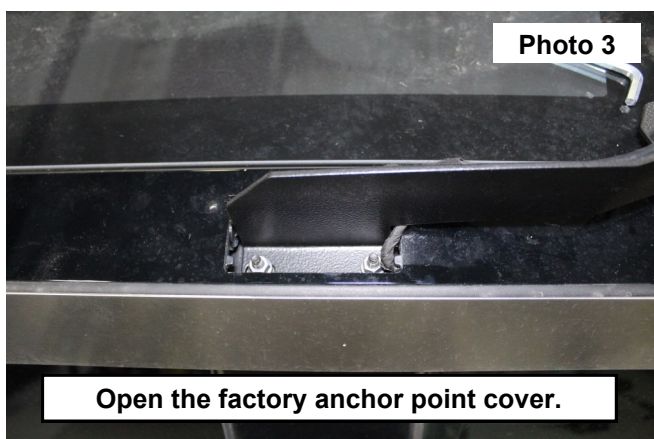


6. Place the light bar in-between the mounting brackets. **NOTE:** Wiring must be placed on the passenger's side of the vehicle. Secure with the supplied hardware in the light bar kit. **See Photo 5.**
7. Locate the switched power source under the passengers side anchor point cover. Expose the (3) wires and trim the Red wire and the Black w/ Blue stripe wire for connection. Connect the red wire from the light bar to the red wire on the vehicle harness using the butt connector supplied in the light bar kit. Connect the black wire from the light bar to the black w/Blue stripe wire on the vehicle harness using the remaining butt connector. Weather proof wrap may be applied around the butt connectors. **See Photo 6.**

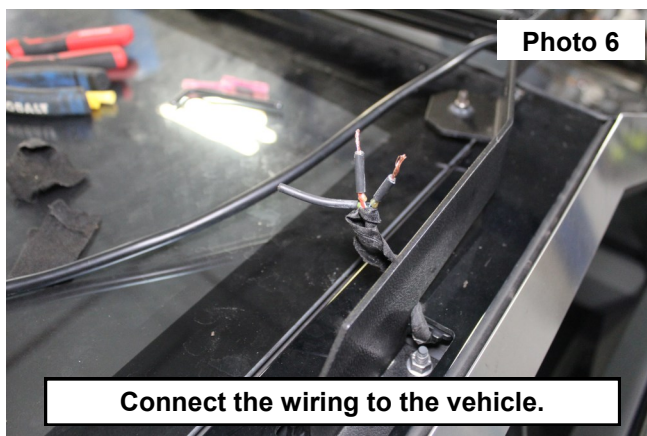

8. Route the wiring along the inside of the bracket using (3) of the supplied double side stick tabs as shown in. **See Photo 7.**
9. Using the factory control panel switch the light on to set the desired angle of the light bar. **See Photo 8.**

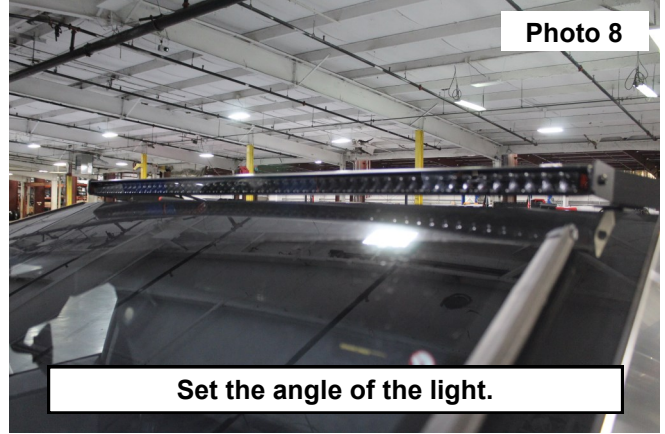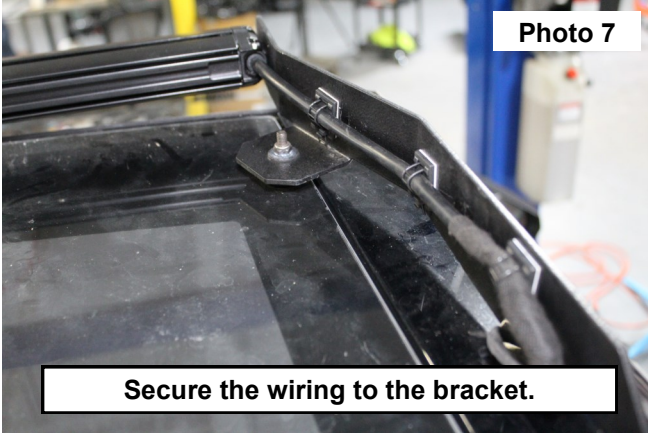

10. Tighten the light bar using a 5mm Allen wrench. **See Photo 9.**

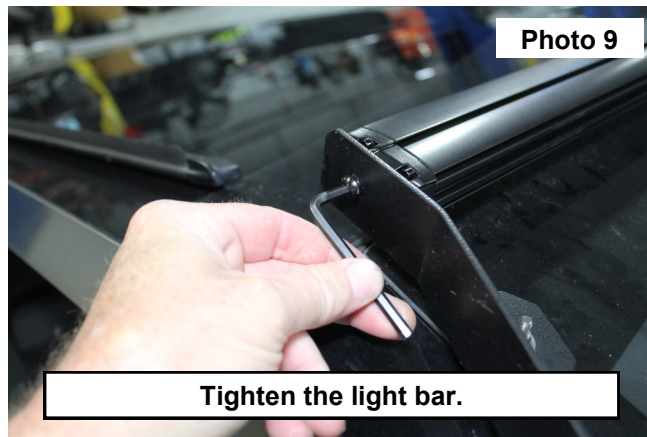

By purchasing any item sold by Rough Country, LLC, the buyer expressly warrants that he/she is in compliance with all applicable, State, and Local laws and regulations regarding the purchase, ownership, and use of the item. It shall be the buyer's responsibility to comply with all Federal, State and Local laws governing the sales of any items listed, illustrated or sold. The buyer expressly agrees to indemnify and hold harmless Rough Country, LLC for all claims resulting directly or indirectly from the purchase, ownership, or use of the items.

