



How to:

***Switch to Amber DRL on 17-19 Ford Super
Duty LUXX or NOVA series Headlights***



This installation guide provides a detailed, step-by-step process for switching your DRL from White to Amber DRL.

DO NOT USE DIELECTRIC GREASE / REMOVE ANY DEBRIS OR ANY PRE-EXISTING GREASE OR WEATHER SEALANT

Contents

Tools needed:

No tools needed

How-To: Switch to Amber DRL on 17-19 Ford Super Duty LUXX or NOVA series Headlights

1.1 - Start by positioning the headlight so that the dust covers are facing you.




1.2 - Locate the lower dust cover and remove it to access the internal wiring.



How-To: Switch to Amber DRL on 17-19 Ford Super Duty LUXX or NOVA series Headlights

1.3 - Once it's open, go ahead and find the following two plugs.

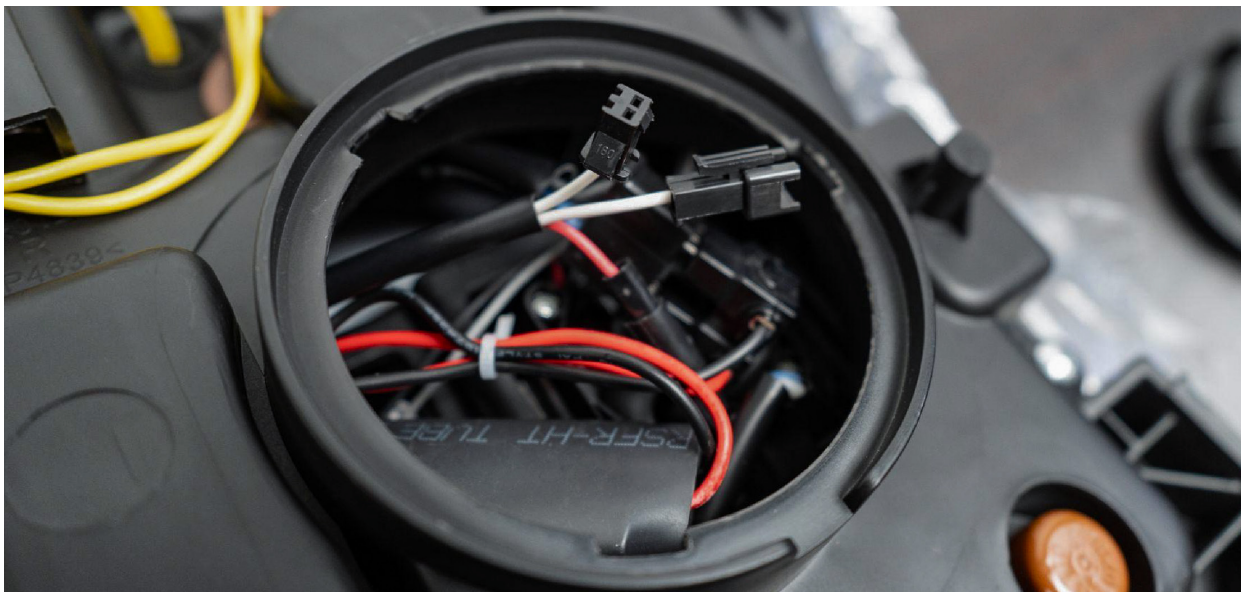

1.4 - Simply connect the two plugs together, and the amber DRL feature will be enabled.

1.4 - Go ahead and put the dust cover back on, make sure it's nice and snug, and you're all set to install the headlights.

