



4125 – 2019-PRESENT, MERCEDES SPRINTER, SLIDING DOOR SPACER

Version 1.1

General Notes

- For the most up to date and current instructions, please visit our website at www.vancompass.com
- Please read all instructions thoroughly before starting installing Van Compass products.
- This is a bolt on spacer that can be installed with simple hand tools.
- This part can be completely removed so the vehicle can return to stock configuration.
- **NOT COMPATIBLE WITH POWER SLIDING DOOR**

Parts List

4125 – 2007-PRESENT, MERCEDES SPRINTER, SLIDING DOOR SPACER

- (1) 412501 MERCEDES SPRINTER, SLIDING DOOR SPACER
- (2) HM08-1.25-25-10.9 M8-1.25 X 25MM LONG, FLANGED HEX HEAD BOLT, GR 10.9

Tools/Materials Needed

- Simple hand tools:
 - Torque Wrench
 - Socket wrench
 - 13mm socket
 - T-45 Torx bit
- Floor Jack
- Wood Block
- Grinder / Belt Sander / File
- Black Spray Paint
- Painter's Tape

Approximate Installation Time: 60 – 90 min

Installation


- 1) Open the sliding door until the rear hinge/roller assembly sits in the straight portion of the door track.
- 2) Using a floor jack and something to protect the paint, support the rear of the door to take the weight off the hinge/roller assembly. Lift slowly and carefully to avoid damaging the door or hinge/roller.




- 3) Use a T-45 Torx bit to remove the bolts holding the hinge to the door. Once removed, pull the door away from the van slightly to clear the alignment pins, then slide the hinge/roller assembly back clear of the door. Rotate up as shown to remove from the track.



4) Close hinge/roller assembly fully, then grind away material as shown for clearance.

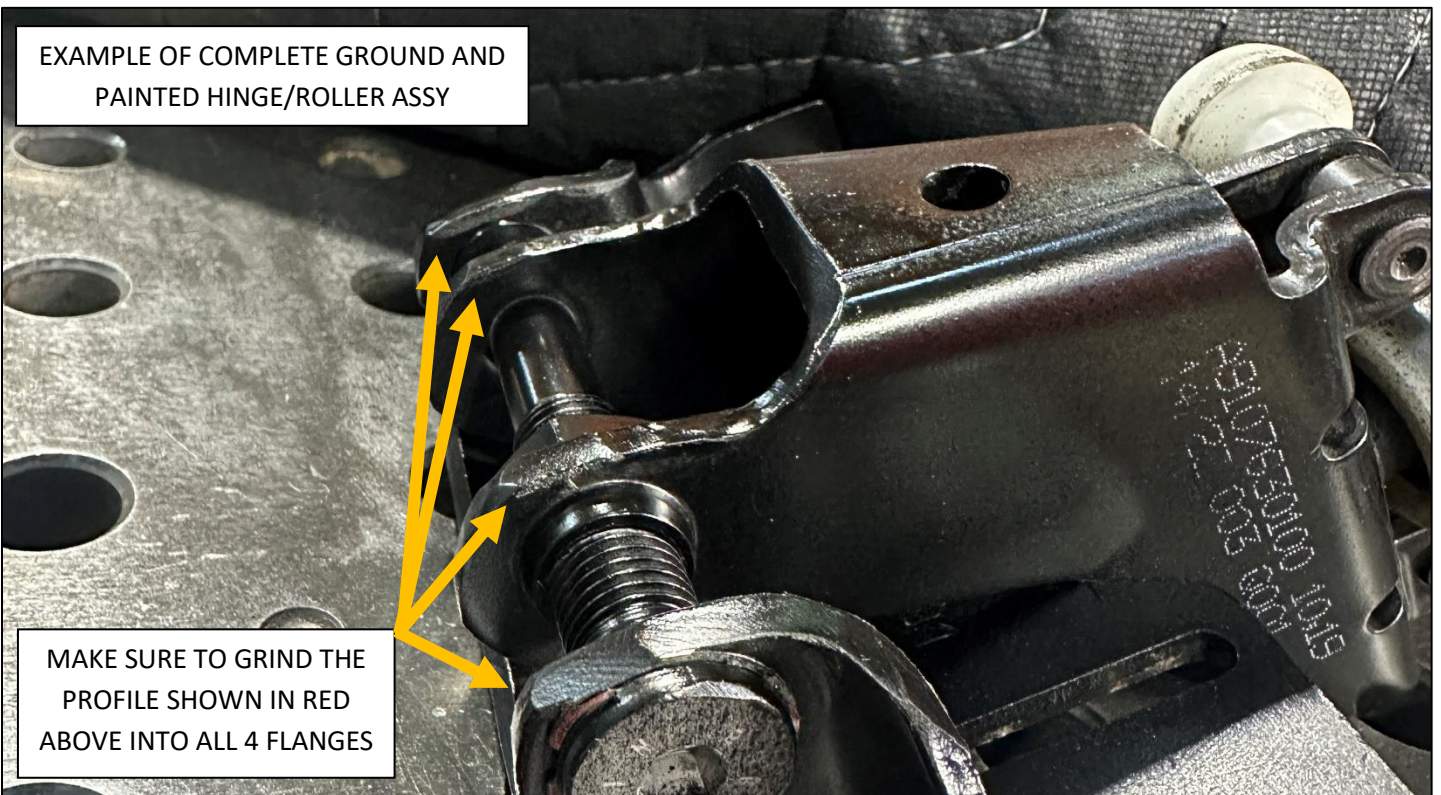

- 5) Once grinding is complete, install the hinge/roller assembly and spacer with the supplied M8-1.25 X 25MM bolts, tighten until snug. Then place a piece of painter's tape in the location shown.

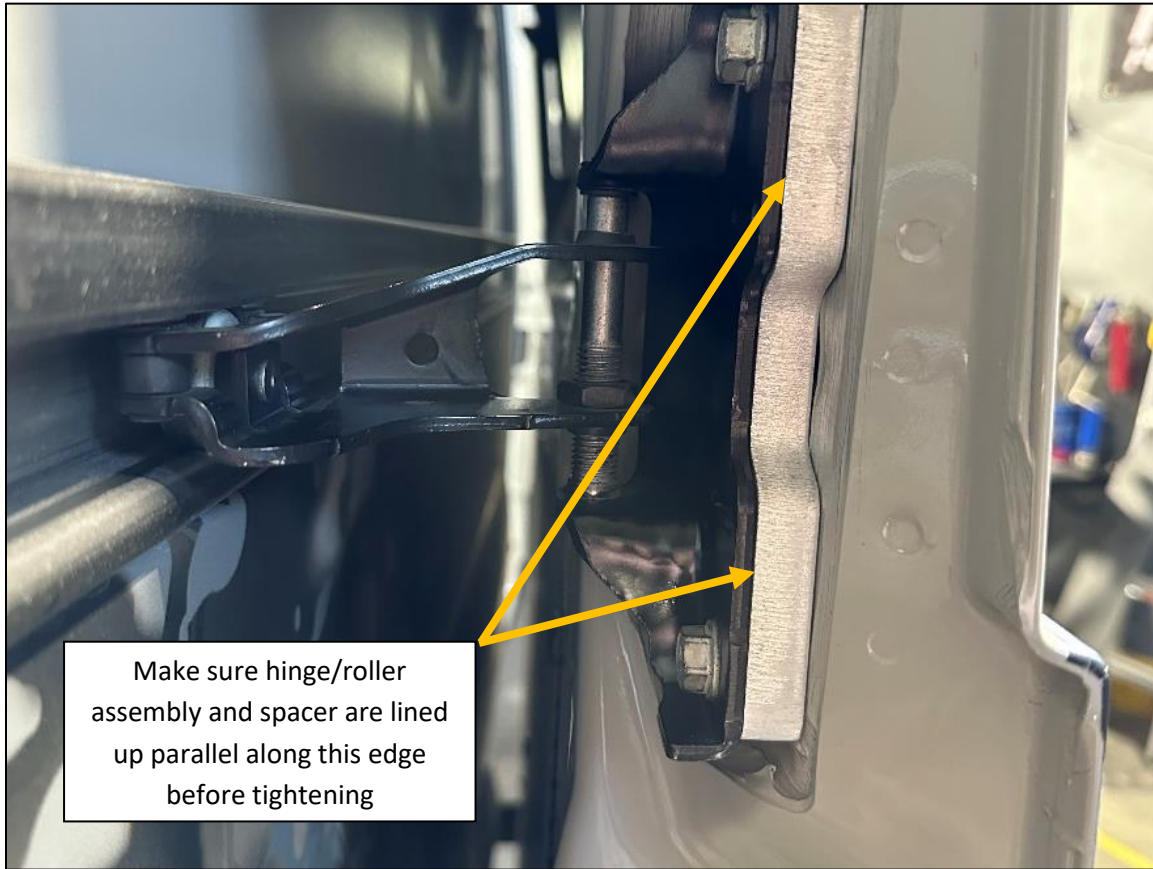

- 6) Open and close the sliding door firmly 2-3 times, then open and check the tape for marks. Use these marks to determine if more material needs to be ground away to prevent contact. Remove hinge/roller assembly and grind away more material as necessary.
- 7) Repeat as necessary until there is no contact between the hinge/roller assembly and the door jamb.
 - a. **NOTE:** On some vans, it may not be possible to eliminate contact completely. Slight contact may occur indicated by small marks left on the tape after firmly closing the door. Because the act of closing the door compresses the door seal and rubber stops more than usual, these marks don't necessarily indicate contact during normal driving and should not cause long term issues if the necessary trimming shown above has been done.
- 8) Remove the hinge/roller assembly, deburr the ground areas and paint with black spray paint. Remove painter's tape.
- 9) Once paint is dry, reinstall the hinge/roller assembly and spacer as shown in step 5. Torque fasteners to 22 ft-lbs(30 Nm).

Installation is Complete

RELEASE OF LIABILITY

I, the customer, do hereby release and forever discharge Van Compass LLC, their agents, employees, successors and assigns, and their respective heirs, personal representatives, affiliates, successors and assigns, and any and all persons, firms or corporations liable or who might be claimed to be liable, whether or not herein named, from any and all claims, demands, damages, actions, causes of action or suits of any kind or nature whatsoever, whether known or unknown, fixed or contingent, which I now have or may hereafter have or claim to have, as a result of or in any way relating to the following: Parts sold & installed by Van Compass LLC or parts sold & installed by end-user; any parts sold online, any parts sold online or installed by a re-seller, any parts installed by an installation shop.

It is understood and agreed that this payment is made and received in full and complete settlement and satisfaction of the aforesaid actions, causes of action, claims and demands; that this Release contains the entire agreement between the parties; and that the terms of this Agreement are contractual and not merely a recital. Furthermore, this Release shall be binding upon the undersigned, and his respective heirs, executors, administrators, personal representatives, successors and assigns. This Release shall be subject to and governed by the laws of the State of Idaho.

PRODUCT SAFETY WARNING:

Van Compass LLC strongly recommends the installation of products be done by a certified mechanic. If this does not occur, be certain the person(s) installing the product read, understand and follow all instructions and warnings pertaining to the application before installation. Do not add, alter, or fabricate any factory or aftermarket parts to increase vehicle height over the intended height of the Van Compass LLC product purchased. Mixing component brands is not recommended.

Installation of suspension lift kits or any other lifting kits or devices will raise the center of gravity. For this reason, Van Compass LLC urges that extreme caution be used when encountering driving conditions which may cause vehicle imbalance. Furthermore, the driver's field of vision and judgment will not be as good due to the height of the vehicle. Due to the installation of larger tires, the speedometer will read slower than the actual speed being traveled and more distance will be required to stop the vehicle. It is the owner's responsibility to caution and warn any potential driver of the vehicle about these driving and handling conditions. Van Compass LLC will not be held liable or responsible for damages or personal injuries resulting from the use of lifting devices and or related products. The tires and rims should be changed to sufficiently increase the vehicle's total overall width and stability to help accommodate lifting devices.

Van Compass LLC aftermarket suspension products and accessories modify a vehicle for uses which exceed conditions anticipated by the vehicle manufacturer. The uses include the high performance demands required during off-road. These conditions vary in the degree of extremity and cannot be controlled by the vehicle or product manufacturer. If the components within the suspension system or accessories become worn due to frequent and/or extreme use, the safety and reliability of the vehicle is at risk. The maintenance of aftermarket equipment to ensure the vehicle occupants safety is entirely your responsibility. Do not purchase Van Compass LLC products unless you are willing to accept this responsibility. Do not install any Van Compass LLC suspension products or accessories unless you feel competent at installing the product without causing present or future injury to yourself or other vehicle occupants; seek an authorized installation center.

Most states have some type of law limiting vehicle height. The amount of lift allowed, and how the lift can be achieved, varies greatly. Several states offer exemptions for farm and commercial registered vehicles. It is the vehicle owner's responsibility to check state and local laws to ensure that their vehicle will be in compliance. Van Compass LLC reserves the right to make changes in design, materials and specifications as deemed necessary without prior notice and without assuming obligation to modify any product previously manufactured. Obligation or liabilities will not be assumed with respect to similar products previously advertised.

This Release of Liability and Product Safety Warning has been read and fully understood by the undersigned and has been explained to me.