




INSTALLATION INSTRUCTIONS

MAKE: RAM
MODEL: 1500
YEAR: 2025-2026
ENGINE: L6-3.0L (tt) SO

Cat-Back Exhaust
49-32088-1B (Black Tips)
49-32088-1P (Polished Tips)
Fits Crew Cab with 5'7" Box
NOTE: Does not fit High-Output (HO) Hurricane Engines or RHO models

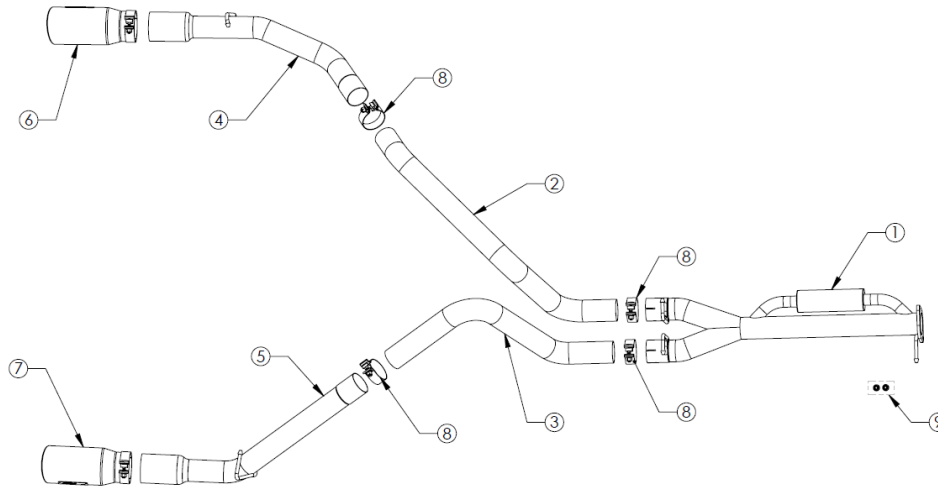

Item	Description	Part Number	Quantity
1	Expansion Chamber Assy	05-245605	1
2	Over-Axle, Drivers Side	05-245708	1
3	Over-Axle, Passenger Side	05-245709	1
4	Tailpipe, Drivers Side	05-245710	1
5	Tailpipe, Passenger Side	05-245711	1
6	EXH Tip 4 In x 5 Out x 12L Bolt-On Right Blk	49T40501-B12	1
7	EXH Tip 4 In x 5 Out x 12L Bolt-On Left Blk	49T40502-B12	1
6	EXH Tip 4 In x 5 Out x 12L Bolt-On Right Pol	49T40501-P12	1
7	EXH Tip 4 In x 5 Out x 12L Bolt-On Left Pol	49T40502-P12	1
8	Clamp, Band: 3"	05-41055	4
9	Nut, Flg M10 x 1.5	03-50189	2

aFe POWER recommends professional installation on this product. Thoroughly inspect the aFe POWER exhaust system to make sure there is no damage from shipping (if damage is noted, immediately contact aFe POWER customer service). Allow time for your vehicle to cool down prior to installation. When working on your vehicle proceed with caution. Wear protective safety equipment; eye goggles and gloves to ensure a safe installation.

Install band clamps to proper torque specifications of 40-45 ft-lb.





INSTALLATION INSTRUCTIONS

MAKE: RAM
MODEL: 1500
YEAR: 2025-2026
ENGINE: L6-3.0L (tt) SO

Cat-Back Exhaust
49-32088-1B (Black Tips)
49-32088-1P (Polished Tips)
Fits Crew Cab with 5'7" Box
NOTE: Does not fit High-Output (HO) Hurricane Engines or RHO models

NOTE:

Without a vehicle lift, it may be necessary to cut the OE exhaust to remove it from the vehicle.

1. **(Read instructions prior to installation.)** It is recommended to not fully tighten the exhaust until it has been fully installed. Leave loose for adjustability.
2. Secure vehicle on jack stands (refer to your manual for specified jack stand positions).
3. For faster installation, spread out the parts of the exhaust alongside your vehicle as shown in the diagram above.
4. Secure the factory exhaust with jack/stands.
5. Loosen the clamps securing the passenger tailpipe to the exhaust and remove the tailpipes and exhaust tips.
6. Loosen clamp on Passenger Over-Axle and remove factory Over-Axle.
7. Loosen the Bolts securing the factory muffler assembly and remove the muffler.
8. Install the aFe POWER Expansion Chamber Assembly using the factory bolts, gasket and provided nuts, support the front pipe to prevent excess stress.
9. Install the aFe POWER Over-Axle tubes with the supplied clamps. Do not fully tighten, leave loose enough to allow for adjustment.
10. Install the aFe POWER Tailpipe/Tip Assemblies using the provided clamps.
11. Adjust system for alignment and tighten all clamps.
12. Ensure that all the components of the aFe POWER exhaust system are aligned and are at a safe clearance from all wires, hoses, brake lines, body parts, and tires.
13. Start from the front of the aFe POWER exhaust system and evenly tighten all clamps and fasteners.
14. Start the vehicle and check for any leaks. If any leaks are found, determine cause and repair as necessary.
15. Remove vehicle from jack/stands.
16. It is recommended to re-tighten all clamps and hardware after 50-100 miles.