1234

9214215A0

ROUGH COUNTRY SUSPENSION SYSTEMS®

WARNING: This product contains a chemical known to the State of California to cause Cancer and Reproductive Harm. For more information, go to www.P65Warnings.ca.gov.

14-18 CHEVY SILVERADO 1500
15-19 CHEVY SILVERADO 2500/3500
REAR WHEEL WELL LINER

PLEASE READ INSTRUCTIONS CAREFULLY BEFORE STARTING THE INSTALLATION.
NOTE: FOR EASIER INSTALLATION, REMOVE THE TIRE.

INCLUDED IN HARDWARE KIT:

1. 

Driver Side & Passenger Side Liner
1 pr

2. 

Plastic Retainer
12 pcs

TOOLS NEEDED:

Gloves
Pry Tool
T-15 Torx Bit

BEFORE YOU BEGIN:

Please clean the interior panels of the rear wheel well prior to installation.

If vehicle comes equipped with factory wheel well liners, these will need to be removed, along with any fasteners involved.


If you have aftermarket flares installed, these will need to be removed prior to installation of wheel well liners. The fastening system may need to be modified to accommodate aftermarket flares.

Each Wheel Well Liner is marked at the top dead center (inside) with the side of the vehicle it should be installed on. The marking may be faint, but look for an “L” or an “R” in this location:



Rev 1 08-26-26

REAR WHEEL WELL LINER INSTALLATION

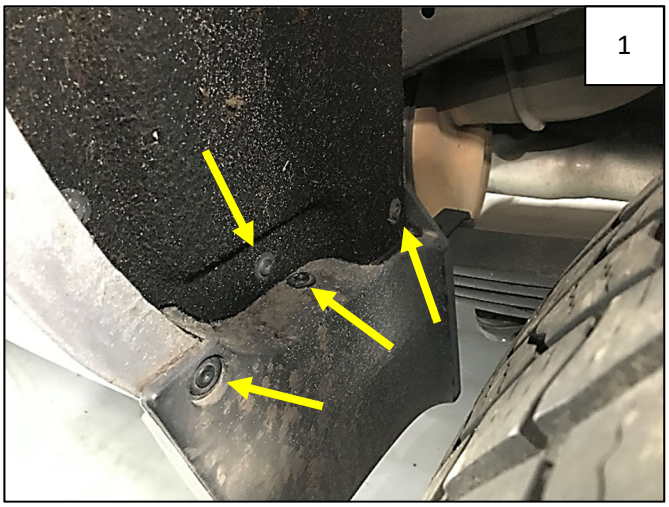

Using a T15 Torx bit, remove four factory screws from front lower fender trim. Retain all factory screws; some will be used. Remove fender trim.



Remove one factory screw from rear fender trim as shown. Leave inner lowermost fastener in place.



If your vehicle comes equipped with factory wheel well liners, remove and retain 11 factory fasteners inside wheel well. Remove factory wheel well liner.




Slide the Rear Wheel Well Liner behind wheel. It is helpful to tilt the liner at a 45-degree angle at front of wheel and then straighten it out once it's behind the wheel.



Tuck Rear Wheel Well Liner under metal fender lip at all outward facing edges. Use a plastic pry tool to assist in tucking the wheel well liner in place if needed.



If you removed the factory wheel well liner, you may use the factory fasteners to install your new wheel well liner in 6 places.

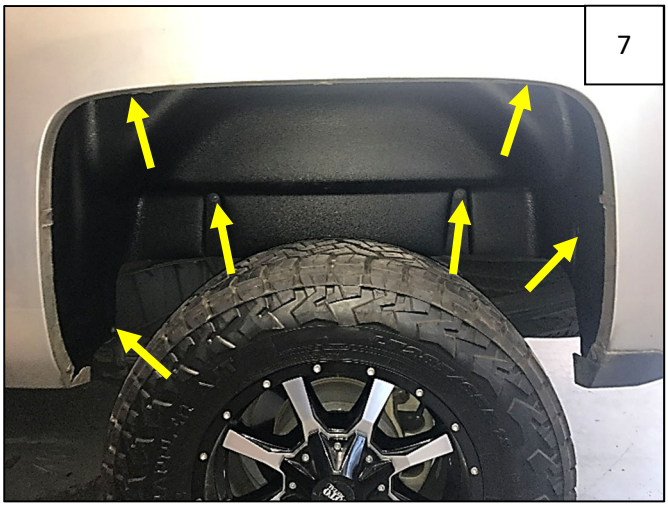

6 fastening locations.



If you did not have a factory wheel well liner, install one fastener retained in Step 1 at front of new wheel well liner.



Use the provided Plastic Retainers to secure your new wheel well liner in 5 more places.



Installation is complete. Repeat for other side.