KRYPTONITE

2014+ RAM DUAL STEERING STABILIZER KIT INSTALLATION

PLEASE READ AND UNDERSTAND THESE INSTRUCTIONS PRIOR TO INSTALLATION. INCORRECT INSTALLATION MAY RESULT IN DAMAGE TO PARTS.

PRO TIP:

-Having the truck aligned prior to installing this kit is advisable, it will make the alignment process a little easier.
-Take inventory of the kit contents BEFORE you begin installation. Contact us within 30 days of delivery if you are missing anything. (See diagram for list)

1. Find a clean and level surface, ensure the parking brake is engaged and/or chalk the rear tires.

2. From here you will begin with mounting the center bracket directly to the axle housing using the factory hardware in the factory location, tighten to 47 lb-ft.

3. With the center bracket in place, you will now mount the stabilizer wings to the tie rod ends. These will be mounted on the top side of the tie rod ends. You will use (x4) M12x1.75x70mm Flanged Bolts for this.

4. Mount the stabilizer bodies to the center bracket, the laser cut "K" will capture both the center bracket and the stabilizers. You will use the (x2) M12x1.75x80mm Flanged Bolts for this. If the truck is stock or leveled mount the stabilizers under the center bracket & wings. If the truck is lifted 4" or greater mount them on the top side. (Examples below)

5. Now attach the eyelet end of the stabilizers to the wings using (x2) M12x1.75x70mm Flanged Bolts. Ensure all fasteners are tightened and check clearances by cycling the steering.

6. With everything clearanced and tested, ensure all of the fasteners are torqued to spec. (Torque diagram on reverse side of this page.)

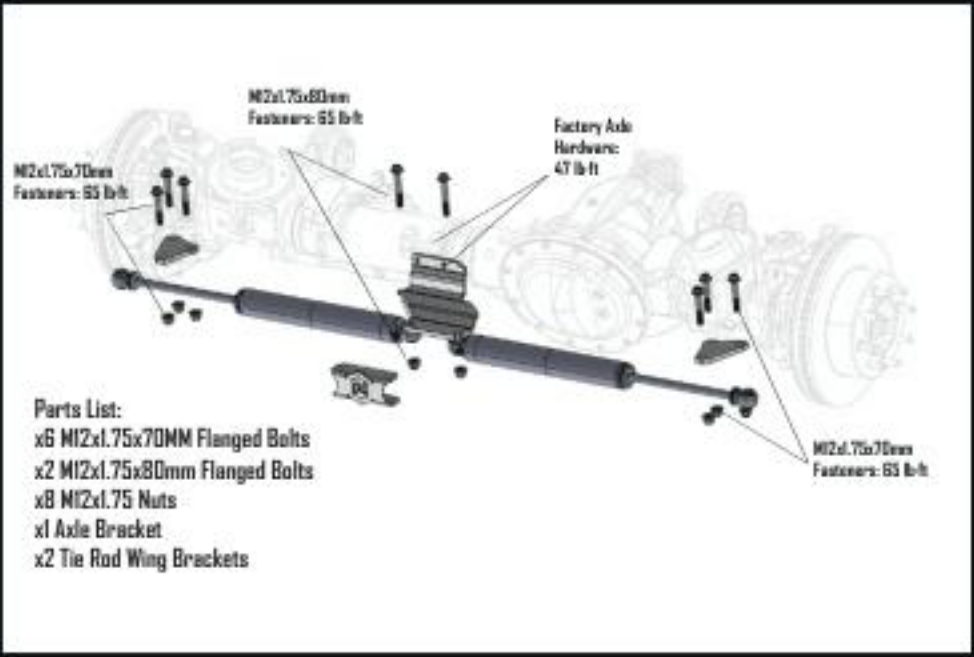

SAE/2492 WARNING: By installing this product, you acknowledge that the suspension of this vehicle has been modified. As a result, this vehicle may handle differently than factory-equipped vehicles. As with any vehicle, extreme care must be used to prevent loss of control or rollover during sharp turns or abrupt maneuvers. Always wear seat belts, and drive safely, recognizing that reduced speeds and specialized driving techniques may be required. Failure to drive this vehicle safely may result in serious injury or death. Do not drive this vehicle unless you are familiar with its unique handling characteristics and are confident of your ability to maintain control under all driving conditions. Some modifications (and combinations of modifications) are not recommended and may not be permitted in your state. Consult your owner's manual, the instructions accompanying this product, and state laws before undertaking these modifications. You are responsible for the legality and safety of the vehicle you modify using these components.

INSTALLATION ALIGNMENT NOTE: Your vehicle may require alignment after product installation. You may incur additional costs to align the vehicle.

INSTALLATION HEADLAMP AIM NOTE: In addition to your vehicle alignment, for your safety and others, it is necessary to check and adjust your vehicle headlamps for proper aim and alignment after product installation. You may incur additional costs to adjust the headlamp system.

INSTALLATION ADVANCED DRIVER ASSISTANCE SYSTEMS (ADAS) NOTE: If your vehicle is equipped with active or passive safety/collision monitoring and/or assistance/avoidance systems including, but not limited to, camera- or radar/sonar-based systems, check and adjust your vehicle's systems for proper aim and function after product installation. In some instances, your vehicle may require OEM dealer service tools and factory-trained technicians to re-calibrate ADAS. You may incur additional costs to adjust ADAS systems.

KRYPTONITEPRODUCTS.com
FOLLOW US
@kryptoniteproducts