



INSTALLATION INSTRUCTIONS

1075 North Ave. Sanger, CA 93657-3539 local: 559-875-8883 fax: 559-875-9883 toll free: 800-595-7016

50085 FRONT ANTI-SWAYBAR '89-'94 NISSAN 240SX

Congratulations! You were selective enough to choose a SUSPENSION TECHNIQUES PRODUCT. We have spent many hours developing our line of products so that you will receive maximum performance with minimum difficulty during installation.

- Note: Confirm that all of the hardware listed in the parts list is in the kit. Do not begin installation if any part is missing. Read the instructions thoroughly before beginning this installation.
- Warning: Do not work under a vehicle supported by only a jack. Place support stands securely under the vehicle in the manufacturer's specified locations unless otherwise instructed.
- Warning: Do not drive vehicle until all work has been completed and checked. Torque all hardware to values specified.
- Reminder: Proper use of safety equipment and eye/face/hand protection is absolutely necessary when using these tools to perform procedures!
- Note: It is very helpful to have an assistant available during installation.

RECOMMENDED TOOLS:

- Properly rated floor jack, support stands, and wheel chocks
- Combination wrench:
- Ratcheting socket wrench and sockets:
- Safety Glasses

KIT INSTALLATION

1. Open the hardware kit and remove all of the contents. Refer to the part list (Page 2) to verify that all parts are present.
2. Park the vehicle on a smooth, level concrete or seasoned asphalt surface and activate the parking brake. Block the REAR wheels of the vehicle with appropriate wheel chocks; making sure the vehicle's transmission is in 1st gear (manual) or "Park" (automatic).
3. Using a properly rated floor jack, lift the front wheels of the vehicle off the ground. Place support stands, rated for the vehicle's weight, and in the factory specified locations. Refer to the vehicle Owner's Manual. Prior to lowering the vehicle onto the stands, make sure the supports will securely contact the chassis.
4. It is very important that the vehicle is properly supported during this installation to prevent personal injury and chassis damage! Make sure that the supports stands are properly placed prior to performing the following procedures. We DO NOT recommend using wheel ramps while performing this installation.
5. Slowly lower the vehicle onto the stands and, before placing the vehicle's entire weight on them, again check that they properly and securely contact the chassis as described above. Check for possible interference with any lines, wires, cables, or other easily damaged components.
6. Remove the end links from the ends of the original equipment anti-sway bar and the control arm. Remove the bushing brackets as well. Note the position of the anti-sway bar in the vehicle to ease in

the installation of your new Suspension Techniques anti-sway bar. Remove the original equipment anti-sway bar from the vehicle.

7. Thoroughly lubricate the inside of your new hyperthane bushings using a high-grade lithium or silicone-based grease with molybdenum disulfide (moly). Place the bushings on the new anti-sway bar. Refer to the original equipment anti-sway bar as to the proper bushing location.
8. Position your new Suspension Techniques anti-sway bar on the vehicle in the original equipment location. Secure it with the new bushing brackets, bolts and flat washers provided in the kit along with the original equipment nuts. Tighten the nuts and bolts to approximately 18 ft/lbs of torque.
9. NOTE: Due to an uneven mounting surface, you must place two flat washers, on top of each other, between the bushing bracket and the mounting surface on the rear hole of the bracket. This will eliminate excessive pressure on the bushing and premature bushing failure. Do this to both brackets.
10. Assemble the end links as shown in the diagram. Tighten the assembly until the grommets begin to bulge, but do not crush them.
11. Replace the splash pan and install the wheels.
12. Check that all components and fasteners have been properly installed, tightened and torqued.
13. Check brake hoses, steering and other components for any possible interference.
14. Lift vehicle and remove support stands. Carefully lower vehicle to ground.
15. Immediately test-drive the vehicle in a remote location so that you can become accustomed to the revised driving characteristics and handling. Be aware that the vehicle will handle substantially different now that it has been modified.
16. Installation is complete. Check all of the hardware and re-torque at intervals for the first 10, 100, 1000 miles.


PARTS LIST FOR 50085 ANTI-SWAY BAR KIT

PART No.	DESCRIPTION	QTY.
50085-300	FRONT ANTI-SWAYBAR	1
113170	PIVOT BUSHING	2
113000	ENDLINK GROMMET	8
114020	PIVOT BUSHING BRACKET	2
112444	1/2" SPACER TUBE	2
112518	3/8" USS FLAT WASHER	8
112502	CUP WASHER	8
110255	3/8" - 16 NYLOCK NUT	2
112122	3/8" - 16 x 4 1/2" HHCS	2
112018	10mm -1.25 x 30mm HHCS	2
55000-10	Grease Pack	1

! Installation Tips ST

- **Lubrication**

Pre-lubricating the inside of the bushing before its installed is important because the lubrication will greatly reduce noise and it will increase bushing life. Suspension Techniques recommends you use Molybdenum disulfide. This will help protect the inside surface of the bushing and will last longer than most types of grease. Thoroughly lubricate the inside of the bushing with this grease.

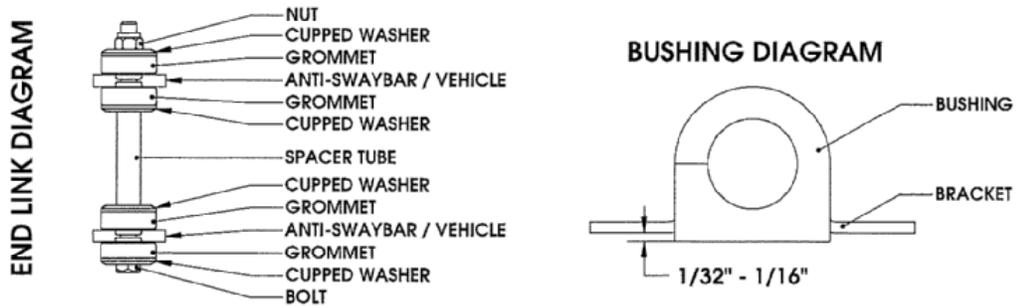

- **Bushing Installation**

Make sure an amount of 1/32" to 1/16" of the bushing is showing when you install it onto the bracket. See the diagram above. If the bushing is showing more than 1/16" than use a sander or a sheet of coarse grit sand paper to shave it down to the proper height. In most applications when installing the new bushings on your Suspension Techniques anti-sway bar you may refer to your original equipment anti-sway bar to locate the proper location.

- **End Link Installation**

It is not required that you use lubricant on the end links since there is no rotational movement. The Suspension Techniques end links are comprise of grommets, cupped washers, a spacer tube, bolt, and lock nut, these assembled components create the end link. See end link diagram.