



advanced FLOW engineering
Instruction Manual P/N: 77-47401


Make: **Polaris** Model: **RZR** Year: **2016-2019** Engine: 925cc (t)




- Please read the entire instruction manual before proceeding.
- Ensure all components listed are present.
- If you are missing any of the components, call customer support at 951-493-7100.
- Ensure you have all necessary tools before proceeding.
- Do not attempt to work on your vehicle when the engine is hot.
- Disconnect the negative battery terminal before proceeding.
- Retain factory parts for future use.

Label	Qty.	Description	Part Number
A	1	Module	R77-47401
B	2	Velcro (2 Inches)	05-01244
C	4	Cable Ties	05-60167

Note: Legal in California for use on race vehicles only. The use of this device on vehicles used on public streets or highways is strictly prohibited in California and others states that have adopted California emission regulations.

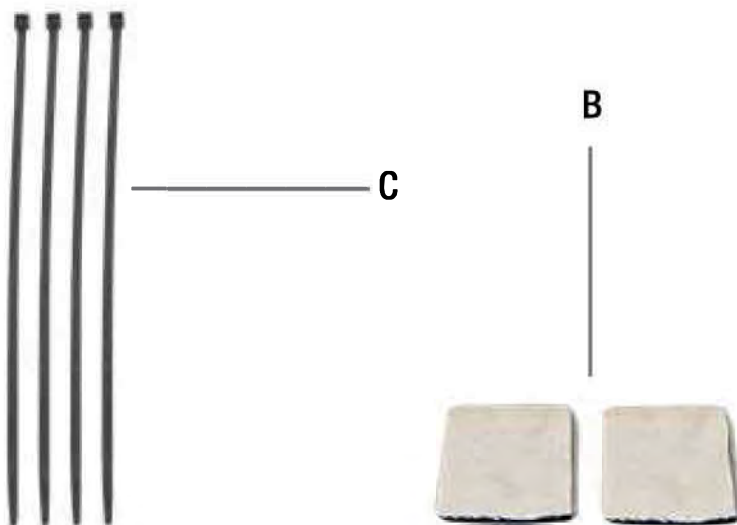

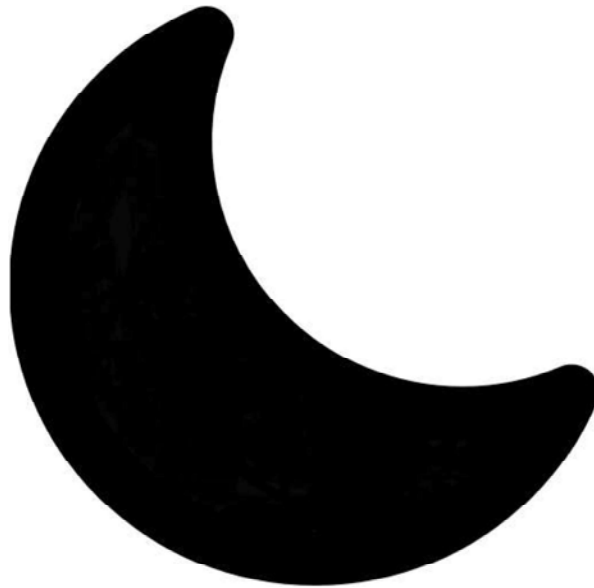

SLEEP MODE

Figure A

Refer to Figure A for Step 1.

Step 1: Before installing your aFe module, you will have to place your vehicles ECU in sleep mode. In order to place your vehicles ECU in sleep mode you will need to do the following:

- If the engine is cold, remove the key, and wait 30 seconds.
- If the engine is warm, remove the key, and wait 20 minutes.
- If the engine is warm and you can't wait 20 minutes, disconnect the battery.



Do NOT insert the key or start the vehicle when one of the sensors is disconnected. This could create a check engine light.



Refer to Figure B for Step 2.

Step 2: Remove plastic engine cover from storage compartment to gain access to MAP and TMAP sensors. MAP sensor is located on top of the intake manifold on top of the engine (located below engine cover.) TMAP sensor is located on the boost tube inside of the left rear wheel well.



Figure C


Refer to Figures C for Steps 3-4.

Step 3: Locate and disconnect the MAP sensor.

Step 4: Locate the MAP sensor jumper harness on the aFe module. This is the shorter part of the harness, each connector has 4 wires. Plug the female connector of the module into the stock MAP sensor, then take the male connector of the module and connect to the female connector of the engine harness.



Note: Make sure connections are fully engaged. Connectors typically make a snapping sound when fully engaged.

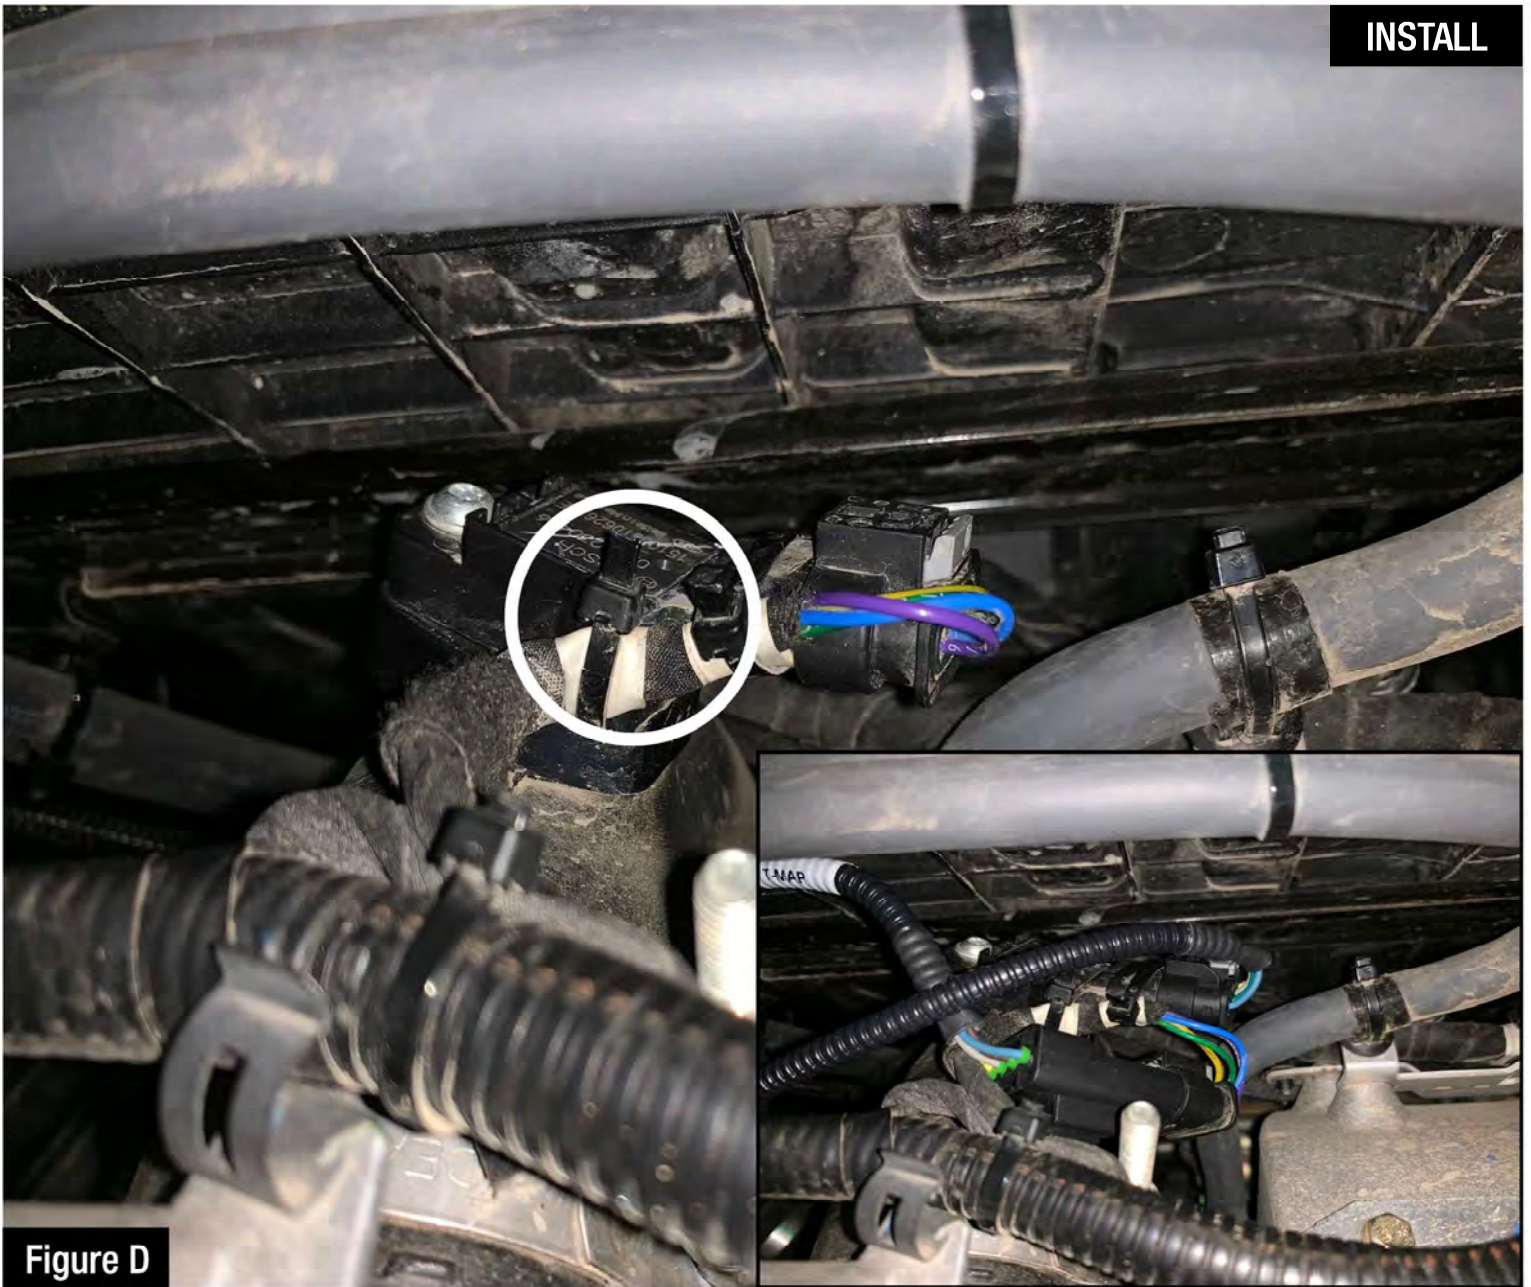

Refer to Figures D for Steps 5-6.

Step 5: Locate and disconnect the TMAP sensor.

Step 6: Locate the TMAP sensor jumper harness on the aFe module. This is the longer harness, each connector has 4 wires. Plug the female connector of the module to the stock TMAP sensor then plug the male connector of the module into the female connector of the engine harness.



Figure E

Refer to Figure E for Step 7.

Step 7: Route the module into the cab.

Note: There is a panel behind the driver's seat that we have found to be the easiest method to route the module, but ultimately it is the customer's preference.

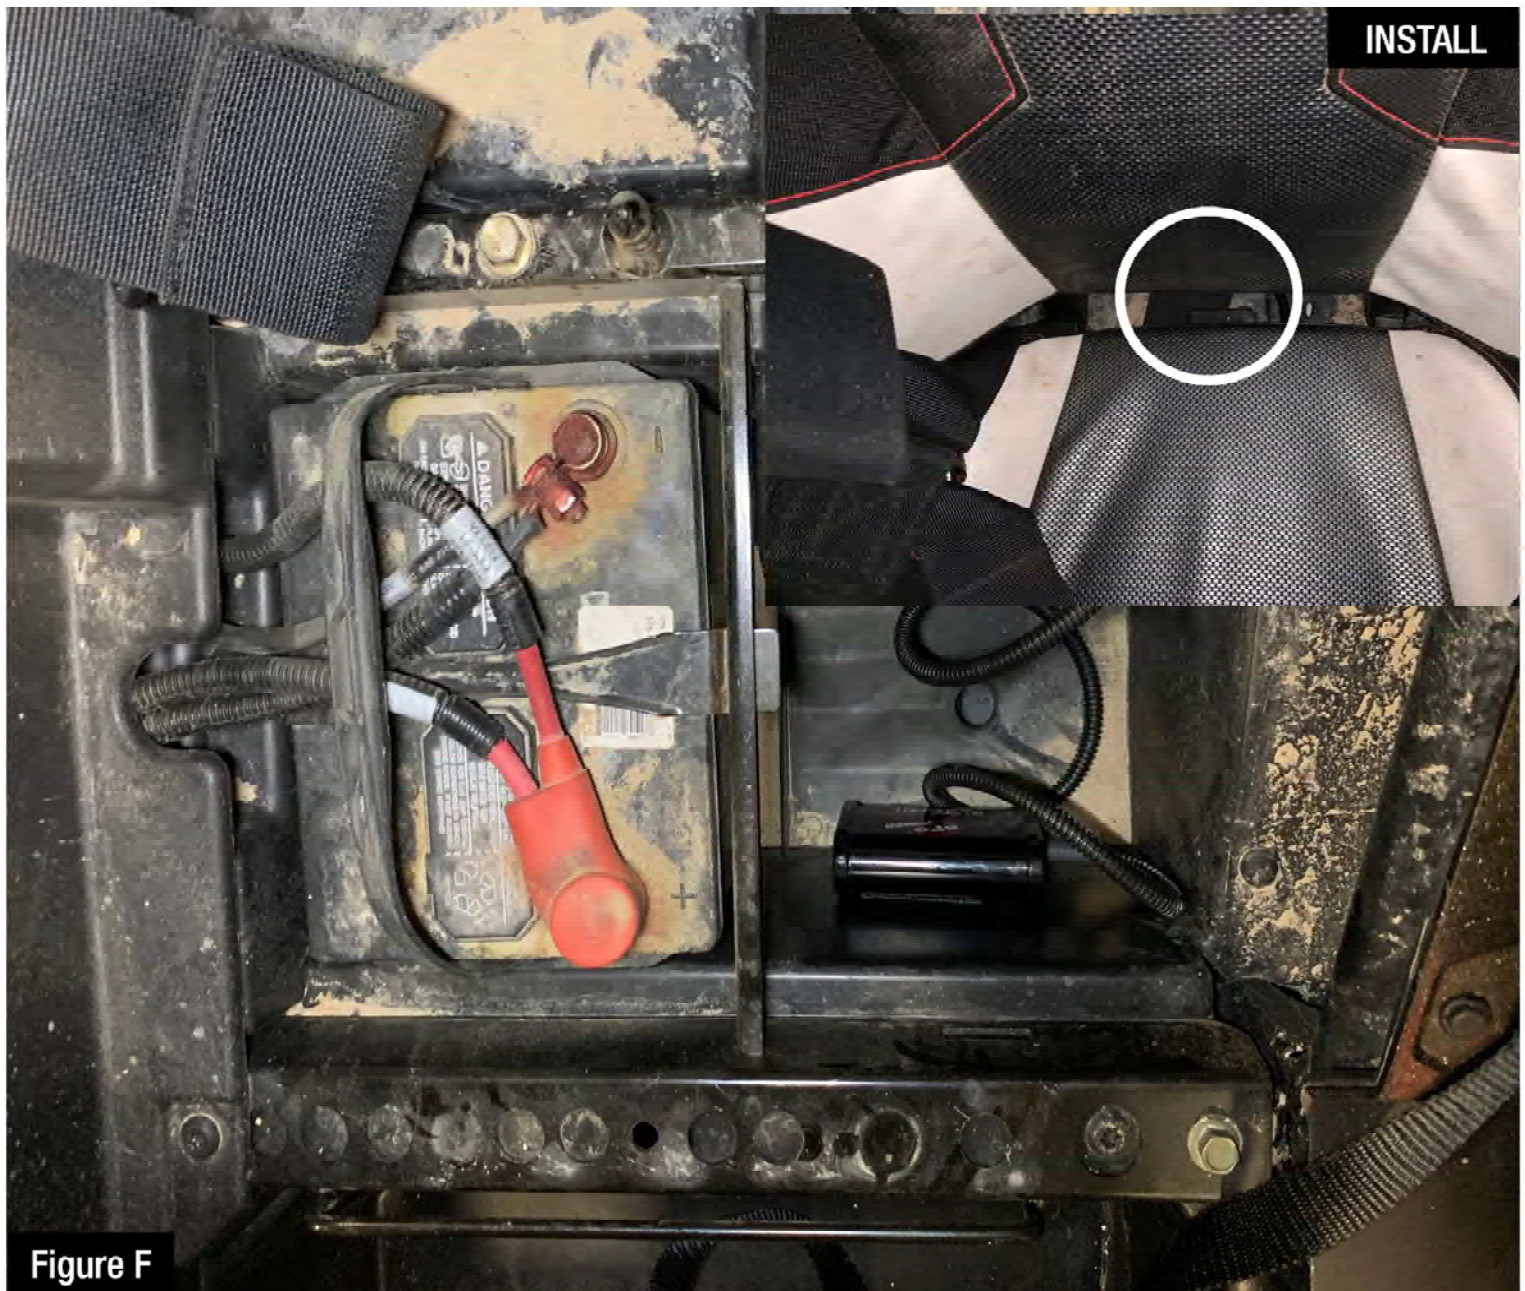


Figure F

Refer to Figure F for Step 8.

Step 8: Mount the module in a safe location, using the supplied Velcro strip. Then, secure the wires and module away from any extreme heat and moving parts, with the provided ties. Make sure all connections are secured and fully engaged.



Air Intake Filter



P/N: 87-10068

Air Filter Restore Kit



P/N: 90-50000

aFe POWER T-Shirt



**P/N: 40-30441-B (S)
40-30442-B (M)
40- 30443-B (L)
40-30444-B (XL)
40-30445-B (2XL)**

To purchase any of the items above, view airflow charts, dyno graphs, photos, and video please go to aFepower.com.

Warranty

General Terms:

- aFe warrants their products to be free from manufacturer's defects due to workmanship and material.
- This warranty applies only to the original purchaser of the product and is non-transferrable.
- Proof of purchase of the aFe product is required for all warranty claims.
- Warranty is valid provided aFe instructions for installation and/or cleaning were properly followed.
- Proper maintenance with regular inspections of product is required to insure warranty coverage.
- Damage due to improper installation, abuse, unauthorized repair or alteration is not warranted.
- Incidental or consequential damages or cost, including installation and removal of part, incurred due to failure of aFe product is not covered under this warranty.
- All warranty is limited to the repair and/or replacement of the aFe part. To request Return Goods Authorization ("RGA"), email RGA@afepower.com or call (951)493-7100. Upon receipt of the RGA, you must return the product to the address provided in the RGA, freight prepaid and accompanied with a dated proof of purchase and the RGA. Upon receipt of the defective product and upon verification of proof of purchase, aFe will either repair or replace the defective product within a reasonable time, not to exceed thirty days.

Product Category	P/N Prefix	Warranty duration
Direct OE Replacement Filters	10, 11, 30, 31, 71, 73	Life of the vehicle
Racing Filters	18	1 year
Universal	21, 24, 72, TF	2 years
Air Intake Systems	50, 51, 54, 55, 75, TR, TA, TL	2 years
Exhaust Systems	49	2 years
Intercoolers & Intercooler Tubes	46-2	2 years
Intake Manifolds	46-1	2 years
Differential Cover	46-7	Life of the vehicle
Exhaust Manifolds	46	2 years
Throttle Body Spacers	46-3	2 years
Fluid Filters	44	90 days
Pre-Filters	28	2 years
Heavy Duty OE Replacement	70	2 years
PowerSports OE Replacement	81, 87	2 years
PowerSports Intake Systems	85	2 years
Tuners	77	1 year

No other warranty expressed or implied applies nor is any person or advanced FLOW engineering authorized to assume any other warranty. Some States do not allow the exclusion or limitation of incidental or consequential damages or do not allow limitations on how long an implied warranty lasts, so the above limitations or exclusions may not apply to you. This warranty gives you specific legal rights, and you may also have other rights which vary from State to State.



advanced FLOW engineering. inc.
252 Granite Street Corona, CA 92879
TEL: 951.493.7100 TECH: 812.518.1220
E-Mail: Tech@aFepower.com